
Python productivity for Zynq (Pynq) Documentation

Release 2.0

Xilinx

Feb 21, 2018

Contents

1	Project Goals	3
2	Summary	5
2.1	Getting Started	5
2.2	Jupyter Notebooks	13
2.3	Python Environment	24
2.4	PYNQ Overlays	29
2.5	PYNQ Libraries	41
2.6	Overlay Design Methodology	68
2.7	PYNQ SD Card	112
2.8	pynq Package	114
2.9	Verification	201
2.10	Frequently Asked Questions (FAQs)	205
2.11	Glossary	209
2.12	Useful Links	211
2.13	Appendix	212
2.14	Change Log	217
	Python Module Index	221

Xilinx® makes Zynq® devices, a class of All Programmable Systems on Chip (APSoC) which integrates a multi-core processor (Dual-core ARM® Cortex®-A9) and a Field Programmable Gate Array (FPGA) into a single integrated circuit. FPGA, or programmable logic, and microprocessors are complementary technologies for embedded systems. Each meets distinct requirements for embedded systems that the other cannot perform as well.

Project Goals

The main goal of **PYNQ**, **Python** Productivity for **Zynq**, is to make it easier for designers of embedded systems to exploit the unique benefits of APSoCs in their applications. Specifically, PYNQ enables architects, engineers and programmers who design embedded systems to use Zynq APSoCs, without having to use ASIC-style design tools to design programmable logic circuits.

PYNQ achieves this goal in three ways:

- Programmable logic circuits are presented as hardware libraries called *overlays*. These overlays are analogous to software libraries. A software engineer can select the overlay that best matches their application. The overlay can be accessed through an application programming interface (API). Creating a new overlay still requires engineers with expertise in designing programmable logic circuits. The key difference however, is the *build once, re-use many times* paradigm. Overlays, like software libraries, are designed to be configurable and re-used as often as possible in many different applications.

Note: This is a familiar approach that borrows from best-practice in the software community. Every day, the Linux kernel is used by hundreds of thousands of embedded designers. The kernel is developed and maintained by fewer than one thousand, high-skilled, software architects and engineers. The extensive re-use of the work of a relatively small number of very talented engineers enables many more software engineers to work at higher levels of abstraction. Hardware libraries or *overlays* are inspired by the success of the Linux kernel model in abstracting so many of the details of low-level, hardware-dependent software.

- PYNQ uses Python for programming both the embedded processors and the overlays. Python is a “productivity-level” language. To date, C or C++ are the most common, embedded programming languages. In contrast, Python raises the level of programming abstraction and programmer productivity. These are not mutually-exclusive choices, however. PYNQ uses CPython which is written in C, and integrates thousands of C libraries and can be extended with optimized code written in C. Wherever practical, the more productive Python environment should be used, and whenever efficiency dictates, lower-level C code can be used.
- PYNQ is an open-source project that aims to work on any computing platform and operating system. This goal is achieved by adopting a web-based architecture, which is also browser agnostic. We incorporate the open-source Jupyter notebook infrastructure to run an Interactive Python (IPython) kernel and a web server directly on the ARM Cortex A9 of the Zynq device. The web server brokers access to the kernel via a suite of browser-

based tools that provide a dashboard, bash terminal, code editors and Jupyter notebooks. The browser tools are implemented with a combination of JavaScript, HTML and CSS and run on any modern browser.

PYNQ is the first project to combine the following elements to simplify and improve APSoC design:

1. A high-level productivity language (Python in this case)
2. FPGA overlays with extensive APIs exposed as Python libraries
3. A web-based architecture served from the embedded processors, and
4. The Jupyter Notebook framework deployed in an embedded context

2.1 Getting Started

This guide will show you how to setup your computer and PYNQ-Z1 board to get started using PYNQ. Any issues can be posted to [the PYNQ support forum](#).

2.1.1 PYNQ-Z1 Setup Guide

Prerequisites

- PYNQ-Z1 board
- Computer with compatible browser ([Supported Browsers](#))
- Ethernet cable
- Micro USB cable
- Micro-SD card with preloaded image, or blank card (Minimum 8GB recommended)

Getting Started Video

You can watch the getting started video guide, or follow the instructions in [Board Setup](#).

MicroSD Card Setup


Preloaded Micro SD cards are available from Digilent. If you already have a Micro SD card preloaded with the PYNQ-Z1 image, you can skip this step.

To make your own PYNQ Micro-SD card:

1. [Download the PYNQ-Z1 image](#)
2. Unzip the image
3. Write the image to a blank Micro SD card (minimum 8GB recommended)

For detailed instructions on writing the SD card using different operating systems, see [Writing the SD Card Image](#).

Board Setup

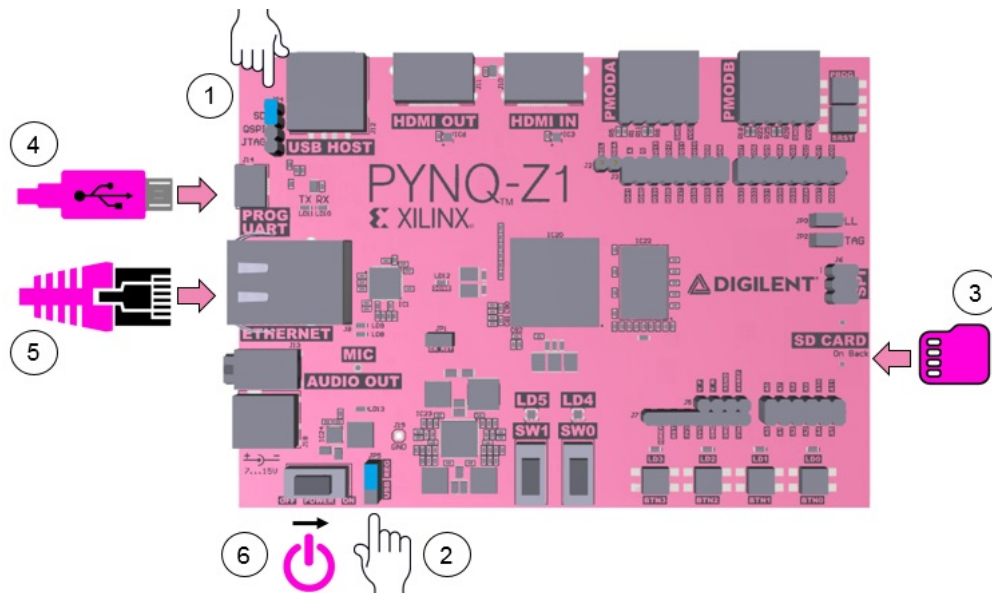

1. Set the **JP4 / Boot** jumper to the **SD** position by placing the jumper over the top two pins of JP4 as shown in the image. (This sets the board to boot from the Micro-SD card)
2. To power the PYNQ-Z1 from the micro USB cable, set the **JP5 / Power** jumper to the **USB** position by placing the jumper over the top two pins as shown in the image. (You can also power the board from an external 12V power regulator by setting the jumper to **REG**.)
3. Insert the Micro SD card loaded with the PYNQ-Z1 image into the **Micro SD** card slot underneath the board.
4. Connect the USB cable to your PC/Laptop, and to the **PROG - UART / J14** MicroUSB port on the board
5. Connect the board to Ethernet by following the instructions in [Ethernet Setup](#)
6. Turn on the PYNQ-Z1 by following the instructions in [Turning On the PYNQ-Z1](#)

Ethernet Setup

You can connect the Ethernet port of the PYNQ-Z1 Ethernet in the following ways:

- *Connect to a Network Router*
- *Connect to a Computer*

If available, you should connect your board to a network or router with Ethernet access. This will allow you to update your board and install new packages.

Connect to a Network Router

If you connect to a router, or a network with a DHCP server, your board will automatically get an IP address. You must make sure you have permission to connect a device to your network, otherwise the board may not connect properly.

Connect to a Router/Network (DHCP):

1. Connect PYNQ-Z1 to Ethernet port on router/switch
2. Connect your computer to Ethernet or WiFi on router/switch
3. Browse to <http://pynq:9090>
4. Optional: *Change the Hostname*
5. Optional: *Configure Proxy Settings*

Connect to a Computer

You will need to have an Ethernet port available on your computer, and you will need to have permissions to configure your network interface. With a direct connection, you will be able to use PYNQ, but unless you can bridge the Ethernet connection to the board to an Internet connection on your computer, your board will not have Internet access. You will be unable to update or load new packages without Internet access.

Connect directly to a computer (Static IP):

1. *Assign your computer a static IP address*
2. Connect the PYNQ-Z1 to your computer's ethernet port
3. Browse to <http://192.168.2.99:9090>

Turning On the PYNQ-Z1

As indicated in step 6 of *Board Setup*, slide the power switch to the *ON* position to turn on the board. The **Red LD13** LED will come on immediately to confirm that the board has power. After a few seconds, the **Yellow/Green LD12 / Done** LED will light up to show that the Zynq® device is operational.

After a minute you should see two **Blue LD4 & LD5** LEDs and four **Yellow/Green LD0-LD3** LEDs flash simultaneously. The **Blue LD4-LD5** LEDs will then turn on and off while the **Yellow/Green LD0-LD3** LEDs remain on. The system is now booted and ready for use.


2.1.2 Connecting to Jupyter Notebooks

To connect to Jupyter Notebooks open a web browser and navigate to:

- <http://pynq:9090> if your PYNQ-Z1 board is connected to a router or network
- <http://192.168.2.99:9090> If your PYNQ-Z1 board is connected to a computer

If your board is configured correctly you will be presented with a login screen. The username is **xilinx** and the password is also **xilinx**.

After logging in, you will receive the following screen:

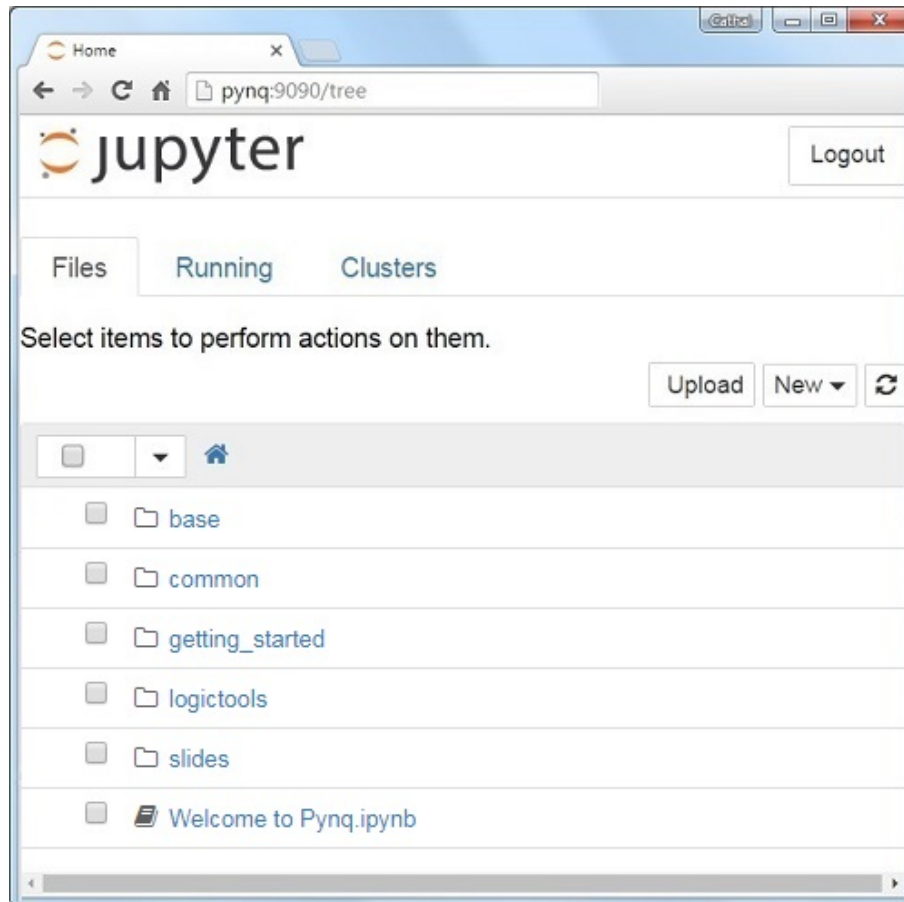


The default hostname is **pynq** and the default static IP address is **192.168.2.99**. If you changed the hostname or static IP of the board, you will need to change the address you browse to.

The first time you connect, it may take a few seconds for your computer to resolve the hostname/IP address.


Example Notebooks

PYNQ uses the Jupyter Notebook environment to provide examples and documentation. Using your browser you can view and run the notebook documentation interactively.

We have provided a few introductory notebooks in the `Getting_Started` folder of the Jupyter home area.

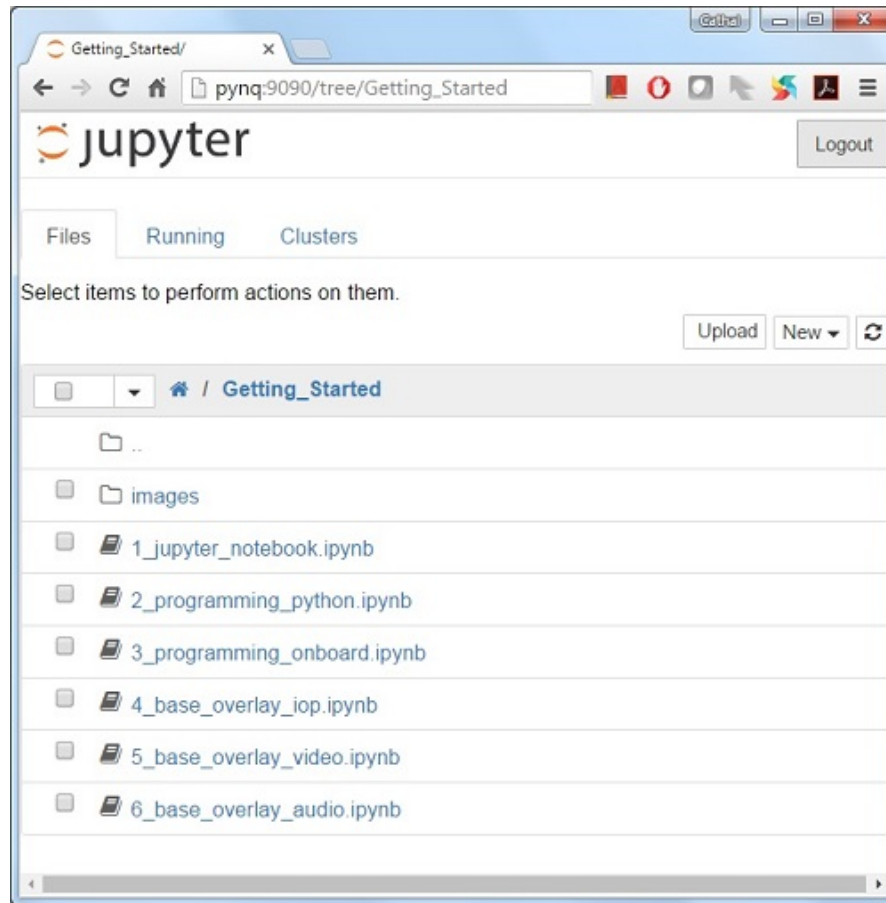

There are also a number of example notebooks available showing how to use various peripherals with the board.

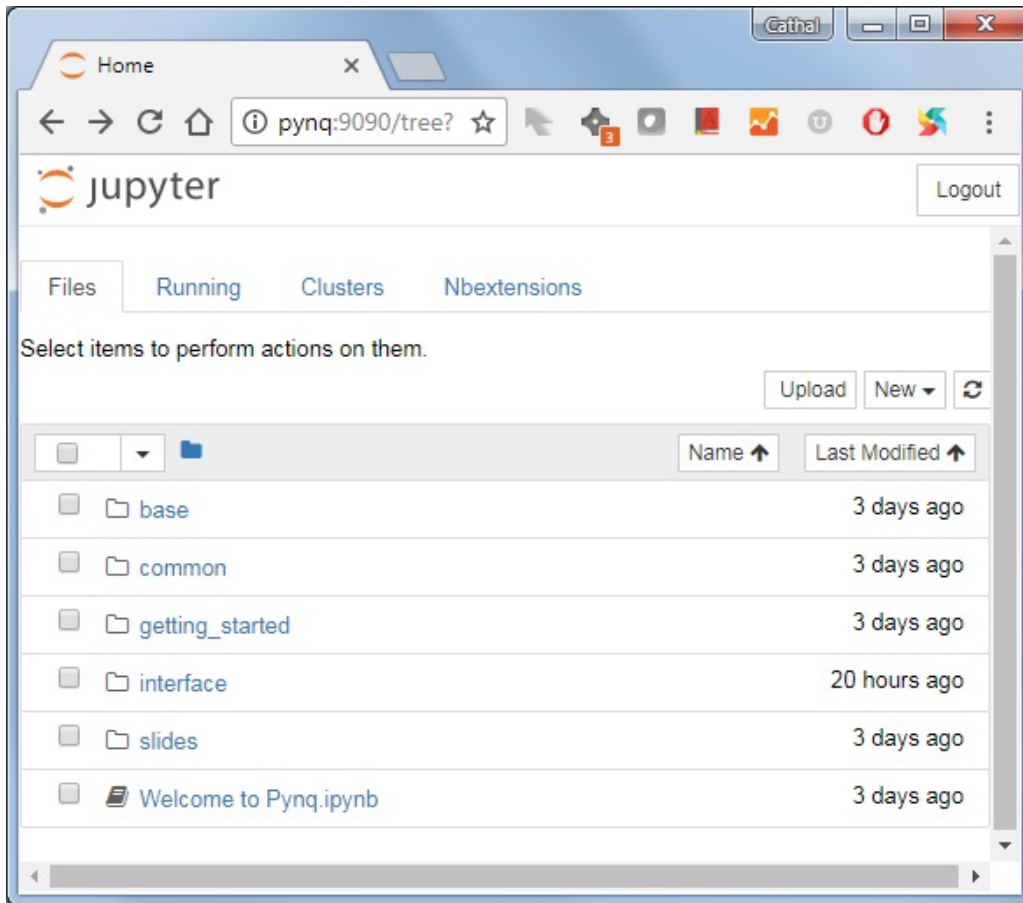

The example notebooks have been divided into categories

- common: examples that are not overlay specific
- base: related to the PYNQ-Z1 base overlay
- logictools: related to the PYNQ-Z1 logictools overlay

When you open a notebook and make any changes, or execute cells, the notebook document will be modified. It is recommended that you “Save a copy” when you open a new notebook. If you want to restore the original versions, you can download all the example notebooks from [GitHub](#).

Accessing Files on The Board


[Samba](#), a file sharing service, is running on the board. This allws you to access the Pynq home area as a network drive, to transfer files to and from the board.

Note: In the examples below change the hostname or IP address to match your board settings.

To access the Pynq home area in Windows Explorer type one of the following in the navigation bar.

```
\\pynq\xilinx          # If connected to a Network/Router with DHCP
\\192.168.2.99\xilinx  # If connected to a Computer with a Static IP
```

When prompted, the username is **xilinx** and the password is **xilinx**. The following screen should appear:

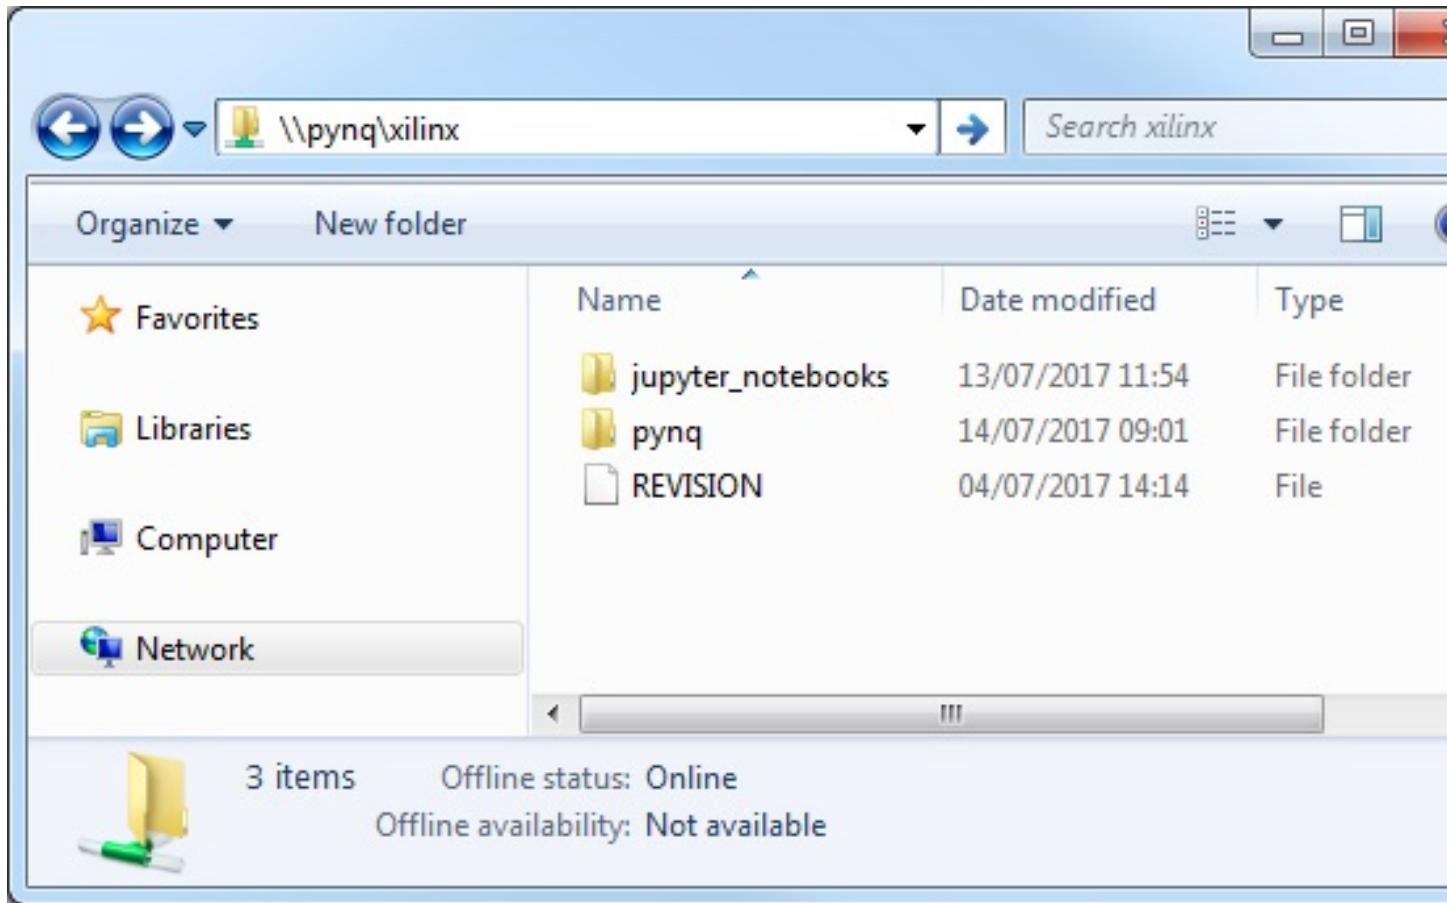

To access the home area in Ubuntu, open a file browser, click Go -> Enter Location and type one of the following in the box:

```
smb://pynq/xilinx          # If connected to a Network/Router with DHCP
smb://192.168.2.99/xilinx  # If connected to a Computer with a Static IP
```


When prompted, the username is **xilinx** and the password is **xilinx**

2.1.3 Configuring PYNQ

Change the Hostname

If you are on a network where other pynq boards may be connected, you should change your hostname immediately. This is a common requirement in a work or university environment. You can change the hostname from a terminal. You can use the USB cable to connect a terminal. A terminal is also available in the Jupyter environment and can be used from an internet browser.

To access the Jupyter terminal, in the Jupyter portal home area, select **New >> Terminal**.

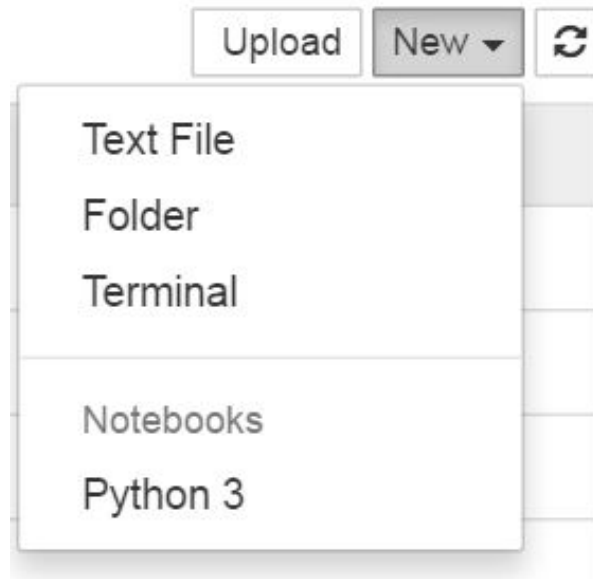

This will open a terminal inside the browser as root.

Use the preloaded `pynq_hostname.sh` script to change your board's hostname.

```
pynq_hostname.sh <NEW HOSTNAME>
```

The board must be restarted for the changes to be applied.

```
shutdown -r now
```

Note that as you are logged in as root, `sudo` is not required. If you connect a terminal from the USB connection, you will be logged in as the *xilinx* user and `sudo` must be added to these commands.

When the board reboots, reconnect using the new hostname.

If you can't connect to your board, see the step below to open a terminal using the micro USB cable.

Opening a USB Serial Terminal

If you can't access the terminal from Jupyter, you can connect the micro-USB cable from your computer to the board and open a terminal. You can use the terminal to check the network connection of the board. You will need to have terminal emulator software installed on your computer. [PuTTY](#) is one application that can be used, and is available for free on Windows. To open a terminal, you will need to know the COM port for the board.

On Windows, you can find this in the Windows *Device Manager* in the control panel.

1. Open the Device Manager, expand the *Ports* menu
2. Find the COM port for the *USB Serial Port*. e.g. COM5
3. Open PuTTY

Once PuTTY is open, enter the following settings:

4. Select serial
5. Enter the COM port number
6. Enter the serial terminal settings (below)

7. Click *Open*

Full terminal Settings:

- 115200 baud
- 8 data bits
- 1 stop bit
- No Parity
- No Flow Control

Hit *Enter* in the terminal window to make sure you can see the command prompt:

```
xilinnx@pynq:/home/xilinx#
```

You can then run the same commands listed above to change the hostname, or configure a proxy.

You can also check the hostname of the board by running the *hostname* command:

```
hostname
```

You can also check the IP address of the board using *ifconfig*:

```
ifconfig
```

Configure Proxy Settings

If your board is connected to a network that uses a proxy, you need to set the proxy variables on the board. Open a terminal as above and enter the following where you should replace “my_http_proxy:8080” and “my_https_proxy:8080” with your settings.

```
set http_proxy=my_http_proxy:8080
set https_proxy=my_https_proxy:8080
```

2.1.4 Troubleshooting

If you are having problems, please see the Troubleshooting section in [Frequently Asked Questions \(FAQs\)](#) or go the [PYNQ support forum](#)

2.2 Jupyter Notebooks

2.2.1 Acknowledgements

The material in this tutorial is specific to PYNQ. Wherever possible, however, it re-uses generic documentation describing Jupyter notebooks. In particular, we have re-used content from the following example notebooks:

1. What is the Jupyter Notebook?
2. Notebook Basics
3. Running Code
4. Markdown Cells

The original notebooks and further example notebooks are available at [Jupyter documentation](#).

2.2.2 Introduction

If you are reading this documentation from the webpage, you should note that the webpage is a static html version of the notebook from which it was generated. If the PYNQ platform is available, you can open this notebook from the `getting_started` folder in the PYNQ Jupyter landing page.

The Jupyter Notebook is an **interactive computing environment** that enables users to author notebook documents that include:

- Live code
- Interactive widgets
- Plots
- Narrative text
- Equations
- Images
- Video

These documents provide a **complete and self-contained record of a computation** that can be converted to various formats and shared with others electronically, using version control systems (like [git/GitHub](#)) or [nbviewer.jupyter.org](#).

Components

The Jupyter Notebook combines three components:

- **The notebook web application:** An interactive web application for writing and running code interactively and authoring notebook documents.
- **Kernels:** Separate processes started by the notebook web application that runs users' code in a given language and returns output back to the notebook web application. The kernel also handles things like computations for interactive widgets, tab completion and introspection.
- **Notebook documents:** Self-contained documents that contain a representation of all content in the notebook web application, including inputs and outputs of the computations, narrative text, equations, images, and rich media representations of objects. Each notebook document has its own kernel.

Notebook web application

The notebook web application enables users to:

- **Edit code in the browser**, with automatic syntax highlighting, indentation, and tab completion/introspection.
- **Run code from the browser**, with the results of computations attached to the code which generated them.
- See the results of computations with **rich media representations**, such as HTML, LaTeX, PNG, SVG, PDF, etc.
- Create and use **interactive JavaScript widgets**, which bind interactive user interface controls and visualizations to reactive kernel side computations.
- Author **narrative text** using the [Markdown](#) markup language.
- Build **hierarchical documents** that are organized into sections with different levels of headings.
- Include mathematical equations using **LaTeX syntax in Markdown**, which are rendered in-browser by [Math-Jax](#).

Kernels

The Notebook supports a range of different programming languages. For each notebook that a user opens, the web application starts a kernel that runs the code for that notebook. Each kernel is capable of running code in a single programming language. There are kernels available in the following languages:

- Python <https://github.com/ipython/ipython>
- Julia <https://github.com/JuliaLang/IJulia.jl>
- R <https://github.com/takluyver/IRkernel>
- Ruby <https://github.com/minrk/iruby>
- Haskell <https://github.com/gibiansky/IHaskell>
- Scala <https://github.com/Bridgewater/scala-notebook>
- node.js <https://gist.github.com/Carreau/4279371>
- Go <https://github.com/takluyver/igo>

PYNQ is written in Python, which is the default kernel for Jupyter Notebook, and the only kernel installed for Jupyter Notebook in the PYNQ distribution.

Kernels communicate with the notebook web application and web browser using a JSON over ZeroMQ/WebSockets message protocol that is described [here](#). Most users don't need to know about these details, but its important to understand that kernels run on Zynq, while the web browser serves up an interface to that kernel.

2.2.3 Notebook Documents

Notebook documents contain the **inputs and outputs** of an interactive session as well as **narrative text** that accompanies the code but is not meant for execution. **Rich output** generated by running code, including HTML, images, video, and plots, is embedded in the notebook, which makes it a complete and self-contained record of a computation.

When you run the notebook web application on your computer, notebook documents are just **files** on your local filesystem with a **.ipynb** extension. This allows you to use familiar workflows for organizing your notebooks into folders and sharing them with others.

Notebooks consist of a **linear sequence of cells**. There are four basic cell types:

- **Code cells:** Input and output of live code that is run in the kernel
- **Markdown cells:** Narrative text with embedded LaTeX equations
- **Heading cells:** Deprecated. Headings are supported in Markdown cells
- **Raw cells:** Unformatted text that is included, without modification, when notebooks are converted to different formats using nbconvert

Internally, notebook documents are **JSON** data with binary values **base64** encoded. This allows them to be **read and manipulated programmatically** by any programming language. Because JSON is a text format, notebook documents are version control friendly.

Notebooks can be exported to different static formats including HTML, reStructuredText, LaTeX, PDF, and slide shows ([reveal.js](#)) using Jupyter's `nbconvert` utility. Some of documentation for Pynq, including this page, was written in a Notebook and converted to html for hosting on the project's documentation website.


Furthermore, any notebook document available from a **public URL or on GitHub can be shared** via [nbviewer](#). This service loads the notebook document from the URL and renders it as a static web page. The resulting web page may thus be shared with others **without their needing to install the Jupyter Notebook**.

GitHub also renders notebooks, so any Notebook added to GitHub can be viewed as intended.

2.2.4 Notebook Basics


The Notebook dashboard

The Notebook server runs on the ARM® processor of the PYNQ-Z1. You can open the notebook dashboard by navigating to `pynq:9090` when your board is connected to the network. The dashboard serves as a home page for notebooks. Its main purpose is to display the notebooks and files in the current directory. For example, here is a screenshot of the dashboard page for an example directory:

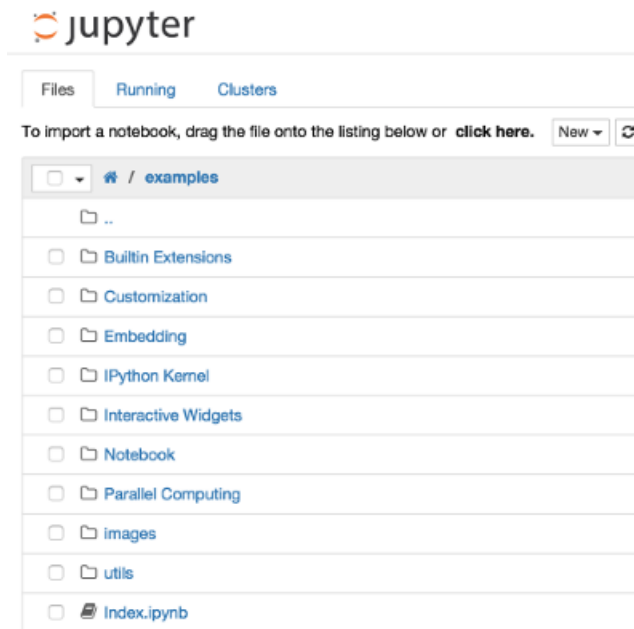


The top of the notebook list displays clickable breadcrumbs of the current directory. By clicking on these breadcrumbs or on sub-directories in the notebook list, you can navigate your filesystem.

To create a new notebook, click on the “New” button at the top of the list and select a kernel from the dropdown (as seen below).

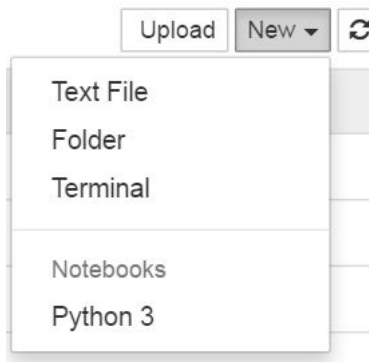

Notebooks and files can be uploaded to the current directory by dragging a notebook file onto the notebook list or by the “click here” text above the list.

The notebook list shows green “Running” text and a green notebook icon next to running notebooks (as seen below). Notebooks remain running until you explicitly shut them down; closing the notebook’s page is not sufficient.

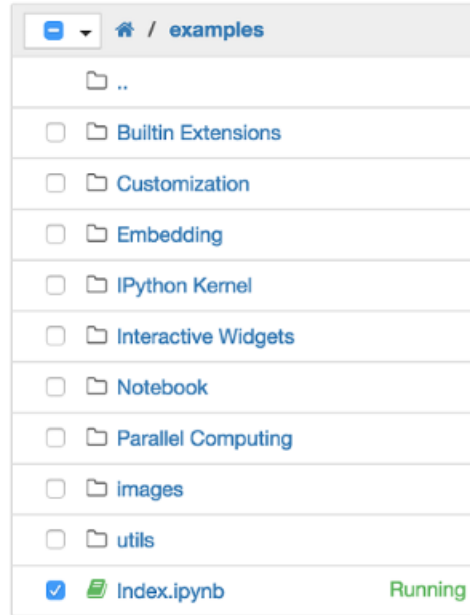

To shutdown, delete, duplicate, or rename a notebook check the checkbox next to it and an array of controls will appear at the top of the notebook list (as seen below). You can also use the same operations on directories and files when applicable.



To see all of your running notebooks along with their directories, click on the “Running” tab:

This view provides a convenient way to track notebooks that you start as you navigate the file system in a long running notebook server.

2.2.5 Overview of the Notebook UI

If you create a new notebook or open an existing one, you will be taken to the notebook user interface (UI). This UI allows you to run code and author notebook documents interactively. The notebook UI has the following main areas:

- Menu
- Toolbar
- Notebook area and cells


The notebook has an interactive tour of these elements that can be started in the “Help:User Interface Tour” menu item.

Modal editor

The Jupyter Notebook has a modal user interface which means that the keyboard does different things depending on which mode the Notebook is in. There are two modes: edit mode and command mode.

Edit mode

Edit mode is indicated by a green cell border and a prompt showing in the editor area:

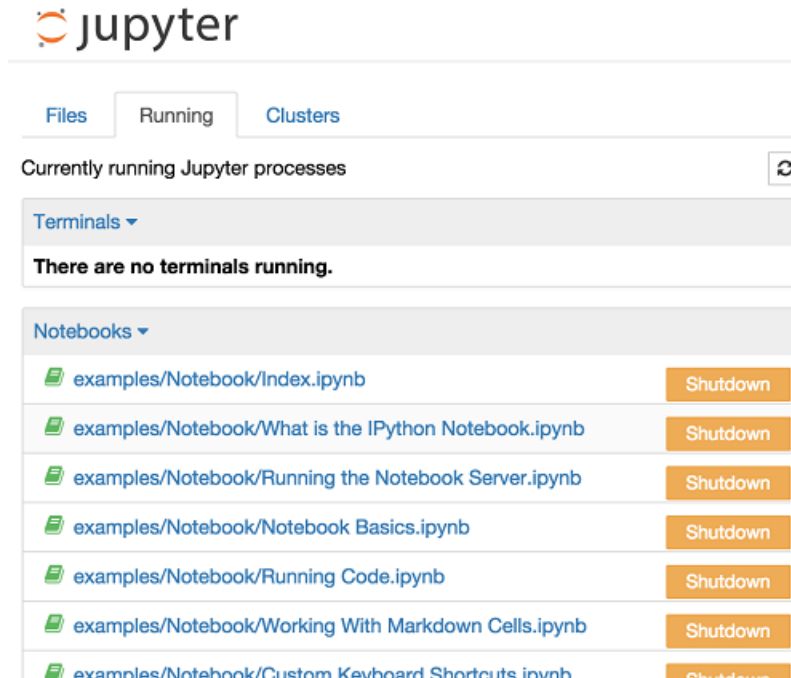


When a cell is in edit mode, you can type into the cell, like a normal text editor.

Enter edit mode by pressing `Enter` or using the mouse to click on a cell's editor area.

Command mode

Command mode is indicated by a grey cell border with a blue left margin:



When you are in command mode, you are able to edit the notebook as a whole, but not type into individual cells. Most importantly, in command mode, the keyboard is mapped to a set of shortcuts that let you perform notebook and cell actions efficiently. For example, if you are in command mode and you press `c`, you will copy the current cell - no modifier is needed.


Don't try to type into a cell in command mode; unexpected things will happen!

Enter command mode by pressing `Esc` or using the mouse to click *outside* a cell's editor area.

Mouse navigation

All navigation and actions in the Notebook are available using the mouse through the menubar and toolbar, both of which are above the main Notebook area:

Cells can be selected by clicking on them with the mouse. The currently selected cell gets a grey or green border depending on whether the notebook is in edit or command mode. If you click inside a cell's editor area, you will enter edit mode. If you click on the prompt or output area of a cell you will enter command mode.

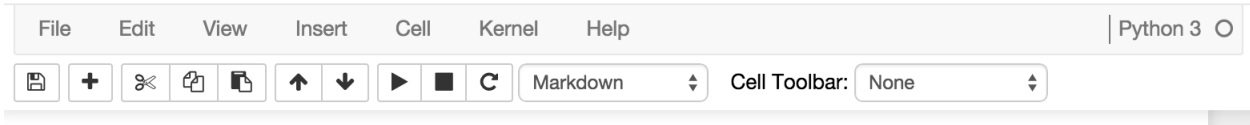

If you are running this notebook in a live session on the PYNQ-Z1, try selecting different cells and going between edit and command mode. Try typing into a cell.

If you want to run the code in a cell, you would select it and click the `play` button in the toolbar, the “Cell:Run” menu item, or type `Ctrl + Enter`. Similarly, to copy a cell you would select it and click the `copy` button in the toolbar or the “Edit:Copy” menu item. `Ctrl + C`, `V` are also supported.

Markdown and heading cells have one other state that can be modified with the mouse. These cells can either be rendered or unrendered. When they are rendered, you will see a nice formatted representation of the cell’s contents. When they are unrendered, you will see the raw text source of the cell. To render the selected cell with the mouse, and execute it. (Click the `play` button in the toolbar or the “Cell:Run” menu item, or type `Ctrl + Enter`. To unrender the selected cell, double click on the cell.

Keyboard Navigation

There are two different sets of keyboard shortcuts: one set that is active in edit mode and another in command mode.

The most important keyboard shortcuts are `Enter`, which enters edit mode, and `Esc`, which enters command mode.

In edit mode, most of the keyboard is dedicated to typing into the cell’s editor. Thus, in edit mode there are relatively few shortcuts. In command mode, the entire keyboard is available for shortcuts, so there are many more. The `Help->“Keyboard Shortcuts”` dialog lists the available shortcuts.

Some of the most useful shortcuts are:

1. Basic navigation: `enter`, `shift-enter`, `up/k`, `down/j`
2. Saving the notebook: `s`
3. Change Cell types: `y`, `m`, `1-6`, `t`
4. Cell creation: `a`, `b`
5. Cell editing: `x`, `c`, `v`, `d`, `z`
6. Kernel operations: `i`, `0` (press twice)

2.2.6 Running Code

First and foremost, the Jupyter Notebook is an interactive environment for writing and running code. The notebook is capable of running code in a wide range of languages. However, each notebook is associated with a single kernel. Pynq, and this notebook is associated with the IPython kernel, which runs Python code.

Code cells allow you to enter and run code

Run a code cell using `Shift-Enter` or pressing the `play` button in the toolbar above. The button displays *run cell*, *select below* when you hover over it.

```
In [1]: a = 10
In [ ]: print(a)
```

There are two other keyboard shortcuts for running code:

- `Alt-Enter` runs the current cell and inserts a new one below.
- `Ctrl-Enter` run the current cell and enters command mode.

Managing the Kernel

Code is run in a separate process called the Kernel. The Kernel can be interrupted or restarted. Try running the following cell and then hit the `stop` button in the toolbar above. The button displays *interrupt kernel* when you hover over it.

```
In [ ]: import time
        time.sleep(10)
```

Cell menu

The “Cell” menu has a number of menu items for running code in different ways. These includes:

- Run and Select Below
- Run and Insert Below
- Run All
- Run All Above
- Run All Below

Restarting the kernels

The kernel maintains the state of a notebook’s computations. You can reset this state by restarting the kernel. This is done from the menu bar, or by clicking on the corresponding button in the toolbar.

`sys.stdout`

The stdout and stderr streams are displayed as text in the output area.

```
In [ ]: print("Hello from Pynq!")
```

Output is asynchronous

All output is displayed asynchronously as it is generated in the Kernel. If you execute the next cell, you will see the output one piece at a time, not all at the end.

```
In [ ]: import time, sys
        for i in range(8):
            print(i)
            time.sleep(0.5)
```

Large outputs

To better handle large outputs, the output area can be collapsed. Run the following cell and then single- or double-click on the active area to the left of the output:

```
In [ ]: for i in range(50):
        print(i)
```


2.2.7 Markdown

Text can be added to Jupyter Notebooks using Markdown cells. Markdown is a popular markup language that is a superset of HTML. Its specification can be found here:

<http://daringfireball.net/projects/markdown/>

Markdown basics

You can make text *italic* or **bold**.

You can build nested itemized or enumerated lists:

- One
 - Sublist
 - * This
- Sublist - That - The other thing
- Two
- Sublist
- Three
- Sublist

Now another list:

1. Here we go
 - (a) Sublist
 - (b) Sublist
2. There we go
3. Now this

You can add horizontal rules:

Here is a blockquote:

Beautiful is better than ugly. Explicit is better than implicit. Simple is better than complex. Complex is better than complicated. Flat is better than nested. Sparse is better than dense. Readability counts. Special cases aren't special enough to break the rules. Although practicality beats purity. Errors should never pass silently. Unless explicitly silenced. In the face of ambiguity, refuse the temptation to guess. There should be one— and preferably only one —obvious way to do it. Although that way may not be obvious at first unless you're Dutch. Now is better than never. Although never is often better than *right* now. If the implementation is hard to explain, it's a bad idea. If the implementation is easy to explain, it may be a good idea. Namespaces are one honking great idea – let's do more of those!

And shorthand for links:

[Jupyter's website](#)

Headings

You can add headings by starting a line with one (or multiple) # followed by a space, as in the following example:

```
# Heading 1
# Heading 2
## Heading 2.1
## Heading 2.2
```

Embedded code

You can embed code meant for illustration instead of execution in Python:

```
def f(x):
    """a docstring"""
    return x**2
```

or other languages:

```
if (i=0; i<n; i++) {
    printf("hello %d\n", i);
    x += 4;
}
```

LaTeX equations

Courtesy of MathJax, you can include mathematical expressions inline or displayed on their own line.

Inline expressions can be added by surrounding the latex code with \$:

```
Inline example: $e^{i\pi} + 1 = 0$
```

This renders as:

Inline example: $e^{i\pi} + 1 = 0$

Expressions displayed on their own line are surrounded by \$\$:

```
$$e^x=\sum_{i=0}^{\infty}\frac{1}{i!}x^i$$
```

This renders as:

$$e^x = \sum_{i=0}^{\infty} \frac{1}{i!} x^i$$

GitHub flavored markdown

The Notebook webapp supports Github flavored markdown meaning that you can use triple backticks for code blocks:

```

<pre>
```python
print "Hello World"
```
</pre>

<pre>
```javascript
console.log("Hello World")
```
</pre>

```

Gives:

```
print "Hello World"
```

```
console.log("Hello World")
```

And a table like this:

```

<pre>
```
| This | is |
|-----|-----|
| a | table|
```
</pre>

```

A nice HTML Table:

| | |
|------|-------|
| This | is |
| a | table |

General HTML

Because Markdown is a superset of HTML you can even add things like HTML tables:

Header 1

Header 2

row 1, cell 1

row 1, cell 2

row 2, cell 1

row 2, cell 2

Local files

If you have local files in your Notebook directory, you can refer to these files in Markdown cells directly:

[subdirectory/]<filename>

Security of local files

Note that the Jupyter notebook server also acts as a generic file server for files inside the same tree as your notebooks. Access is not granted outside the notebook folder so you have strict control over what files are visible, but for this reason it is highly recommended that you do not run the notebook server with a notebook directory at a high level in your filesystem (e.g. your home directory).

When you run the notebook in a password-protected manner, local file access is restricted to authenticated users unless read-only views are active. For more information, see Jupyter's documentation on [running a notebook server](#).

2.3 Python Environment

We show here some examples of how to run Python on a Pynq platform. Python 3.6 is running exclusively on the ARM Cortex-A9 processor.

In the first example, which is based on calculating the factors and primes of integer numbers, give us a sense of the performance available when running on a 650MHz ARM Cortex- A9 dual core processor running Linux.

In the second set of examples, we leverage Python's `numpy` package and `asyncio` module to demonstrate how Python can communicate with programmable logic.

2.3.1 Factors and Primes Example

Code is provided in the cell below for a function to calculate factors and primes. It contains some sample functions to calculate the factors and primes of integers. We will use three functions from the `factors_and_primes` module to demonstrate Python programming.

```
In [1]: """Factors-and-primes functions.

        Find factors or primes of integers, int ranges and int lists
        and sets of integers with most factors in a given integer interval

        """

def factorize(n):
    """Calculate all factors of integer n.

    """
    factors = []
    if isinstance(n, int) and n > 0:
        if n == 1:
            factors.append(n)
            return factors
        else:
            for x in range(1, int(n**0.5)+1):
                if n % x == 0:
                    factors.append(x)
                    factors.append(n//x)
            return sorted(set(factors))
    else:
        print('factorize ONLY computes with one integer argument > 0')
```

```
def primes_between(interval_min, interval_max):
    """Find all primes in the interval.

    """
    primes = []
    if (isinstance(interval_min, int) and interval_min > 0 and
        isinstance(interval_max, int) and interval_max > interval_min):
        if interval_min == 1:
            primes = [1]
        for i in range(interval_min, interval_max):
            if len(factorize(i)) == 2:
                primes.append(i)
        return sorted(primes)
    else:
        print('primes_between ONLY computes over the specified range.')

def primes_in(integer_list):
    """Calculate all unique prime numbers.

    """
    primes = []
    try:
        for i in (integer_list):
            if len(factorize(i)) == 2:
                primes.append(i)
        return sorted(set(primes))
    except TypeError:
        print('primes_in ONLY computes over lists of integers.')

def get_ints_with_most_factors(interval_min, interval_max):
    """Finds the integers with the most factors.

    """
    max_no_of_factors = 1
    all_ints_with_most_factors = []

    # Find the lowest number with most factors between i_min and i_max
    if interval_check(interval_min, interval_max):
        for i in range(interval_min, interval_max):
            factors_of_i = factorize(i)
            no_of_factors = len(factors_of_i)
            if no_of_factors > max_no_of_factors:
                max_no_of_factors = no_of_factors
                results = (i, max_no_of_factors, factors_of_i, \
                           primes_in(factors_of_i))
            all_ints_with_most_factors.append(results)

    # Find any larger numbers with an equal number of factors
    for i in range(all_ints_with_most_factors[0][0]+1, interval_max):
        factors_of_i = factorize(i)
        no_of_factors = len(factors_of_i)
        if no_of_factors == max_no_of_factors:
            results = (i, max_no_of_factors, factors_of_i, \
                       primes_in(factors_of_i))
            all_ints_with_most_factors.append(results)
    return all_ints_with_most_factors
```

```
    else:
        print_error_msg()

def interval_check(interval_min, interval_max):
    """Check type and range of integer interval.

    """
    if (isinstance(interval_min, int) and interval_min > 0 and
        isinstance(interval_max, int) and interval_max > interval_min):
        return True
    else:
        return False

def print_error_msg():
    """Print invalid integer interval error message.

    """
    print('ints_with_most_factors ONLY computes over integer intervals where'
          ' interval_min <= int_with_most_factors < interval_max and'
          ' interval_min >= 1')
```

Next we will call the `factorize()` function to calculate the factors of an integer.

```
In [2]: factorize(1066)
Out[2]: [1, 2, 13, 26, 41, 82, 533, 1066]
```

The `primes_between()` function can tell us how many prime numbers there are in an integer range. Let's try it for the interval 1 through 1066. We can also use one of Python's built-in methods `len()` to count them all.

```
In [3]: len(primes_between(1, 1066))
Out[3]: 180
```

Additionally, we can combine `len()` with another built-in method, `sum()`, to calculate the average of the 180 prime numbers.

```
In [4]: primes_1066 = primes_between(1, 1066)
        primes_1066_average = sum(primes_1066) / len(primes_1066)
        primes_1066_average

Out[4]: 486.20555555555556
```

This result makes sense intuitively because prime numbers are known to become less frequent for larger number intervals. These examples demonstrate how Python treats functions as first-class objects so that functions may be passed as parameters to other functions. This is a key property of functional programming and demonstrates the power of Python.

In the next code snippet, we can use list comprehensions (a 'Pythonic' form of the map-filter-reduce template) to 'mine' the factors of 1066 to find those factors that end in the digit '3'.

```
In [5]: primes_1066_ends3 = [x for x in primes_between(1, 1066)
                             if str(x).endswith('3')]
        print('{}'.format(primes_1066_ends3))

[3, 13, 23, 43, 53, 73, 83, 103, 113, 163, 173, 193, 223, 233, 263, 283, 293, 313, 353, 373, 383, 433]
```

This code tells Python to first convert each prime between 1 and 1066 to a string and then to return those numbers whose string representation end with the number '3'. It uses the built-in `str()` and `endswith()` methods to test each prime for inclusion in the list.

And because we really want to know what fraction of the 180 primes of 1066 end in a '3', we can calculate ...

```
In [6]: len(primes_1066_ends3) / len(primes_1066)
```

```
Out[6]: 0.25
```

These examples demonstrate how Python is a modern, multi-paradigmatic language. More simply, it continually integrates the best features of other leading languages, including functional programming constructs. Consider how many lines of code you would need to implement the list comprehension above in C and you get an appreciation of the power of productivity-layer languages. Higher levels of programming abstraction really do result in higher programmer productivity!

2.3.2 Numpy Data Movement

Code in the cells below show a very simple data movement code snippet that can be used to share data with programmable logic. We leverage the Python numpy package to manipulate the buffer on the ARM processors and can then send a buffer pointer to programmable logic for sharing data.

We do not assume what programmable logic design is loaded, so here we only allocate the needed memory space and show that it can be manipulated as a numpy array and contains a buffer pointer attribute. That pointer can then be passed to programmable logic hardware.

```
In [7]: import numpy as np
import pynq

def get_pynq_buffer(shape, dtype):
    """ Simple function to call PYNQ's memory allocator with numpy attributes
    """
    return pynq.Xlnk().cma_array(shape, dtype)
```

With the simple wrapper above, we can get access to memory that can be shared by both numpy methods and programmable logic.

```
In [8]: buffer = get_pynq_buffer(shape=(4,4), dtype=np.uint32)
buffer
```

```
Out[8]: CMABuffer([[0, 0, 0, 0],
                  [0, 0, 0, 0],
                  [0, 0, 0, 0],
                  [0, 0, 0, 0]], dtype=uint32)
```

To double-check we show that the buffer is indeed a numpy array.

```
In [9]: isinstance(buffer, np.ndarray)
```

```
Out[9]: True
```

To send the buffer pointer to programmable logic, we use its physical address which is what programmable logic would need to communicate using this shared buffer.

```
In [10]: pl_buffer_address = hex(buffer.physical_address)
pl_buffer_address
```

```
Out[10]: '0x16846000'
```

In this short example, we showed a simple allocation of a numpy array that is now ready to be shared with programmable logic devices. With numpy arrays that are accessible to programmable logic, we can quickly manipulate and move data across software and hardware.

2.3.3 Asyncio Integration

PYNQ also leverages the Python asyncio module for communicating with programmable logic devices through events (namely interrupts).

A Python program running on PYNQ can use the asyncio library to manage multiple IO-bound tasks asynchronously, thereby avoiding any blocking caused by waiting for responses from slower IO subsystems. Instead, the program can continue to execute other tasks that are ready to run. When the previously-busy tasks are ready to resume, they will be executed in turn, and the cycle is repeated.

Again, since we won't assume what interrupt enabled devices are loaded on programmable logic, we will show an example here a software-only asyncio example that uses asyncio's sleep method.

```
In [11]: import asyncio
import random
import time

# Coroutine
async def wake_up(delay):
    '''A function that will yield to asyncio.sleep() for a few seconds
    and then resume, having preserved its state while suspended

    '''
    start_time = time.time()
    print(f'The time is: {time.strftime("%I:%M:%S")}')

    print(f"Suspending coroutine 'wake_up' at 'await` statement\n")
    await asyncio.sleep(delay)

    print(f"Resuming coroutine 'wake_up' from 'await` statement")
    end_time = time.time()
    sleep_time = end_time - start_time
    print(f"'wake-up' was suspended for precisely: {sleep_time} seconds")
```

With the wake_up function defined, we then can add a new task to the event loop.

```
In [12]: delay = random.randint(1,5)
my_event_loop = asyncio.get_event_loop()

try:
    print("Creating task for coroutine 'wake_up'\n")
    wake_up_task = my_event_loop.create_task(wake_up(delay))
    my_event_loop.run_until_complete(wake_up_task)
except RuntimeError as err:
    print (f'{err}' +
          ' - restart the Jupyter kernel to re-run the event loop')
finally:
    my_event_loop.close()
```

Creating task for coroutine 'wake_up'


The time is: 10:29:45
Suspending coroutine 'wake_up' at 'await` statement

Resuming coroutine 'wake_up' from 'await` statement
'wake-up' was suspended for precisely: 3.011084794998169 seconds

All the above examples show standard Python 3.6 running on the PYNQ platform. This entire notebook can be run on the PYNQ board - see the getting_started folder on the Jupyter landing page to rerun this notebook.

2.4 PYNQ Overlays

The Xilinx® Zynq® All Programmable device is an SOC based on a dual-core ARM® Cortex®-A9 processor (referred to as the *Processing System* or **PS**), integrated with FPGA fabric (referred to as *Programmable Logic* or **PL**). The *PS* subsystem includes a number of dedicated peripherals (memory controllers, USB, Uart, IIC, SPI etc) and can be extended with additional hardware IP in a *PL* Overlay.

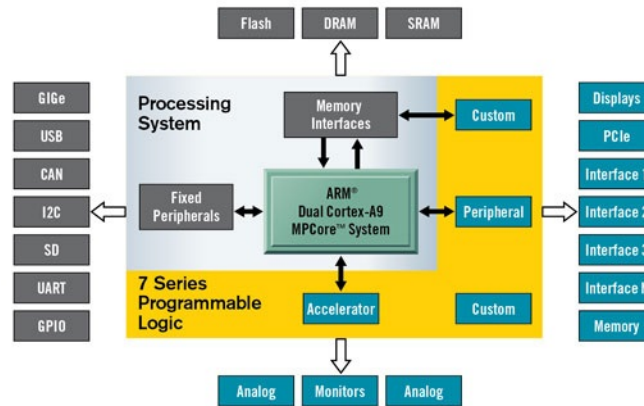

Overlays, or hardware libraries, are programmable/configurable FPGA designs that extend the user application from the Processing System of the Zynq into the Programmable Logic. Overlays can be used to accelerate a software application, or to customize the hardware platform for a particular application.

For example, image processing is a typical application where the FPGAs can provide acceleration. A software programmer can use an overlay in a similar way to a software library to run some of the image processing functions (e.g. edge detect, thresholding etc.) on the FPGA fabric. Overlays can be loaded to the FPGA dynamically, as required, just like a software library. In this example, separate image processing functions could be implemented in different overlays and loaded from Python on demand.

PYNQ provides a Python interface to allow overlays in the *PL* to be controlled from Python running in the *PS*. FPGA design is a specialized task which requires hardware engineering knowledge and expertise. PYNQ overlays are created by hardware designers, and wrapped with this PYNQ Python API. Software developers can then use the Python interface to program and control specialized hardware overlays without needing to design an overlay themselves. This is analogous to software libraries created by expert developers which are then used by many other software developers working at the application level.

2.4.1 Loading an Overlay

By default, the *base* overlay is loaded at boot time on PYNQ-Z1 board. New overlays can be installed or copied to the board and can be loaded as the system is running.

An overlay usually includes:

- A bitstream to configure the FPGA fabric
- A Vivado design Tcl file to determine the available IP
- Python API that exposes the IPs as attributes

The `PYNQ Overlay` class can be used to load an overlay. An overlay is instantiated by specifying the name of the bitstream file. Instantiating the `Overlay` also downloads the bitstream by default and parses the Tcl file.

```
from pynq import Overlay
overlay = Overlay("base.bit")
```

For the base overlay, we can use the existing `BaseOverlay` class; this class exposes the IPs available on the bitstream as attributes of this class.

```
In [1]: from pynq.overlays.base import BaseOverlay
        base_overlay = BaseOverlay("base.bit")
```

Once an overlay has been instantiated, the `help()` method can be used to discover what is in an overlay about. The *help* information can be used to interact with the overlay.

```
In [2]: help(base_overlay)
```

Help on BaseOverlay in module pynq.overlays.base.base object:

```
class BaseOverlay(pynq.overlay.Overlay)
|   The Base overlay for the Pynq-Z1
|
|   This overlay is designed to interact with all of the on board peripherals
|   and external interfaces of the Pynq-Z1 board. It exposes the following
|   attributes:
|
Attributes
iop1 : IOP
IO processor connected to the PMODA interface
iop2 : IOP
IO processor connected to the PMODB interface
iop3 : IOP
IO processor connected to the Arduino/ChipKit interface
trace_pmoda : pynq.logictools.TraceAnalyzer
Trace analyzer block on PMODA interface, controlled by PS.
trace_pmodb : pynq.logictools.TraceAnalyzer
Trace analyzer block on PMODB interface, controlled by PS.
trace_arduino : pynq.logictools.TraceAnalyzer
Trace analyzer block on Arduino interface, controlled by PS.
leds : AxiGPIO
4-bit output GPIO for interacting with the green LEDs LD0-3
buttons : AxiGPIO
4-bit input GPIO for interacting with the buttons BTN0-3
switches : AxiGPIO
2-bit input GPIO for interacting with the switches SW0 and SW1
rgbleds : [pynq.board.RGBLED]
Wrapper for GPIO for LD4 and LD5 multicolour LEDs
video : pynq.lib.video.HDMIWrapper
HDMI input and output interfaces
audio : pynq.lib.audio.Audio
Headphone jack and on-board microphone
Method resolution order:
BaseOverlay
pynq.overlay.Overlay
pynq.pl.Bitstream
builtins.object
Methods defined here:
__init__(self, bitfile, **kwargs)
Return a new Overlay object.
An overlay instantiates a bitstream object as a member initially.
```

```

Parameters
bitfile_name : str
The bitstream name or absolute path as a string.
download : boolean or None
Whether the overlay should be downloaded. If None then the
overlay will be downloaded if it isn't already loaded.
Note
----
This class requires a Vivado '.tcl' file to be next to bitstream file
with same name (e.g. base.bit and base.tcl).
-----
Methods inherited from pynq.overlay.Overlay:
__dir__(self)
__dir__() -> list
default dir() implementation
__getattr__(self, key)
Overload of __getattr__ to return a driver for an IP or
hierarchy. Throws an `RuntimeError` if the overlay is not loaded.
download(self)
The method to download a bitstream onto PL.
Note
----
After the bitstream has been downloaded, the "timestamp" in PL will be
updated. In addition, all the dictionaries on PL will
be reset automatically.
Returns
-----
None
is_loaded(self)
This method checks whether a bitstream is loaded.
This method returns true if the loaded PL bitstream is same
as this Overlay's member bitstream.
Returns
-----
bool
True if bitstream is loaded.
load_ip_data(self, ip_name, data)
This method loads the data to the addressable IP.
Calls the method in the super class to load the data. This method can
be used to program the IP. For example, users can use this method to
load the program to the Microblaze processors on PL.
Note
----
The data is assumed to be in binary format (.bin). The data name will
be stored as a state information in the IP dictionary.

```

```
|
Parameters
ip_name : str
The name of the addressable IP.
data : str
The absolute path of the data to be loaded.
Returns
-----
None
reset(self)
This function resets all the dictionaries kept in the overlay.
This function should be used with caution.
Returns
-----
None
-----
Data descriptors inherited from pynq.pl.Bitstream:
__dict__
dictionary for instance variables (if defined)
__weakref__
list of weak references to the object (if defined)
```

This will give a list of the IP and methods available as part of the overlay.

From the `help()` print out above, it can be seen that in this case the overlay includes an `leds` instance, and from the report this is an `AxiGPIO` class:

```
"""
leds : AxiGPIO

    4-bit output GPIO for interacting with the green LEDs LD0-3
"""
```

Running `help()` on the `leds` object will provide more information about the object including details of its API.

```
In [3]: help(base_overlay.leds)
```

Help on Channel in module pynq.lib.axigpio object:

```
class Channel(builtins.object)
|   Class representing a single channel of the GPIO controller.
|
|   Wires are and bundles of wires can be accessed using array notation
|   with the methods on the wires determined by the type of the channel::
|
|       input_channel[0].read()
|       output_channel[1:3].on()
|
|   This class instantiated not used directly, instead accessed through
|   the `AxiGPIO` classes attributes. This class exposes the wires
|   connected to the channel as an array or elements. Slices of the
```

```

| array can be assigned simultaneously.
|
| Methods defined here:
|
| __getitem__(self, idx)
|
| __init__(self, parent, channel)
|     Initialize self. See help(type(self)) for accurate signature.
|
| __len__(self)
|
| read(self)
|     Read the state of the input pins
|
| setdirection(self, direction)
|     Set the direction of the channel
|
|     Must be one of AxiGPIO.{Input, Output, InOut} or the string
|     'in', 'out', or 'inout'
|
| setlength(self, length)
|     Set the number of wires connected to the channel
|
| wait_for_interrupt_async(self)
|     Wait for the interrupt on the channel to be signalled
|
|     This is intended to be used by slices waiting for a particular
|     value but can be used in any situation to wait for a per-channel
|     interrupt.
|
| write(self, val, mask)
|     Set the state of the output pins
|
| -----
| Data descriptors defined here:
|
| __dict__
|     dictionary for instance variables (if defined)
|
| __weakref__
|     list of weak references to the object (if defined)
|
| trimask
|     Gets or sets the tri-state mask for an inout channel

```

The API can be used to control the object. For example, the following cell will turn on LD0 on the board.

```
In [4]: base_overlay.leds[0].toggle()
```

Information about other IP can be found from the overlay instance in a similar way, as shown below.

```
In [5]: help(base_overlay.video)
```

Help on HDMIWrapper in module pynq.lib.video object:

```

class HDMIWrapper(pynq.overlay.DefaultHierarchy)
|   Hierarchy driver for the entire Pynq-Z1 video subsystem.
|
|   Exposes the input, output and video DMA as attributes. For most
|   use cases the wrappers for the input and output pipelines are

```

```
| sufficient and the VDMA will not need to be used directly.
|
Attributes
hdmi_in : pynq.lib.video.HDMIIn
The HDMI input pipeline
hdmi_out : pynq.lib.video.HDMIOut
The HDMI output pipeline
axi_vdma : pynq.lib.video.AxiVDMA
The video DMA.
Method resolution order:
HDMIWrapper
pynq.overlay.DefaultHierarchy
pynq.overlay._IPMap
builtins.object
Methods defined here:
__init__(self, description)
Create a new _IPMap based on a hierarchical description.
-----
Static methods defined here:
checkhierarchy(description)
Function to check if the driver matches a particular hierarchy
This function should be redefined in derived classes to return True
if the description matches what is expected by the driver. The default
implementation always returns False so that drivers that forget don't
get loaded for hierarchies they don't expect.
-----
Methods inherited from pynq.overlay._IPMap:
__dir__(self)
__dir__() -> list
default dir() implementation
__getattr__(self, key)
-----
Data descriptors inherited from pynq.overlay._IPMap:
__dict__
dictionary for instance variables (if defined)
__weakref__
list of weak references to the object (if defined)
```

2.4.2 Base Overlay

The purpose of the base overlay design is to allow PYNQ to use peripherals on a board out-of-the-box. The design includes hardware IP to control peripherals on the target board, and connects these IP blocks to the Zynq PS. If a base overlay is available for a board, peripherals can be used from the Python environment immediately after the system

boots.


Board peripherals typically include GPIO devices (LEDs, Switches, Buttons), Video, Audio, and other custom interfaces.

As the base overlay includes IP for the peripherals on a board, it can also be used as a reference design for creating new customized overlays.

In the case of general purpose interfaces, for example Pmod or Arduino headers, the base overlay may include a PYNQ MicroBlaze. A PYNQ MicroBlaze allows control of devices with different interfaces and protocols on the same port without requiring a change to the programmable logic design.

See [PYNQ Libraries](#) for more information on PYNQ MicroBlazes.

PYNQ-Z1 Block Diagram

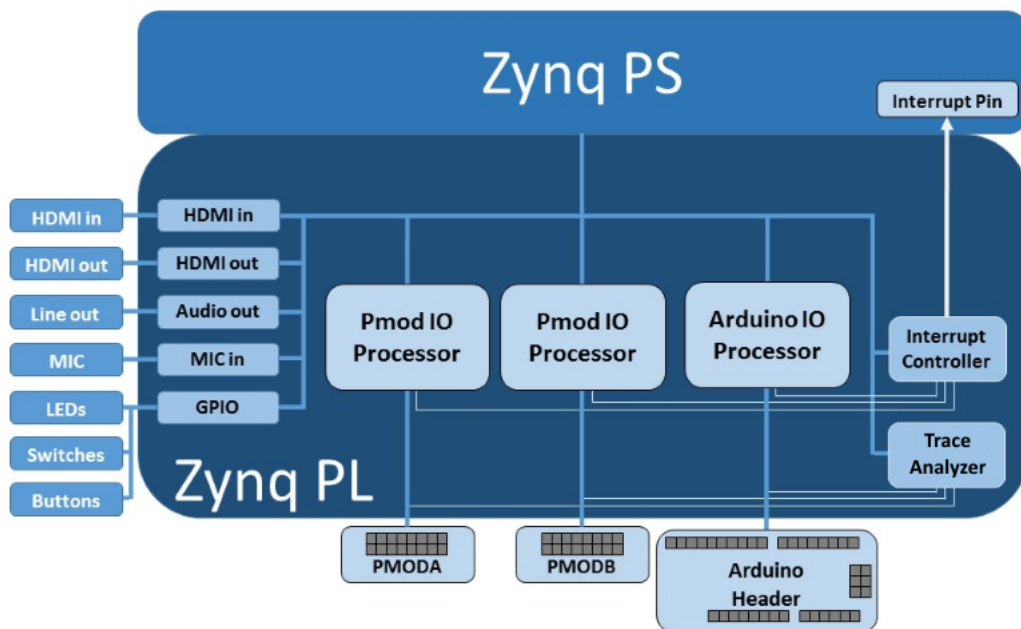

The base overlay on PYNQ-Z1 includes the following hardware:

- HDMI (Input and Output)
- Microphone in
- Audio out
- User LEDs, Switches, Pushbuttons
- 2x Pmod PYNQ MicroBlaze
- Arduino PYNQ MicroBlaze
- 3x Trace Analyzer (PmodA, PmodB, ARDUINO)

HDMI

The PYNQ-Z1 has HDMI in and HDMI out ports. The HDMI interfaces are connected directly to PL pins. i.e. There is no external HDMI circuitry on the board. The HDMI interfaces are controlled by HDMI IP in the programmable logic.

The HDMI IP is connected to PS DRAM. Video can be streamed from the HDMI *in* to memory, and from memory to HDMI *out*. This allows processing of video data from python, or writing an image or Video stream from Python to the HDMI out.

Note that while Jupyter notebook supports embedded video, video captured from the HDMI will be in raw format and would not be suitable for playback in a notebook without appropriate encoding.

For information on the physical HDMI interface ports, see the [Digilent HDMI reference for the PYNQ-Z1 board](#)

HDMI In

The HDMI in IP can capture standard HDMI resolutions. After a HDMI source has been connected, and the HDMI controller for the IP is started, it will automatically detect the incoming data. The resolution can be read from the HDMI Python class, and the image data can be streamed to the PS DRAM.

HDMI Out

The HDMI out IP supports the following resolutions:

- 640x480
- 800x600
- 1280x720 (720p)
- 1280x1024
- 1920x1080 (1080p)*

*While the Pynq-Z1 cannot meet the official HDMI specification for 1080p, some HDMI devices at this resolution may work.

Data can be streamed from the PS DRAM to the HDMI output. The HDMI Out controller contains framebuffers to allow for smooth display of video data.

See example video notebooks in the `<Jupyter Dashboard>/base/video` directory on the board.

Microphone In

The PYNQ-Z1 board has an integrated microphone on the board and is connected directly to the Zynq PL pins, and does not have an external audio codec. The microphone generates audio data in PDM format.

For more information on the audio hardware, see the [Digilent MIC in reference for the PYNQ-Z1 board](#)

See example audio notebooks in the `<Jupyter Dashboard>/base/audio` directory on the board.

Audio Out

The audio out IP is connected to a standard 3.5mm audio jack on the board. The audio output is PWM driven mono.

For more information on the audio hardware, see the [Digilent Audio Out reference for the PYNQ-Z1 board](#)

See example audio notebooks in the `<Jupyter Dashboard>/base/audio` directory on the board.

User IO

The PYNQ-Z1 board includes two tri-color LEDs, 2 switches, 4 push buttons, and 4 individual LEDs. These IO are connected directly to Zynq PL pins. In the PYNQ-Z1 base overlay, these IO are routed to the PS GPIO, and can be controlled directly from Python.

PYNQ MicroBlaze

PYNQ MicroBlazes are dedicated MicroBlaze soft-processor subsystems that allow peripherals with different IO standards to be connected to the system on demand. This allows a software programmer to use a wide range of peripherals with different interfaces and protocols. By using a PYNQ MicroBlaze, the same overlay can be used to support different peripheral without requiring a different overlay for each peripheral.

There are two types of PYNQ MicroBlazes: Pmod, and Arduino. The Pmod and Arduino ports, which the PYNQ MicroBlazes connect to, have a different number of pins and can support different sets of peripherals. Both types of PYNQ MicroBlaze have a similar architecture, but have different IP configurations to support the different sets of peripheral and interface pins.

PYNQ MicroBlaze block diagram and examples can be found in *PYNQ MicroBlaze Subsystem*.

Trace Analyzer

Trace analyzer blocks are connected to the interface pins for the two Pmod PYNQ MicroBlazes, and the Arduino PYNQ MicroBlaze. The trace analyzer can capture IO signals and stream the data to the PS DRAM for analysis in the Python environment.

Using the Python Wavedrom package, the signals from the trace analyzer can be displayed as waveforms in a Jupyter notebook.

On the base overlay, the trace analyzers are controlled by PS directly. In fact, on other overlays, the trace analyzers can also be controlled by PYNQ MicroBlaze.

See the example notebook in the <Jupyter Dashboard>/base/trace directory on the board.

Python API

The Python API for the peripherals in the base overlay is covered in *PYNQ Libraries*. Example notebooks are also provided on the board to show how to use the base overlay.

Rebuilding the Overlay

The project files for the overlays can be found here:

```
<PYNQ repository>/boards/<board>/base
```

Linux

A Makefile is provided to rebuild the base overlay in Linux. The Makefile calls two tcl files. The first Tcl files compiles any HLS IP used in the design. The second Tcl builds the overlay.

To rebuild the overlay, source the Xilinx tools first. Then assuming PYNQ has been cloned:

```
cd <PYNQ repository>/boards/Pynq-Z1/base
make
```

Windows

In Windows, the two Tcl files can be sourced in Vivado to rebuild the overlay. The Tcl files to rebuild the overlay can be sourced from the Vivado GUI, or from the Vivado Tcl Shell (command line).

To rebuild from the Vivado GUI, open Vivado. In the Vivado Tcl command line window change to the correct directory, and source the Tcl files as indicated below.

Assuming PYNQ has been cloned:

```
cd <PYNQ repository>/boards/Pynq-Z1/base
source ./build_base_ip.tcl
source ./base.tcl
```

To build from the command line, open the Vivado 2016.1 Tcl Shell, and run the following:


```
cd <PYNQ repository>/boards/Pynq-Z1/base
vivado -mode batch -source build_base_ip.tcl
vivado -mode batch -source base.tcl
```

Note that you must change to the overlay directory, as the tcl files has relative paths that will break if sourced from a different location.

2.4.3 Logictools Overlay

The logictools overlay consists of programmable hardware blocks to connect to external digital logic circuits. Finite state machines, Boolean logic functions and digital patterns can be generated from Python. A programmable switch connects the inputs and outputs from the hardware blocks to external IO pins. The logictools overlay can also has a trace analyzer to capture data from the IO interface for analysis and debug.

PYNQ-Z1 Block Diagram

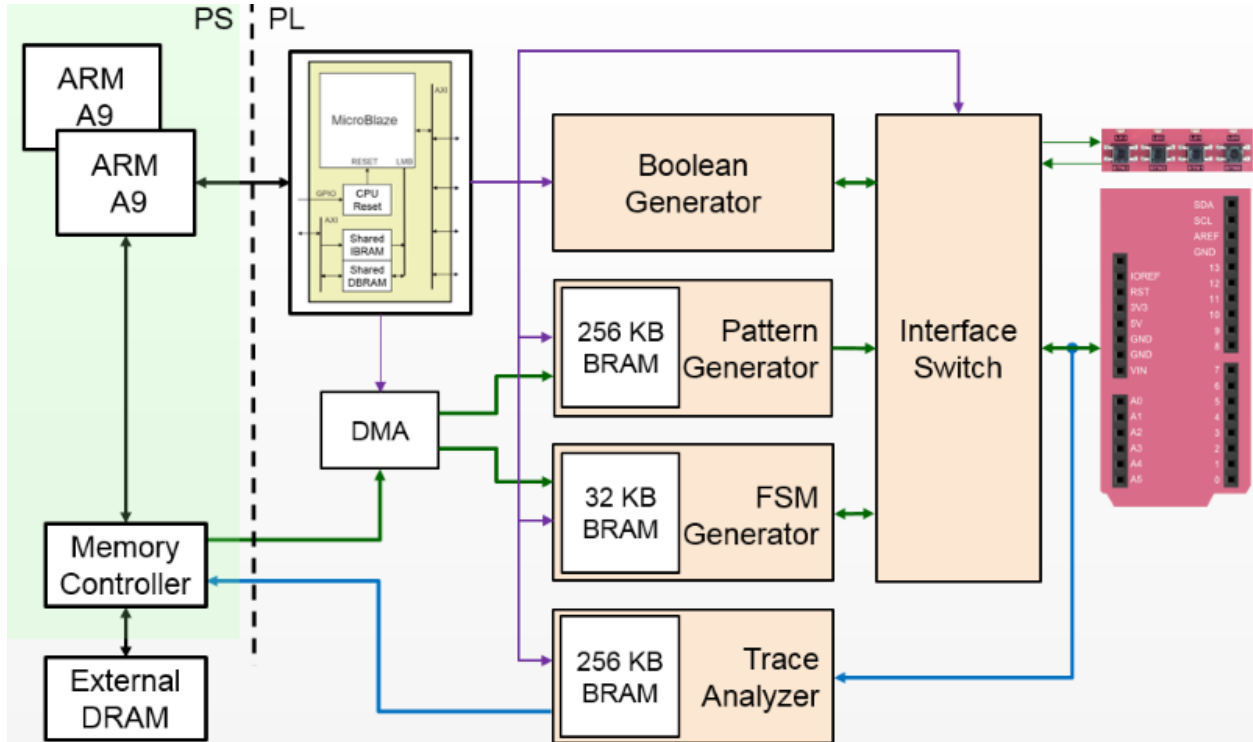

The logictools overlay on PYNQ-Z1 includes four main hardware blocks:

- Pattern Generator
- FSM Generator
- Boolean Generator
- Trace Analyzer

Each block is configured using a textual description specified in Python. No compilation of the configuration is required. This means a configuration can be loaded directly to the generator and run immediately.

Pattern Generator

The *Pattern Generator* can be configured to generate and stream arbitrary digital patterns to the external IO pins. The Pattern Generator can be used as a stimulus to test or control an external circuit.

Finite State Machine (FSM) Generator

The *FSM Generator* can create a finite state machine from a Python description. The inputs and outputs and states of the FSM can be connected to external IO pins.

Boolean Generator

The *Boolean Generator* can create independent combinatorial Boolean logic functions. The external IO pins are used as inputs and outputs to the Boolean functions.

Trace Analyzer

The *Trace Analyzer* can capture IO signals and stream the data to the PS DRAM for analysis in the Python environment. The Trace Analyzer can be used standalone to capture external IO signals, or used in combination with the other three logictools functions to monitor data to and from the other blocks. E.g. the trace analyzer can be used with the pattern generator to verify the data sent to the external pins, or with the FSM to check the input, output or states to verify or debug a design.

PYNQ MicroBlaze

A PYNQ MicroBlaze is used to control all the generators and analyzers. The PYNQ MicroBlaze subsystem on logictools overlay also manages contiguous memory buffers, configures the clock frequency, and keeps track of the generator status. For more information, please see *PYNQ Libraries*.

Python API

The API for the logictools generators and trace analyzer can be found in *PYNQ Libraries*.

Rebuilding the Overlay

The process to rebuild the logictools overlay is similar to the base overlay.

All source code for the hardware blocks is provided. Each block can also be reused standalone in a custom overlay.

The source files for the logictools IP can be found in:

```
<PYNQ Repository>/boards/ip
```

The project files for the logictools overlay can be found here:

```
<PYNQ Repository>/boards/<board_name>/logictools
```

Linux

To rebuild the overlay, source the Xilinx tools first. Then assuming PYNQ has been cloned:

```
cd <PYNQ Repository>/boards/Pynq-Z1/logictools
make
```

Windows

To rebuild from the Vivado GUI, open Vivado. In the Vivado Tcl command line window, change to the correct directory, and source the Tcl files as indicated below.

Assuming PYNQ has been cloned:

```
cd <PYNQ Repository>/boards/Pynq-Z1/logictools
source ./build_logictools_ip.tcl
source ./logictools.tcl
```

To build from the command line, open the Vivado 2016.1 Tcl Shell, and run the following:

```
cd <PYNQ Repository>/boards/Pynq-Z1/logictools
vivado -mode batch -source build_logictools_ip.tcl
vivado -mode batch -source logictools.tcl
```

Note that you must change to the overlay directory, as the .tcl files has relative paths that will break if sourced from a different location.

2.5 PYNQ Libraries

Typical embedded systems support a fixed combination of peripherals (e.g. SPI, IIC, UART, Video, USB). There may also be some GPIO (General Purpose Input/Output pins) available. The number of GPIO available in a CPU based embedded system is typically limited, and the GPIO are also controlled by the main CPU. As the main CPU which is managing the rest of the system, GPIO performance is usually limited.

Zynq platforms usually have many more IO pins available than a typical embedded system. Dedicated hardware controllers and additional soft processors can be implemented in the PL and connected to external interfaces. This means performance on these interfaces can be much higher than other embedded system.

PYNQ runs on Linux which uses the following Zynq PS peripherals by default: SD Card to boot the system and host the Linux file system, Ethernet to connect to Jupyter notebook, UART for Linux terminal access, and USB.

The USB port and other standard interfaces can be used to connect off-the-shelf USB and other peripherals to the Zynq PS where they can be controlled from Python/Linux. The PYNQ image currently includes drivers for the most commonly used USB webcams, WiFi peripherals, and other standard USB devices.

Other peripherals can be connected to and accessed from the Zynq PL. E.g. HDMI, Audio, Buttons, Switches, LEDs, and general purpose interfaces including Pmods, and Arduino. As the PL is programmable, an overlay which provides controllers for these peripherals or interfaces must be loaded before they can be used.

A library of hardware IP is included in Vivado which can be used to connect to a wide range of interface standards and protocols. PYNQ provides a Python API for a number of common peripherals including Video (HDMI in and Out), GPIO devices (Buttons, Switches, LEDs), and sensors and actuators. The PYNQ API can also be extended to support additional IP.


Zynq platforms usually have one or more *headers* or *interfaces* that allow connection of external peripherals, or to connect directly to the Zynq PL pins. A range of off-the-shelf peripherals can be connected to Pmod and Arduino interfaces. Other peripherals can be connected to these ports via adapters, or with a breadboard. Note that while a peripheral can be physically connected to the Zynq PL pins, a controller must be built into the overlay, and a software driver provided, before the peripheral can be used.

2.5.1 AxiGPIO: LEDs, Buttons & Switches


The AxiGPIO module provides methods to read, write, and receive interrupts from external general purpose peripherals such as LEDs, buttons, switches connected to the PL using AXI GPIO controller IP.

Block Diagram

The AxiGPIO module talks to instances of the AXI GPIO controller in the PL. Each AXI GPIO can have up to two channels each with up to 32 pins.

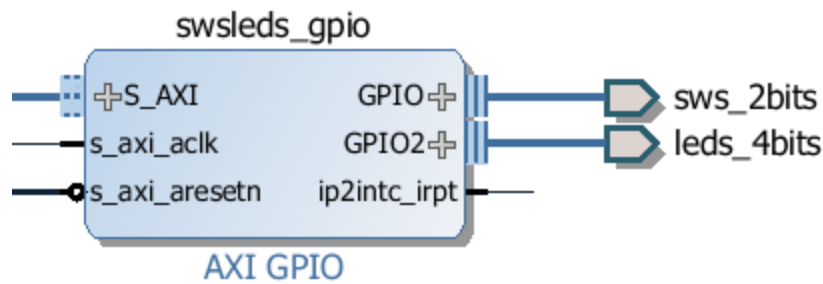

The interrupt signal, `ip2intc_irpt` from the AXI GPIO can be connected directly to an AXI interrupt controller to cause interrupts in the PS. More information about AsyncIO and Interrupts can be found in the *PYNQ and Asyncio* section.

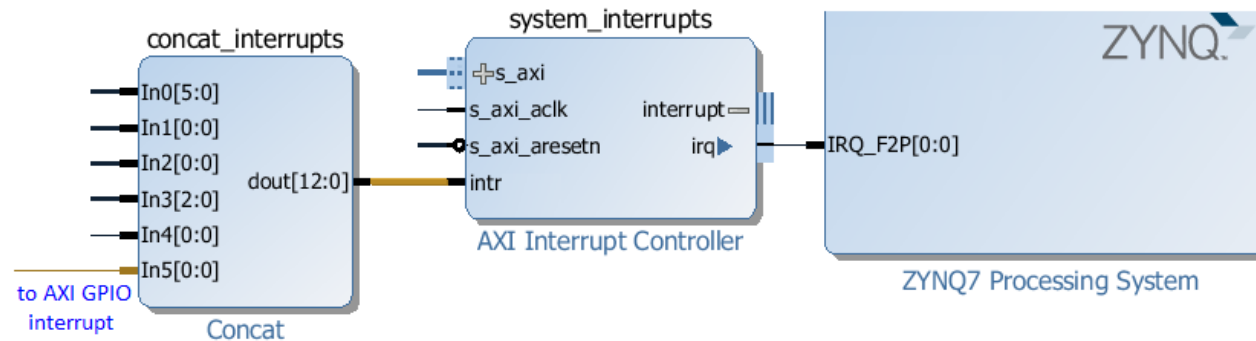

Examples

In the *Base Overlay*, three AxiGPIO instances are available: `btns_gpio`, `rgbleds_gpio`, and `swsleds_gpio`. After the overlay is loaded these can be accessed as follows:

```
from pynq import Overlay
base = Overlay("base.bit")

base.btns_gpio.read()

base.rgbleds_gpio.write(0, 0x3)
```

More information about the AxiGPIO module and the API for reading, writing and waiting for interrupts can be found in the *pynq.lib.axigpio Module* sections


For more examples see the “Buttons and LEDs demonstration” notebook on the PYNQ-Z1 board at:

```
<Jupyter Home>/base/board/board_btns_leds.ipynb
```

2.5.2 Audio

The Audio module provides methods to read audio from the input microphone, play audio to the output speaker, or read and write audio files. The audio module talks to the audio IP subsystem in the *Base Overlay* to drive the Pulse Width Modulation (PWM) mono output, and another block to read the Pulse Density Modulated (PDM) input from the microphone.

Block Diagram

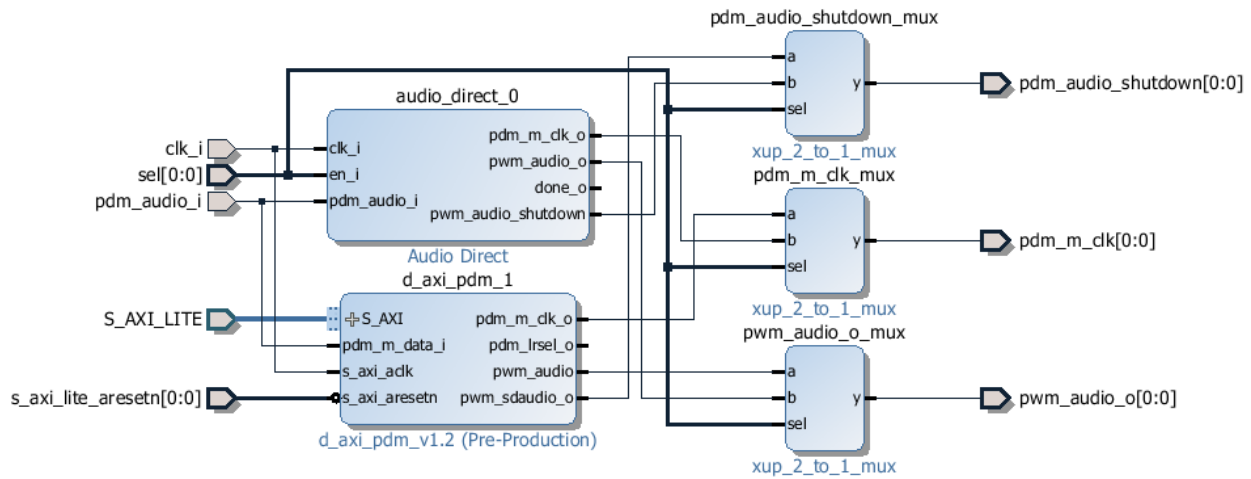

Examples

In the *Base Overlay*, a single Audio instance is available: `audio`. After the overlay is loaded this instance can be accessed as follows:

```
from pynq.overlays.base import BaseOverlay
base = BaseOverlay("base.bit")
pAudio = base.audio

pAudio.load("/home/xilinx/pynq/lib/tests/pynq_welcome.pdm")
pAudio.play()
```

More information about the Audio module and the API for reading and writing audio interfaces, or loading and saving audio files can be found in the *pynq.lib.audio Module* section.

For more examples see the “Welcome to Pynq Audio” notebook on the PYNQ-Z1 board at:

```
<Jupyter Home>/base/audio/audio_playback.ipynb
```


2.5.3 Video

The Video subpackage contains a collection of drivers for reading from the HDMI-In port, writing to the HDMI-Out port, transferring data, setting interrupts and manipulating video frames.


The Video hardware subsystem consists of a HDMI-In block, a HDMI-Out block, and a Video DMA. The HDMI-In and HDMI-Out blocks also support color space conversions, e.g. from YCrCb to RGB and back, and changing the number of channels in each pixel.

Video data can be captured from the HDMI-In, and streamed to DRAM using the Video DMA, or streamed from DRAM to the HDMI-Out.

Block Diagram

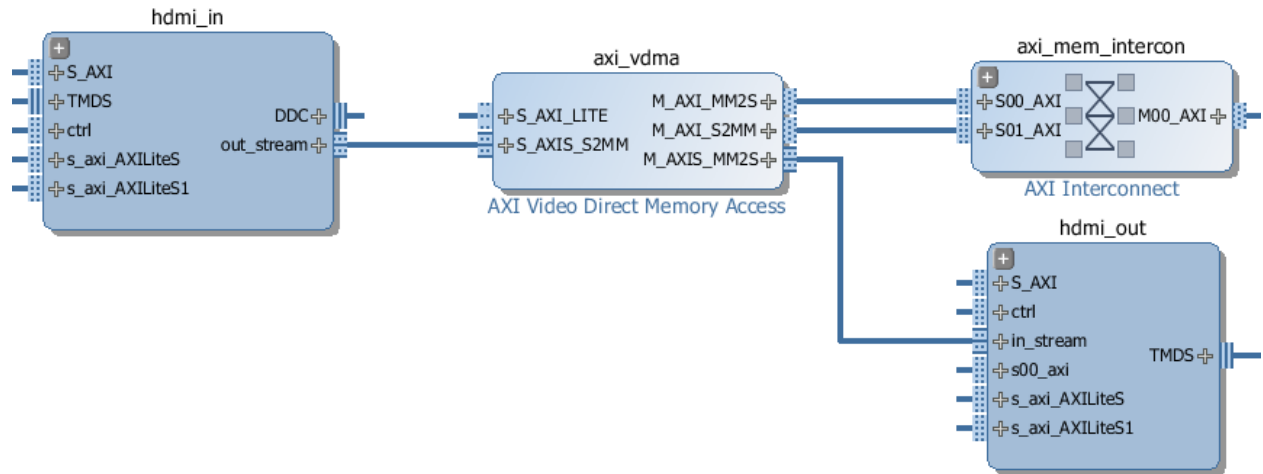


HDMI-In

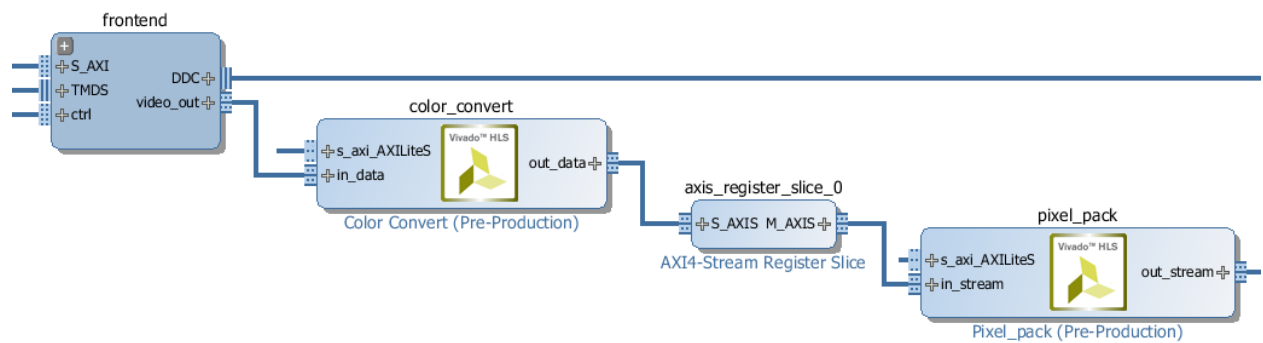

The Pixel Unpack and the Color Convert block allow conversion between different color spaces at runtime.

HDMI-Out

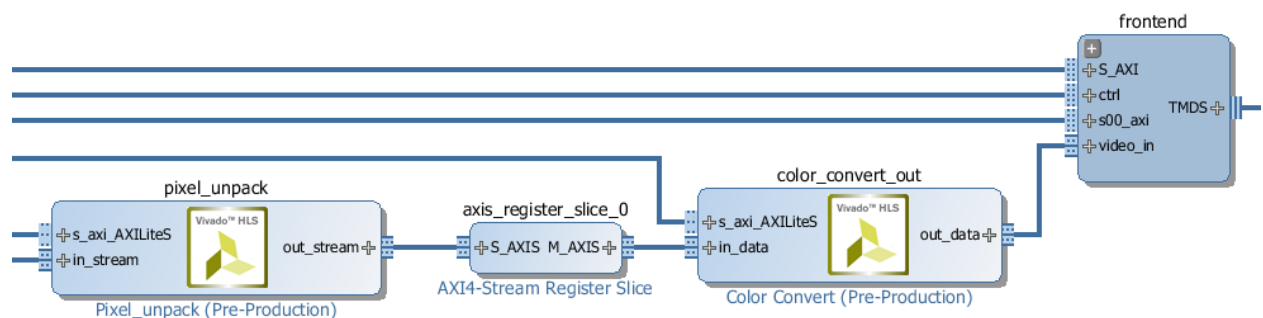

The HDMI-Out is similar to HDMI-In. It has a Pixel Pack block (instead of the *Unpack* block for HDMI-In) and a Color Convert block.

Processing Options

There are 3 main ways that some processing could be carried out on a Video pipeline.

1. Read, write and process frames in Python on the PS
2. Modify the overlay to insert an IP into the video pipeline
3. Modify the overlay to connect an IP to an available interface in the overlay

Python Processing

Input and output frames are represented as numpy arrays frames are read from the HDMI input and written to the HDMI output. The HDMI input will return the most recent complete frame received or block if necessary until the frame is ready. The HDMI output will continue outputting the last frame written until a new frame is provided.

As frames are numpy arrays they can be directly used in other Python libraries including the Python OpenCV libraries.

Examples of using the video API with OpenCV can be found in the video notebooks.

Processing video in the PS will be relatively slow. Where possible low level processing should be carried out in the PL. The video subsystem supports basic color space and pixel type conversions in hardware before passing a frame to the Python environment to improve performance of OpenCV and processing by other libraries.

Pipeline Processing

The HDMI signal blocks are AXI-stream. A custom AXI-stream IP with an input stream and output stream could be inserted into the video pipeline, either on the HDMI-In side, or HDMI-Out side. However, usually IP to process the video stream will assume a fixed color space/pixel format and this will determine where an IP should be connected in the Video pipeline.

It is usually appropriate to insert the IP after the pixel_pack block on the HDMI-In block, or before the pixel_unpack block on the HDMI-Out side. This gives flexibility to use the video subsystem color space conversion blocks before and after the custom IP.

Batch Processing

An IP block can be added to an overlay and connected to an available interface. Usually a DMA would be used to stream the input frame buffer to the IP, and send the processed data back to the output frame buffer in DRAM.

Note that the DRAM is likely to be a bottleneck for video processing. The Video data is written to DRAM, then read from DRAM and send to the custom IP and is written back to DRAM, where it is read by the HDMI out.

For the PYNQ-Z1 which has a 16-bit DRAM, up to 1080p cwgraysc (8-bits per pixel) can be processed at ~60fps alongside the framebuffer memory bandwidth, but this is very close to the total memory bandwidth of the system.

Examples

More information about the Video subpackage, its components, and its their APIs can be found in the [*pynq.lib.video Module*](#) section.

For more examples, see the Video Notebooks folder on the Pynq-Z1 board in the following directory:

```
<Jupyter Home>/base/video
```

Initialization

Set up an instance of the HDMI-in, and HDMI-out.

```
from pynq import Overlay
from pynq.lib.video import *

base = Overlay('base.bit')
hdmi_in = base.video.hdmi_in
hdmi_out = base.video.hdmi_out
```

Configuration

The HDMI-in interface is enabled using the `configure` function which can optionally take a `colorspace` parameter. If no `colorspace` is specified then 24-bit BGR is used by default. The HDMI-in *mode* can be used to configure the HDMI-out block. This specifies the output color space and resolution.

```
hdmi_in.configure()
hdmi_out.configure(hdmi_in.mode)
```

Execution

Once the HDMI controllers have been configured, they can be started:

```
hdmi_in.start()
hdmi_out.start()
```

To connect a simple stream from HDMI-in to HDMI-out, the two streams can be tied together.

```
hdmi_in.tie(hdmi_out)
```

This takes the unmodified input stream and passes it directly to the output. While the input and output are tied frames can still be read from the input but any call to `hdmi_out.writeframe` will end the tie.

```
frame = hdmi_in.readframe()
...
hdmi_out.writeframe(frame)
```

This would allow some processing to be carried out on the HDMI-in *frame* before writing it to the HDMI-out.

Color Space Conversion

The video subsystem supports general color space conversions so that frames in DRAM are in a format appropriate for any subsequent processing. The default color space is BGR(24-bit) with RGB (24-bit), RGBA (32-bit), BGR (24-bit), YCbCr (24-bit), and grayscale (8-bit) provided as built-in options.

The colorspace converter operates on each pixel independently using a 3x4 matrix to transform the pixels. The converter is programmed with a list of twelve coefficients in the following order:

| Channel | in1 | in2 | in3 | 1 |
|---------|-----|-----|-----|-----|
| out1 | c1 | c2 | c3 | c10 |
| out2 | c4 | c5 | c6 | c11 |
| out3 | c7 | c8 | c9 | c12 |

Each coefficient should be a floating point number between -2 and +2.

The pixels to and from the HDMI frontends are in BGR order so a list of coefficients to convert from the input format to RGB would be:

```
[0, 0, 1,
 0, 1, 0,
 1, 0, 0,
 0, 0, 0]
```

reversing the order of the channels and not adding any bias.

The driver for the colorspace converters has a single property that contains the list of coefficients.

```
colorspace_in = base.video.hdmi_in.color_convert
colorspace_out = base.video.hdmi_out.color_convert

bgr2rgb = [0, 0, 1,
           0, 1, 0,
           1, 0, 0,
           0, 0, 0]

colorspace_in.colorspace = bgr2rgb
colorspace_out.colorspace = bgr2rgb
```

Pixel Format

The default pixel format for the HDMI frontends is 24-bit - that is three 8-bit channels. This can be converted to 8, 16, 24 or 32 bits.

8-bit mode selects the first channel in the pixel (and drops the other two) 16-bit mode can either select the first two channels or select the first and performs chroma resampling of the other two resulting in 4:2:2 formatted frames. 24-bit mode is pass-through, and doesn't change the format 32-bit mode pads the stream with additional 8-bits.

```
pixel_in = base.video.hdmi_in.pixel_pack
pixel_out = base.video.hdmi_out.pixel_unpack

pixel_in.bits_per_pixel = 8
pixel_out.bits_per_pixel = 16
pixel_out.resample = False
```

Video Pipeline

As the `hdmi_in.readframe` and `hdmi_out.writeframe` functions may potentially block if a complete frame has not yet been read or written, `_async` versions of these functions also exist. One use for the asynchronous versions is if frames are being transferred to a separate accelerator using a DMA engine. The DMA driver is also `asyncio` aware so the computation can be written as two tasks. One to retrieve frames from the Video DMA and forward them to the accelerator and a second task to bring frames back from the accelerator.

```
async def readframes():
    while True:
        frame = await hdmi_in.readframe_async()
        dma.sendchannel.transfer(frame)
        await dma.sendchannel.wait_async()
        frame.freebuffer()
```

```
async def writeframes():
    while True:
        frame = hdmi_out.newframe()
        dma.recvchannel.transfer(frame)
        await dma.recvchannel.wait()
        await hdmi_out.writeframe_async(frame)
```

2.5.4 PYNQ MicroBlaze Subsystem

The PYNQ MicroBlaze subsystem can be controlled by the PynqMicroblaze class. This allows loading of programs from Python, controlling executing by triggering the processor reset signal, reading and writing to shared data memory, and managing interrupts received from the subsystem.

Each PYNQ MicroBlaze subsystem is contained within an IO Processor (IOP). An IOP defines a set of communication and behavioral controllers that are controlled by Python. There are currently three IOPs provided with PYNQ: Arduino, PMOD, and Logictools.

Block Diagram


A PYNQ MicroBlaze subsystem consists of a MicroBlaze processor, AXI interconnect, Interrupt controller, an Interrupt Requester, and External System Interface, and Block RAM and memory controllers.

The AXI interconnect connects the MicroBlaze to the interrupt controller, interrupt requester, and external interface.

- The Interrupt Controller is the interface for other communication or behavioral controllers connected to the MicroBlaze Processor.
- The Interrupt Requester sends interrupt requests to the Zynq Processing System.
- The External Interface allows the MicroBlaze subsystem to communicate with other communication, behavioral controllers, or DDR Memory.
- The Block RAM holds MicroBlaze Instructions and Data.

The Block RAM is dual-ported: One port connected to the MicroBlaze Instruction and Data ports; The other port is connected to the ARM® Cortex®-A9 processor for communication.

If the External Interface is connected to DDR Memory, DDR can be used to transfer large data segments between the PS (Python) and the Subsystem.

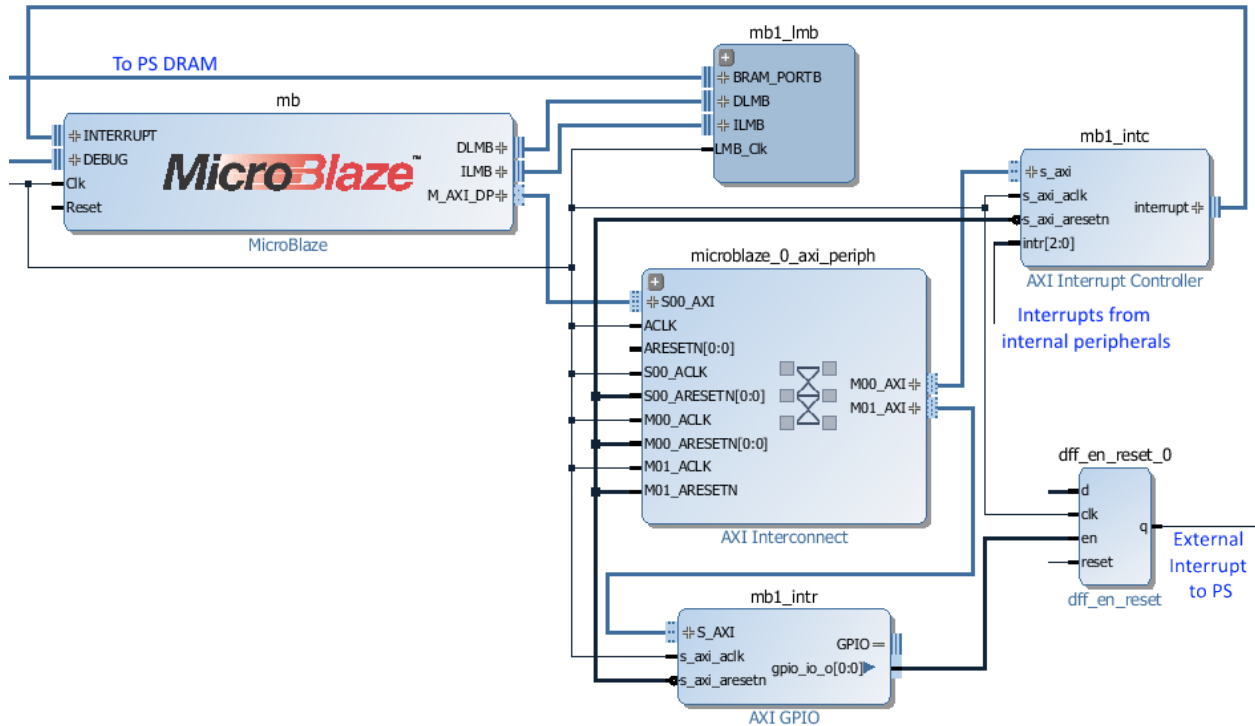

Examples

In the *Base Overlay*, three IOP instances with PYNQ Microblaze Subsystems are available: iop1 (PMODA), iop2 (PMODB), and iop3 (Arduino). After the overlay is loaded these can be accessed as follows:

```
from pynq.overlays.base import BaseOverlay
from pynq.lib import PynqMicroblaze

base = BaseOverlay('base.bit')

mb = PynqMicroblaze(base.iop1.mb_info, "/home/xilinx/pynq/lib/pmod/pmod_timer.bin")
mb.reset()
```

More information about the PynqMicroblaze class, and its API can be found in the *pynq.lib.pynqmicroblaze Module* section.

Pmod, *Arduino*, and *Grove* classes are subclasses of the PynqMicroBlaze class, and further example notebooks can be found in those sections.

2.5.5 Pmod

The Pmod subpackage is a collection of drivers for controlling peripherals attached to a Pmod port.

A Pmod port is an open 12-pin interface that is supported by a range of Pmod peripherals from Digilent and third party manufacturers. Typical Pmod peripherals include sensors (voltage, light, temperature), communication interfaces (Ethernet, serial, WiFi, Bluetooth), and input and output interfaces (buttons, switches, LEDs).




Each Pmod connector has 12 pins arranged in 2 rows of 6 pins. Each row has 3.3V (VCC), ground (GND) and 4 data pins. Using both rows gives 8 data pins in total.

Pmods come in different configurations depending on the number of data pins required. E.g. Full single row: 1x6 pins; full double row: 2x6 pins; and partially populated: 2x4 pins.

Data pins

| | | | | | |
|------|-----|---|---|---|---|
| 3.3V | GND | 3 | 2 | 1 | 0 |
| 3.3V | GND | 7 | 6 | 5 | 4 |

Pmods that use both rows (e.g. 2x4 pins, 2x6 pins), should usually be aligned to the left of the connector (to align with VCC and GND).

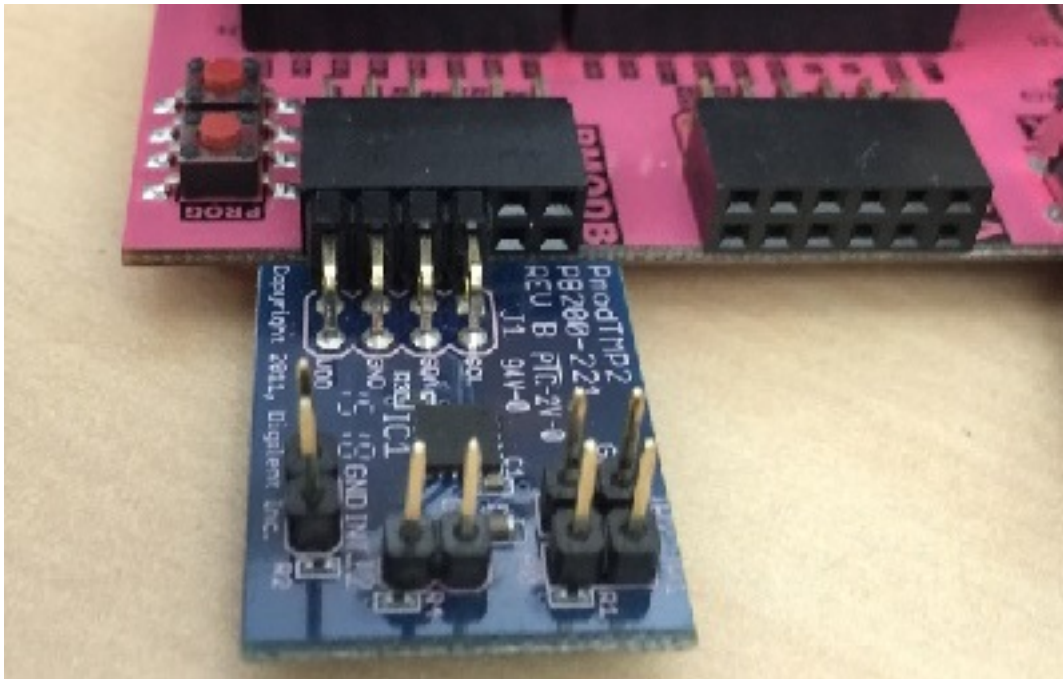

Pmod peripherals with only a single row of pins can be connected to either the top row or the bottom row of a Pmod port (again, aligned to VCC/GND). If you are using an existing driver/overlay, you will need to check which pins/rows are supported for a given overlay, as not all options may be implemented. e.g. the Pmod ALS is currently only supported on the top row of a Pmod port, not the bottom row.

All pins operate at 3.3V. Due to different pull-up/pull-down I/O requirements for different peripherals (e.g. IIC requires pull-up, and SPI requires pull-down) the Pmod data pins have different IO standards.

Pins 0,1 and 4,5 are connected to pins with pull-down resistors. This can support the SPI interface, and most periph-


erals. Pins 2,3 and 6,7 are connected to pins with pull-up resistors. This can support the IIC interface.

Pmods already take this pull up/down convention into account in their pin layout, so no special attention is required when using Pmods.

Block Diagram

Pmod PYNQ MicroBlazes control the Pmod interfaces present on a board, if provided. As indicated in the diagram, each Pmod PYNQ MicroBlaze has a *PYNQ MicroBlaze Subsystem* a configurable switch, and the following AXI controllers:

- AXI I2C
 - SCL Frequency 100 KHz
 - Address Mode: 7 bits
- AXI SPI
 - Master mode
 - Transaction Width: 8
 - SCK Frequency: 6.25 MHz
 - FIFO Depth: 16
- AXI GPIO
 - 8 Input/Output pins
- AXI Timer
 - 32 bits
 - 1 Generate Output
 - 1 PWM Output

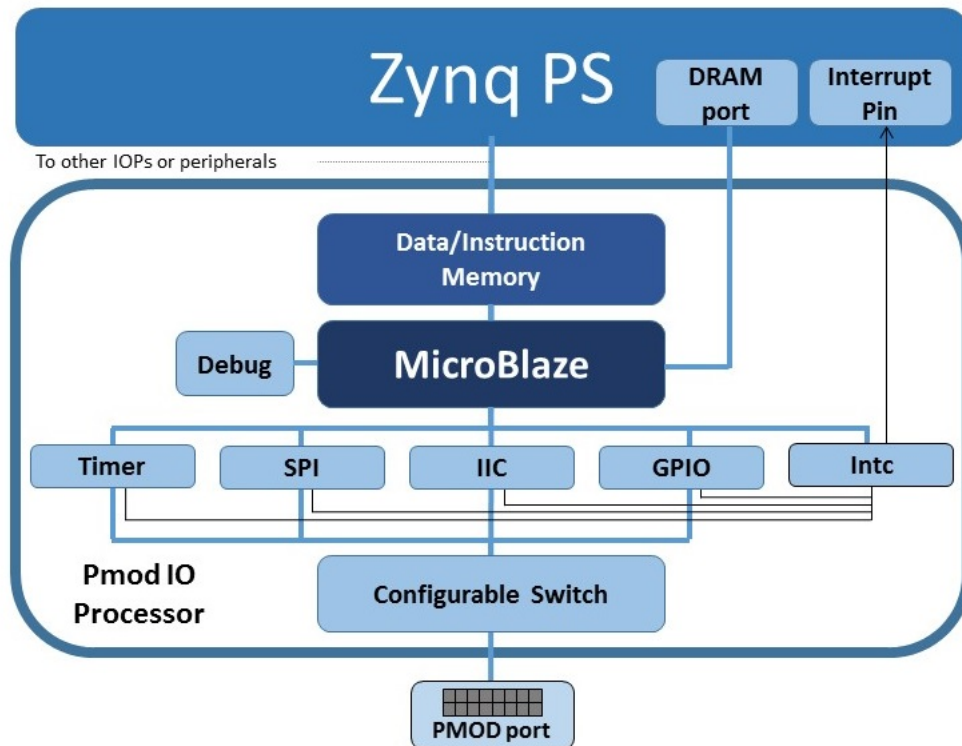

A list of drivers provided for Pmod peripherals can be found in the [pynq.lib.pmod Package](#) section.

Examples

In the [Base Overlay](#), two Pmod instances are available: PMODA and PMODB. After the overlay is loaded these instances can be accessed as follows:

```
from pynq.overlays.base import BaseOverlay
from pynq.lib import Pmod_Timer

base = BaseOverlay("base.bit")

pt = Pmod_Timer(base.PMODA, 0)
pt.stop()
```

More information about the Pmod subpackage, its components, and its API can be found in the [pynq.lib.pmod Package](#) section.


For more examples, see the notebooks in the following directory on the PYNQ-Z1 board:

```
<Jupyter Dashboard>/base/pmod/
```

2.5.6 Arduino


The Arduino subpackage is a collection of drivers for controlling peripherals attached to a Arduino port.

An Arduino connector can be used to connect to Arduino compatible shields to PL pins. Remember that appropriate controllers must be implemented in an overlay and connected to the corresponding pins before a shield can be used. Arduino pins can also be used as general purpose pins to connect to custom hardware using wires.

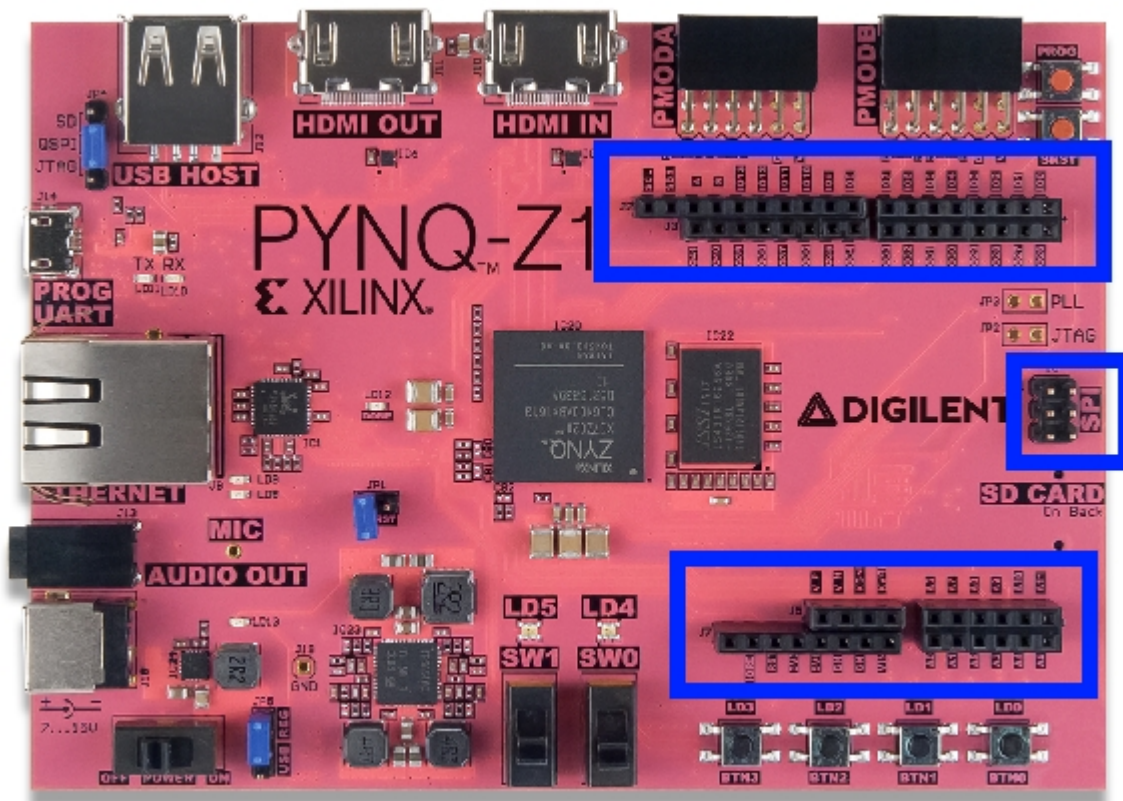

Block Diagram

An Arduino PYNQ MicroBlaze is available to control the Arduino interface, if provided. The Arduino PYNQ MicroBlaze is similar to the Pmod PYNQ MicroBlaze, with more AXI Controllers.

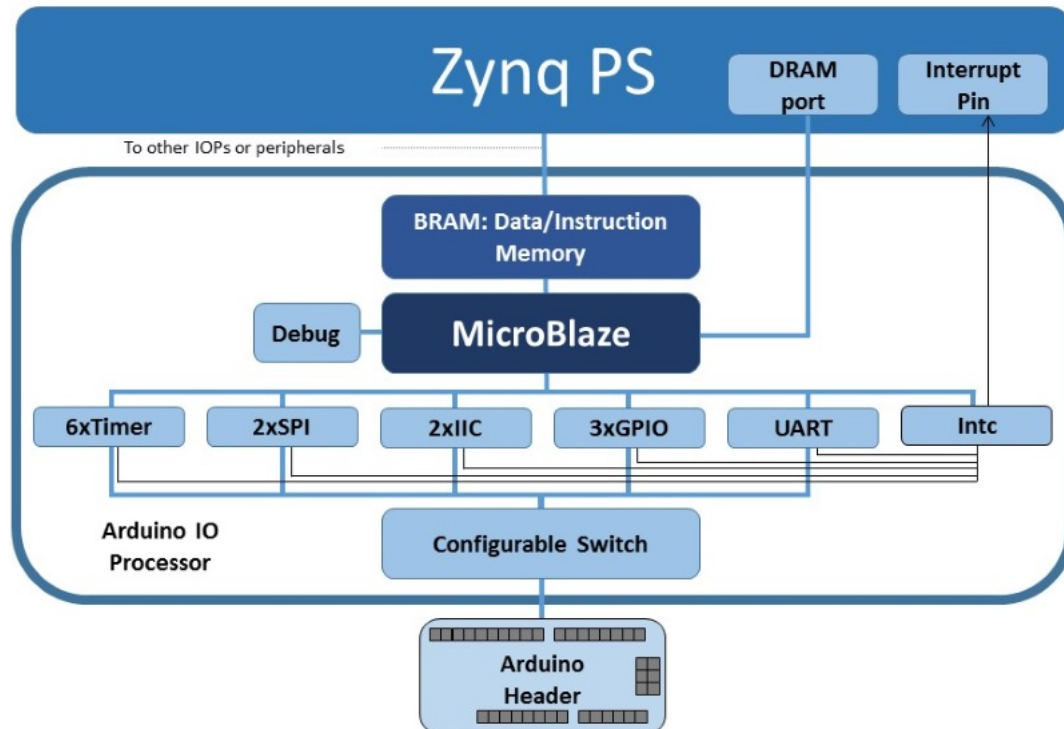

As indicated in the diagram, the Arduino PYNQ MicroBlaze has a PYNQ MicroBlaze Subsystem, a configurable switch, and the following AXI controllers:

- 2x AXI I2C
 - Frequency: 100KHz
 - Address mode: 7 bit
- 2x AXI SPI
 - Master mode
 - Transaction Width: 8
 - SCK Frequency: 6.25 MHz
 - FIFO Depth: 16

Note: One SPI controller is connected to the Arduino interface dedicated SPI pins.

- 3x AXI GPIO
 - 16 Input/Output pins total
- 6x AXI Timer
 - 32 bits
 - 1 Generate Output
 - 1 PWM Output
- 1x AXI UART
 - 9600 Baud

- 1x AXI XADC
 - 1V peak-to-peak *

Warning: Analog inputs are supported via the internal Xilinx XADC. This supports inputs of 1V peak-to-peak. Note that the Arduino interface supports 0-5V analog inputs which is not supported by Zynq without external circuitry.

| Peripheral | Pins |
|------------|--------------------------|
| UART | D0, D1 |
| I2C | A4, A5 |
| SPI* | D10 - D13 |
| PWM | D3, D5, D6, D9, D10, D11 |
| Timer | D3 - D6 and D8 - D11 |

Examples

In the *Base Overlay*, one Arduino PYNQ MicroBlaze instance is available. After the overlay is loaded this instance can be accessed as follows:

```
from pynq.overlays.base import BaseOverlay
from pynq.lib.arduino import Arduino_LCD18

lcd = Arduino_LCD18(base.ARDUINO)
lcd.clear()
```

More information about the Arduino subpackage, its components, and its API can be found in the *pynq.lib.arduino Package* section.

For more examples, see the notebooks in the following directory on the PYNQ-Z1 board:

```
<Jupyter Dashboard>/base/arduino/
```

2.5.7 Grove

The Grove peripherals can be accessed on Pmod pins using the *PYNQ Grove Adapter* and on Arduino pins using the *PYNQ Shield*.

Block Diagram

There are two connectors available to connect Grove peripherals to the PYNQ-Z1 Board.

Pmod


The first option for connecting Grove peripherals uses the Pmod PYNQ MicroBlaze.



Grove devices can be connected to PYNQ-Z1 through the Pmod ports using the *PYNQ Grove Adapter*.




On the *PYNQ Grove Adapter* G1 and G2 map to Pmod pins [0,4] and [1,5], which are connected to pins with pull-down resistors. Ports G1 and G2 support the SPI protocol, GPIO, and timer Grove peripherals, but not IIC peripherals. Ports G3 and G4 map to pins [2,6], [3,7], which are connected to pins with pull-up resistors and support the IIC protocol and GPIO peripherals.

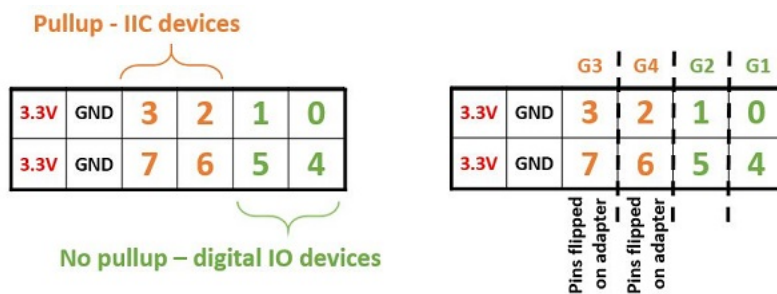


| Peripheral | Grove Port |
|------------|------------|
| I2C | G3, G4 |
| SPI | G1, G2 |

Arduino

The second option for connecting Grove peripherals uses the Arduino PYNQ MicroBlaze.

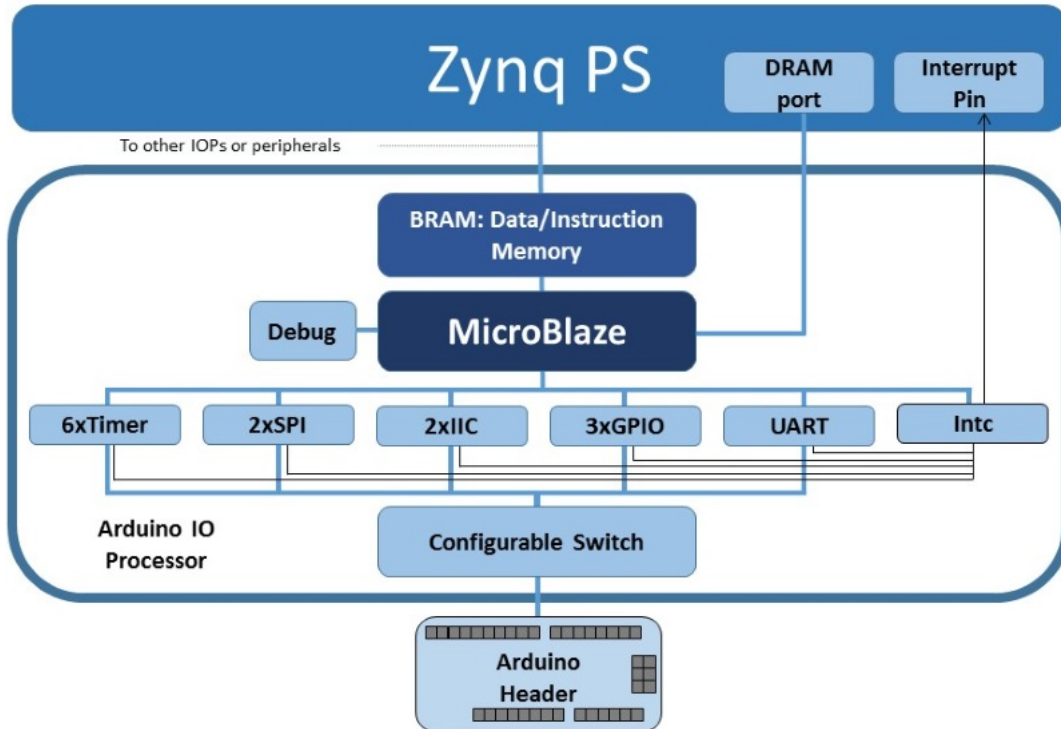

Grove devices can be connected to PYNQ-Z1 through the Arduino ports using the *PYNQ Shield*.

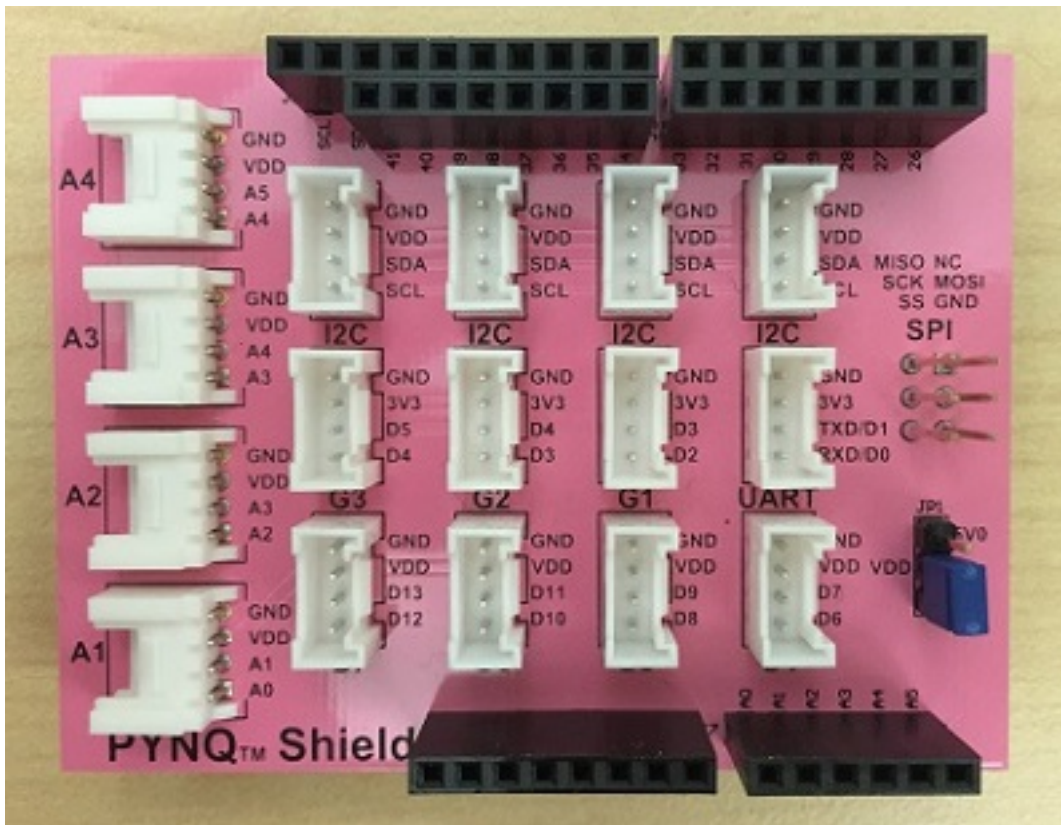

On the *PYNQ Shield* there are 4 IIC Grove connectors (labeled I2C), 8 vertical Grove Connectors (labeled G1-G7 and UART), and four horizontal Grove Connectors (labeled A1-A4). The SCL and SDA pins are connected to the SCL

and SDA pins on the Arduino header.

The following table maps Grove Ports to communication protocols.

| Peripheral | Grove Port |
|------------|---------------|
| UART | UART |
| I2C | A4, I2C (x4) |
| SPI | G7, G6 |
| GPIO | UART, G1 - G7 |

A list of drivers provided for Grove peripherals can be found in *pynq.lib.pmod Package* for the *PYNQ Grove Adapter* and in *pynq.lib.arduino Package* for the *PYNQ Shield*.

Examples

In *Base Overlay*, two Pmod instances are available: PMODA and PMODB. After the overlay is loaded, the Grove peripherals can be accessed as follows:

```
from pynq.overlays.base import BaseOverlay
from pynq.lib.pmod import Grove_Buzzer
from pynq.lib.pmod import PMOD_GROVE_G1

base = BaseOverlay("base.bit")

grove_buzzer = Grove_Buzzer(base.PMODB, PMOD_GROVE_G1)
grove_buzzer.play_melody()
```

More information about the Grove drivers in the Pmod subpackage, the supported peripherals, and APIs can be found in *pynq.lib.pmod Package*.

For more examples using the *PYNQ Grove Adapter*, see the notebooks in the following directory on the PYNQ-Z1 board:

```
<Jupyter Dashboard>/base/pmod/
```

In *Base Overlay*, one Arduino PYNQ MicroBlaze instance is available. After the overlay is loaded, the Grove peripherals can be accessed as follows:

```
from pynq.overlays.base import BaseOverlay
from pynq.lib.arduino import Grove_LEDbar
from pynq.lib.arduino import ARDUINO_GROVE_G4

base = BaseOverlay("base.bit")

ledbar = Grove_LEDbar(base.ARDUIINO, ARDUINO_GROVE_G4)
ledbar.reset()
```

More information about the Grove drivers in the Arduino subpackage, the supported peripherals, and APIs can be found in *pynq.lib.arduino Package*.


For more examples using the *PYNQ Shield*, see the notebooks in the following directory on the PYNQ-Z1 board:

```
<Jupyter Dashboard>/base/arduino/
```


2.5.8 Logictools

The logictools subpackage contains drivers for the Trace Analyzer, and the three PYNQ hardware generators: Boolean Generator, FSM Generator, and Pattern Generator.

Block Diagram

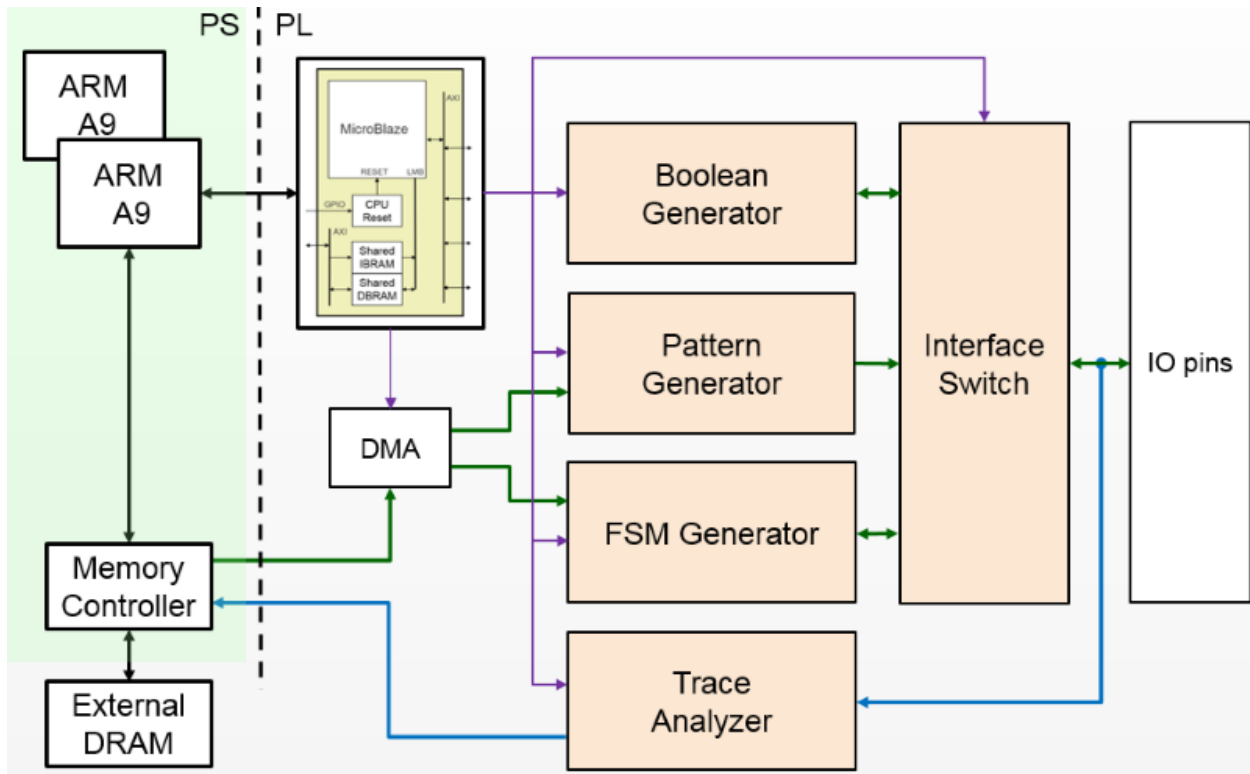


States

The basic operation of the main hardware blocks in the logictools overlay is the same. A set of methods which is common to all blocks is used to control basic operations, `setup()`, `run()`, `step()`, `stop()`, `reset()`. The operation of these methods will be described later.

Each block may have additional unique methods to provide functionality specific to that block.

The state diagram for the blocks is shown below:

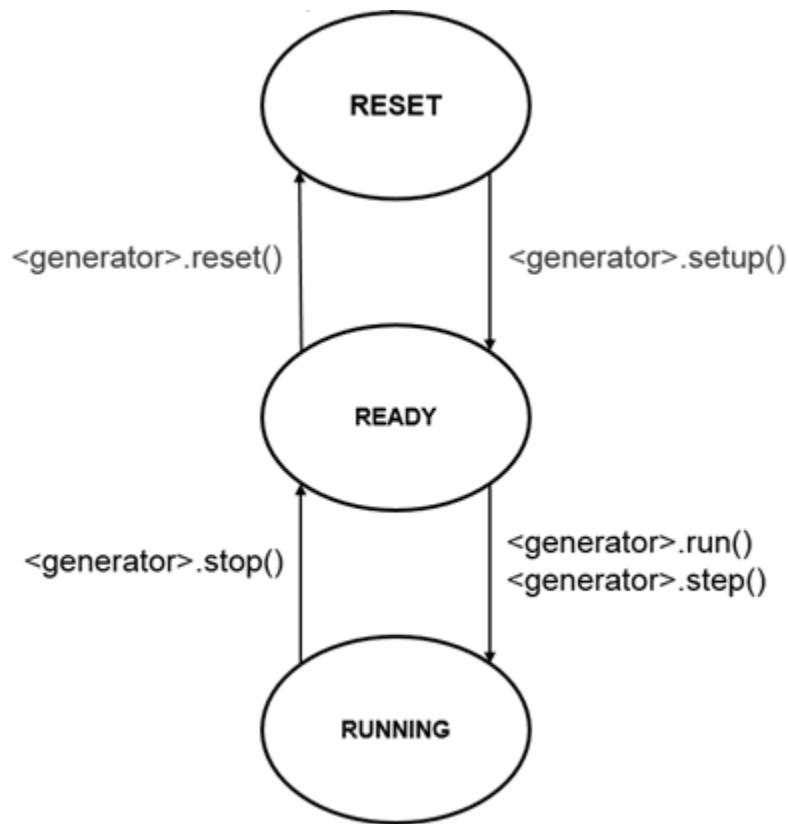

Any one of these hardware blocks, or any combination can be configured and run synchronously following the state diagram above.

RESET

This is the state a block will start in after the overlay is loaded. A block will remain in the reset state until it has been configured using the `setup()` method. It will return to this state if `reset()` is called.

In the reset state, all IO accessible to the logictools overlay are disconnected from the main logictools hardware blocks. This prevents the inadvertent driving of any external circuitry that is connected to the board. This is done by configuring the interface switch to disconnect all IO from the internal hardware.

The Pattern Generator contains BRAM to store the pattern to be generated. The BRAM is configured with zeros in this state.

Similarly, the FSM Generator configuration is stored in a BRAM which is also configured with zeros in this state.

READY

In this state, the generators / analyzer have been configured. The input and output pins that will be connected have been specified, and reserved, but the interface switch has not been configured to connect these pins to the internal hardware.

RUNNING

Once the generators are in the ready state, calling `run()` or `step()` will move them to the READY state. When moving to this state, the interface switch is configured to connect external IO. The hardware block(s) will start operating in

this state.

Running will start the block running in single-shot mode by default. In this mode, the generator will run until enough number of samples are captured by the trace analyzer, or the pattern has completed; then the generator and analyzer both go back to the READY state.

Boolean Generator always runs in continuous mode as a special case.

In continuous mode, the Pattern Generator generates its pattern continuously, looping back to the start when it reaches the end of the pattern. The FSM Generator will continue to run until it is stopped.

Methods

Each generator / analyzer has the following methods:

- `setup()` - configure the block and prepare Interface Switch configuration
- `run()` - connect IO and start the block running
- `stop()` - disconnect IO and stop the block running
- `step()` - run a single step for the pattern or FSM generator
- `reset()` - clear the block configuration
- `trace()` - enable/disable trace

setup()

Each block must be configured using the `setup()` method before it can be used. This defines a configuration for the block, and the configuration for the Interface Switch to connect the external IO. Note that the configuration is defined, but the IO are not connected during setup.

run()

The `run()` method will move a block to the *RUNNING* state and the block will start operating. The specified number of samples will be captured by the Trace Analyzer.

step()

The `step()` method is similar to `run()`, but instead of running, all the generators are single stepped (advanced one clock cycle) each time the *step* method is called.

When stepping the Pattern Generator, it will step until the end of the configured pattern. It will not loop back to the beginning.

The FSM Generator can be single stepped until a enough samples are captured by the Trace Analyzer.

stop()

If a block is running, it must be stopped before re-running.

Once a block is stopped, its outputs are disconnected from the external IO, and will only be reconnected when the block is set to run again.

trace()

Trace is enabled by default for each block. When trace is enabled, the Trace Analyzer will capture trace data for all connected blocks. The `trace()` method can be used to enable/disable the Trace Analyzer for each block.


reset()

This method resets the generator to its initial state. This method needs to be called before changing the configuration for a hardware block.

Boolean Generator

The Boolean Generator supports up to Boolean functions of up to five inputs on each output pin. AND, OR, NOT, and XOR operators are supported.

Block Diagram

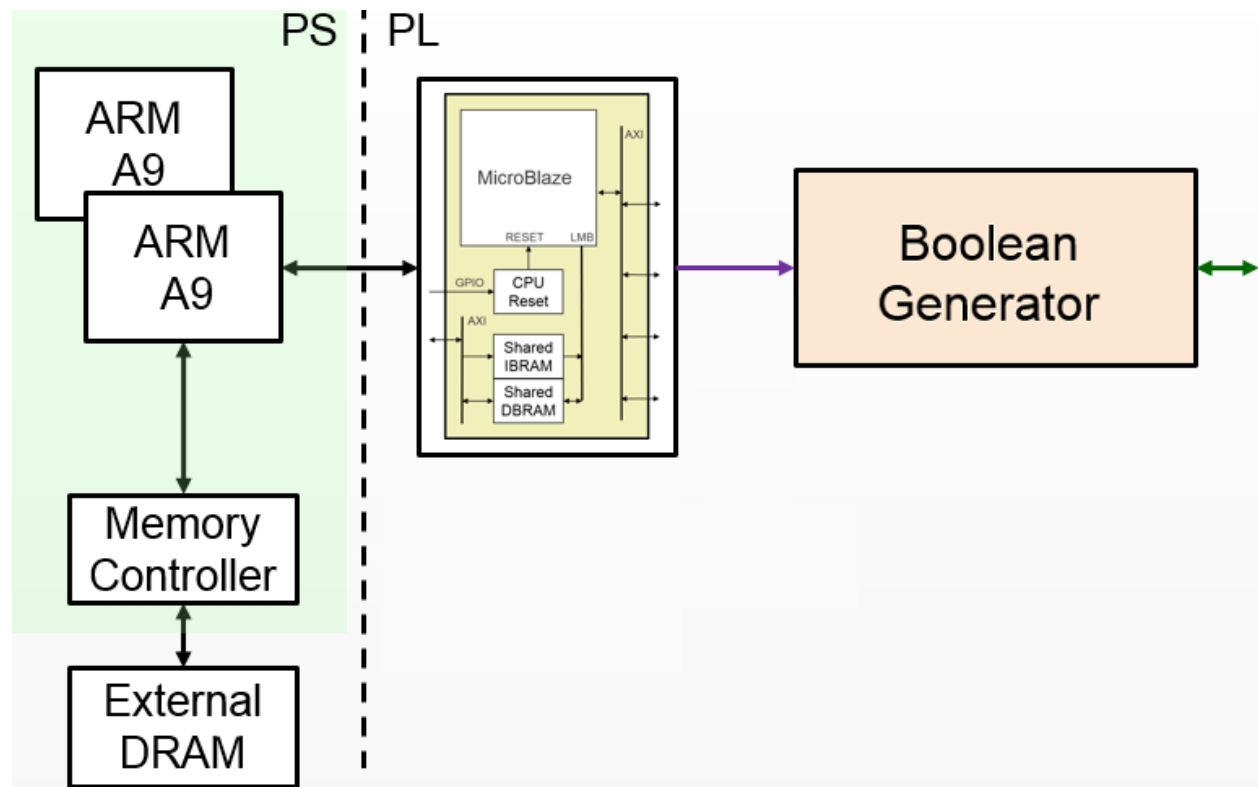

On the PYNQ-Z1 the 20 digital pins of the Arduino shield interface (D0 - D19) can be used as inputs or outputs. The 4 pushbuttons (PB0 - PB3) can be used as additional inputs, and the 4 user LEDs (LD0 - LD3) can be used as additional outputs. This gives a maximum of 24 inputs and outputs available to the Boolean Generator, supporting up to 24 Boolean functions.

Boolean functions are specified, as strings.

For example the following specifies that the values of pushbuttons 1 and 0 are XORed to produce the value on LED0:

```
'LD0 = PB0 ^ PB1'
```

Combinatorial Boolean expressions can be defined in a Python list using the expressions & (AND), | (OR), ! (NOT), ^ (XOR).

The expression defines if a pin is used as an input or output.

Examples

The following list defines four combinatorial functions on pins D8-11, which are built using combinatorial functions made up of inputs from pins D0-D3. Any pin assigned a value is an output, and any pin used as a parameter in the expression is an input. If a pin is defined as an output, it cannot be used as an input.

```
from pynq.overlays.logictools import LogicToolsOverlay

logictools = LogicToolsOverlay('logictools.bit')
boolean_generator = logictools.boolean_generator

function_specs = ['D3 = D0 ^ D1 ^ D2']
function_specs.append('D6 = D4 & D5')
```

The function configurations can also be labelled:

```
function_specs = {'f1': 'D3 = D0 ^ D1 ^ D2',
                  'f2': 'D6 = D4 & D5'}
```

Once the expressions have been defined, they can be passed to the BooleanGenerator function.

```
boolean_generator.setup(function_specs)
```

```
boolean_generator.run()
```

To disconnect the IO pins, stop it.

```
boolean_generator.stop()
```

If users want to use a different configuration, before calling `setup()` again, users have to call `reset()`; this will clear all the reservations on the currently used pins.

```
boolean_generator.reset()
```

More information about the Boolean Generator module and its API can be found in the [pynq.lib.logictools Package](#) section.


For more examples see the Logictools Notebooks folder on the Pynq-Z1 board in the following directory:

```
<Jupyter Home>/logictools/
```

Pattern Generator

The Pattern Generator allows arbitrary digital patterns to be streamed to IO. This can be used to test or control external circuits or devices.

Block Diagram

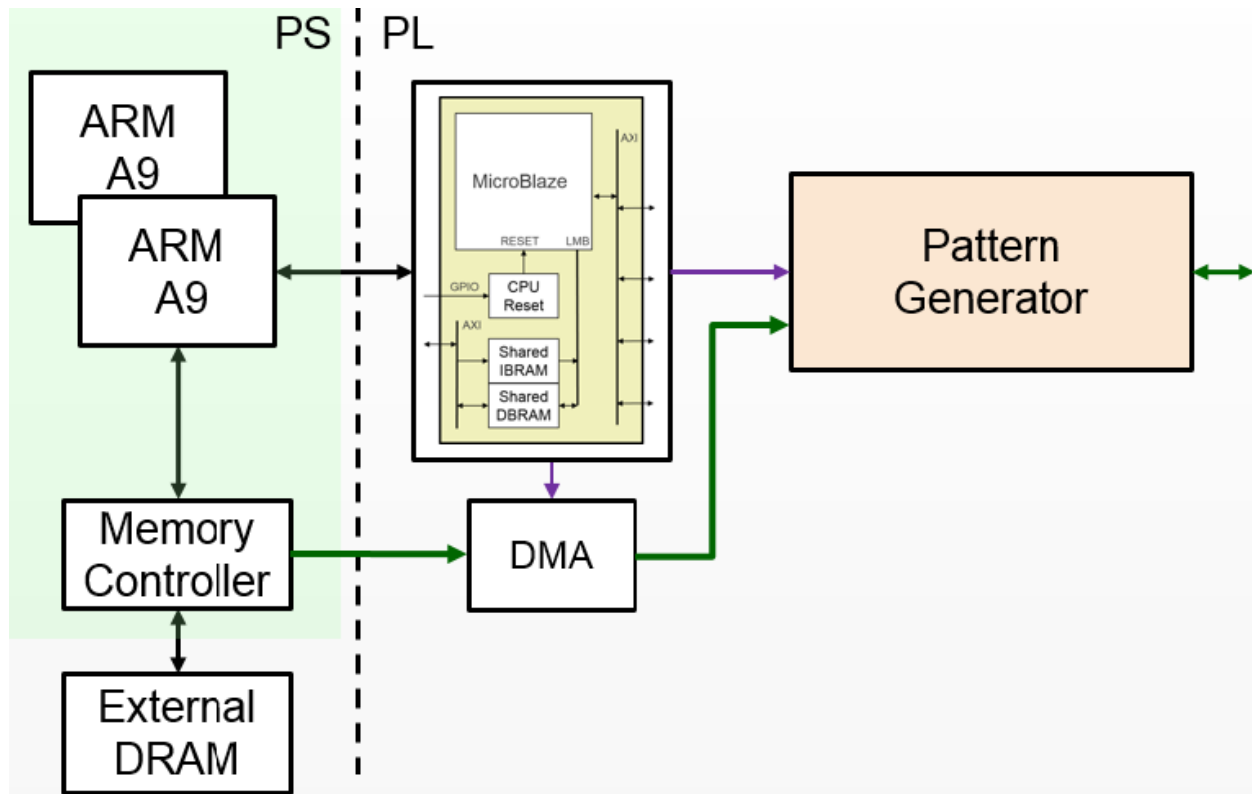

The Pattern Generator supports up to 64K pattern words. Though the memory is 32-bits wide, only least significant 20 bits are used which are routed to the Arduino pins. A data word is generated once every rising edge of the sample clock.

The sample clock is programmable. The minimum sample clock speed is 252 KHz, and the maximum speed is 10 MHz.

The Pattern Generator class is instantiated by importing it from the `logictools` sub-package.

Examples

```
from pynq.overlays.logictools import LogicToolsOverlay

logictools = LogicToolsOverlay('logictools.bit')

pattern_generator = logictools.pattern_generator
```

More information about the Pattern Generator module and its API can be found in the [pynq.lib.logictools Package](#) section.


For more examples see the Logictools Notebooks folder on the Pynq-Z1 board in the following directory:

```
<Jupyter Home>/logictools/
```

FSM Generator

The Finite State Machine (FSM) Generator can generate a finite state machine in programmable hardware from a Python description.

Block Diagram

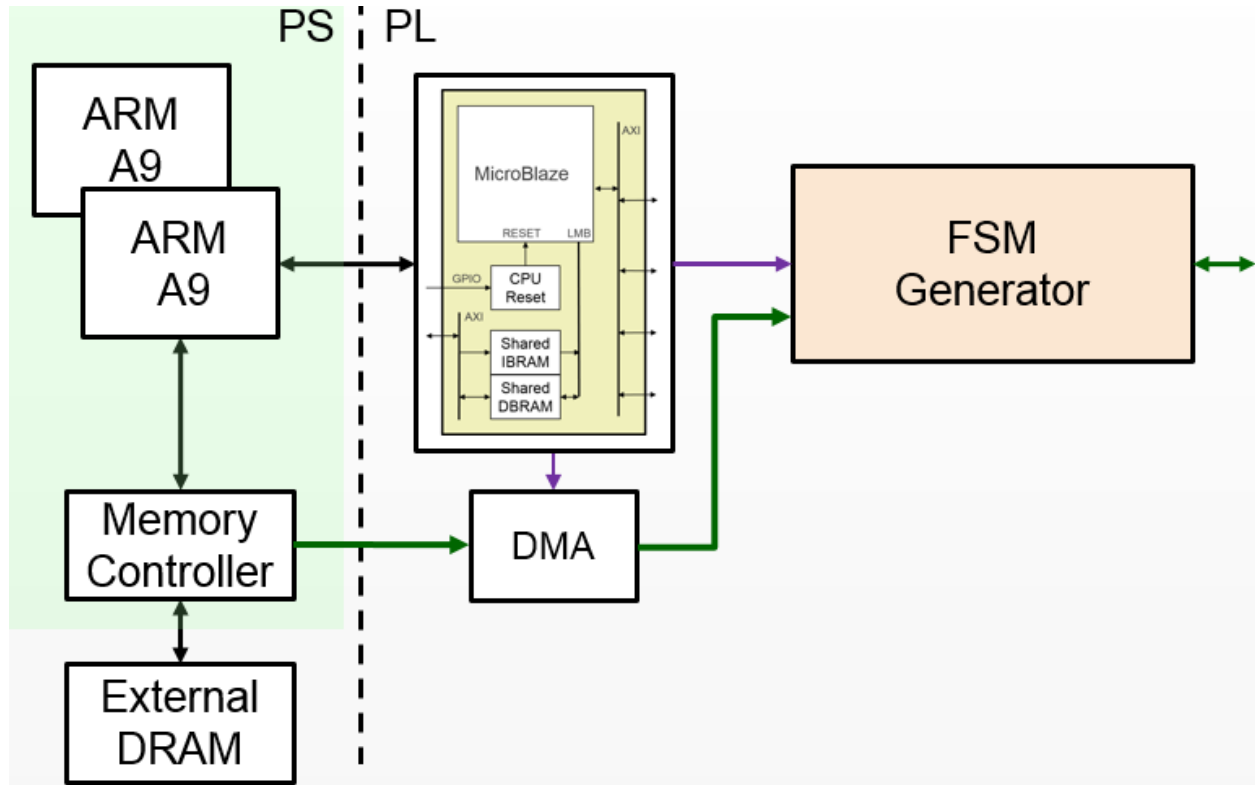

The FSM generator has an internal Block Memory which implements the finite state machine. The 20 pins on the Arduino shield header are available. The FSM must have a minimum of 1 input, allowing a maximum of 19 outputs. The maximum number of inputs is 8. For example, based on the number of inputs, the following configurations are available:


| # Inputs | Max # States | Max # Outputs |
|----------|--------------|---------------|
| 8 | 31 | 12 |
| 7 | 63 | 13 |
| 6 | 127 | 14 |
| 5 | 255 | 15 |
| 4 | 511 | 16 |

The Trace Analyzer is controlled by a MicroBlaze subsystem. It is connected to a DMA, also controlled by the MicroBlaze subsystem which is used to load configuration information, including the Block Memory configuration to implement the FSM.

The configuration for the FSM, Input pins, output pins, internal states, and state transitions, can be specified in a text format.

Examples

```
fsm_spec = {'inputs': [('reset', 'D0'), ('direction', 'D1')],
            'outputs': [('bit2', 'D3'), ('bit1', 'D4'), ('bit0', 'D5')],
            'states': ['S0', 'S1', 'S2', 'S3', 'S4', 'S5', 'S6', 'S7'],
            'transitions': [['01', 'S0', 'S1', '000'],
                           ['00', 'S0', 'S7', '000'],
                           ['01', 'S1', 'S2', '001'],
                           ['00', 'S1', 'S0', '001'],
                           ['01', 'S2', 'S3', '011'],
                           ['00', 'S2', 'S1', '011'],
                           ['01', 'S3', 'S4', '010'],
                           ['00', 'S3', 'S2', '010'],
                           ['01', 'S4', 'S5', '110'],
                           ['00', 'S4', 'S3', '110'],
                           ['01', 'S5', 'S6', '111'],
                           ['00', 'S5', 'S4', '111'],
                           ['01', 'S6', 'S7', '101'],
                           ['00', 'S6', 'S5', '101'],
                           ['01', 'S7', 'S0', '100'],
                           ['00', 'S7', 'S6', '100'],
                           ['1-', '*', 'S0', '']]}
```

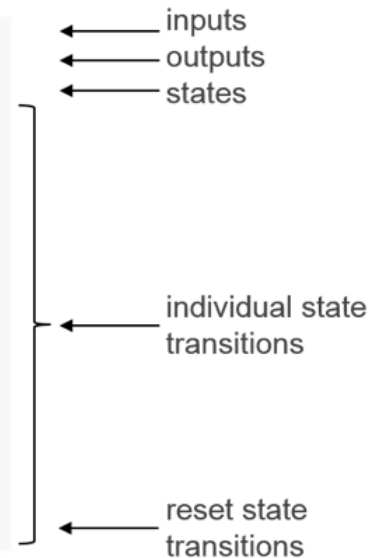


The FSM specification is passed to the `setup()`. The `run()` method can then be used to start the FSM.

The FSM Generator can be used in a similar way to the other generators.

Two additional methods are available to show the FSM state diagram in a notebook, and to display the waveform from the FSM.

```
show_state_diagram()
show_waveform()
```

Example of a state diagram:

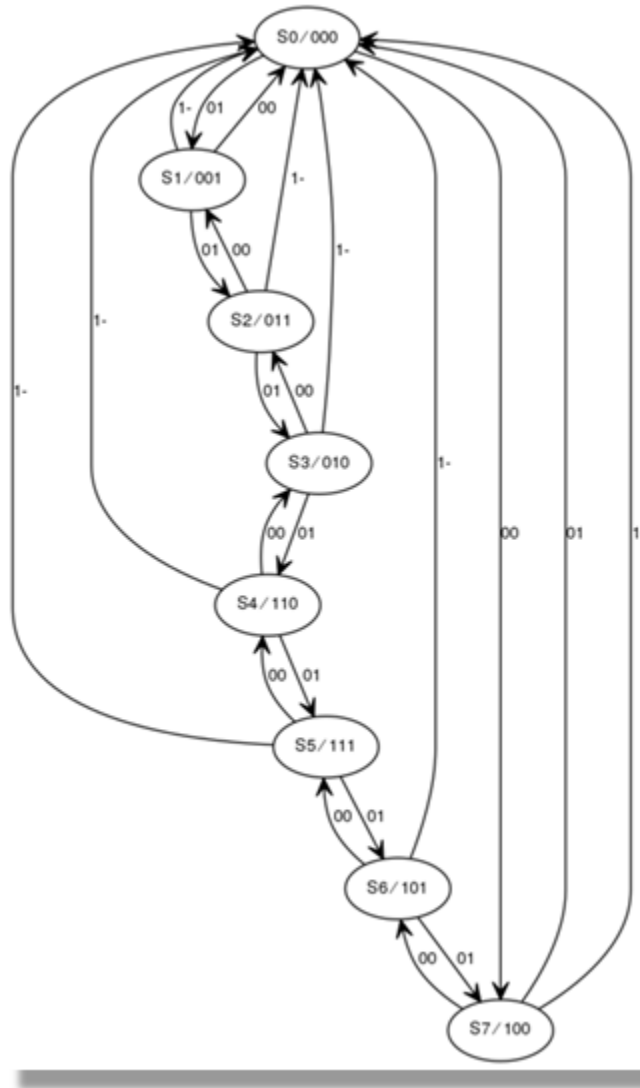

More information about the FSM Generator module and its API can be found in the [pynq.lib.logictools Package](#) section.

For more examples see the Logictools Notebooks folder on the Pynq-Z1 board in the following directory:

```
<Jupyter Home>/logictools/
```

Trace Analyzer


Traditional on-chip debug allows FPGA resources to be used to monitor internal or external signals in a design for debug. The debug circuitry taps into signals in a design under test, and saves the signal data as the system is operating. The debug data is saved to on-chip memory, and can be read out later for offline debug and analysis. One of the limitations of traditional on-chip debug is that amount of local memory usually available on chip is relatively small. This means only a limited amount of debug data can be captured (typically a few Kilobytes).

The on-chip debug concept has been extended to allow trace debug data to be saved to DDR memory. This allows more debug data to be captured. The data can then be analyzed using Python.

The trace analyzer monitors the external PL Input/Output Blocks (IOBs) on the PMOD and Arduino interfaces. The

IOBs are tri-state. This means three internal signals are associated with each pin; an input (I), and output (O) and a tri-state signal (T). The Tri-state signal controls whether the pin is being used as an input or output. The trace analyzer is connected to all 3 signals for each IOP (PMOD and Arduino).

Block Diagram

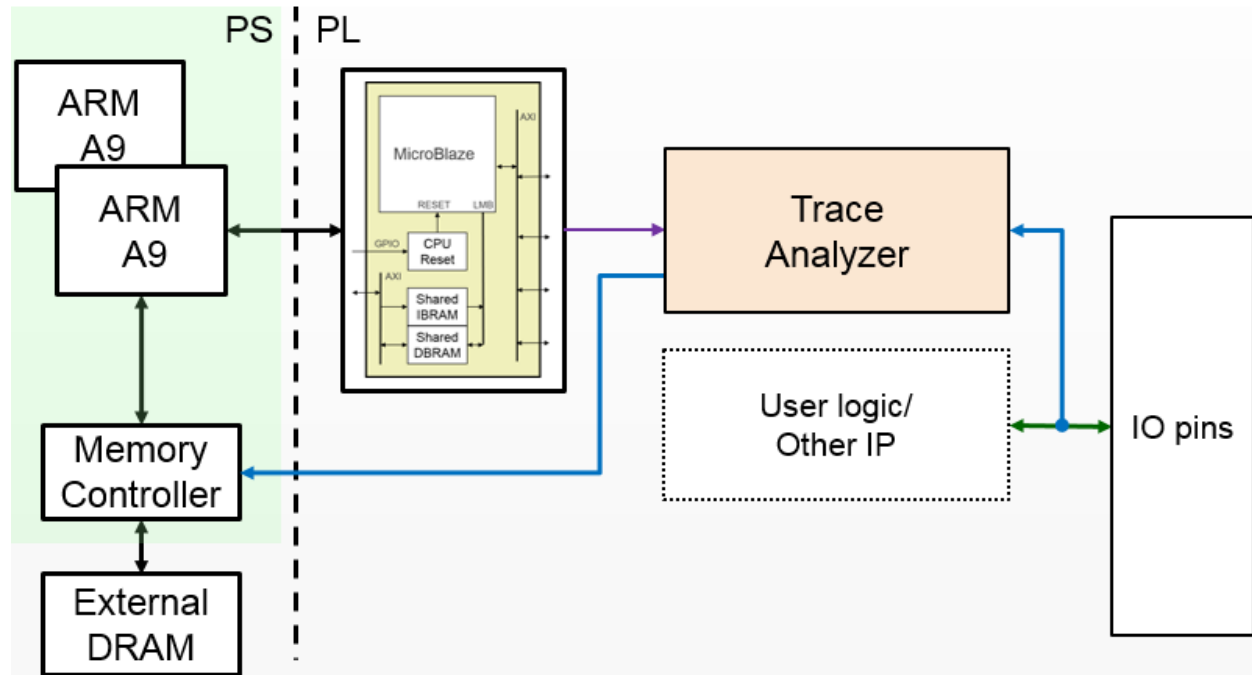

This allows the trace analyzer to read the tri-state, determine if the IOB is in input, or output mode, and read the appropriate trace data.

Examples

More information about the Trace Analyzer module and its API can be found in the [pynq.lib.logictools Package](#) section.

For more examples see the Logictools Notebooks folder on the Pynq-Z1 board in the following directory:

```
<Jupyter Home>/logictools/
```

2.6 Overlay Design Methodology

As described in the PYNQ introduction, overlays are analogous to software libraries. A programmer can download overlays into the Zynq® PL at runtime to provide functionality required by the software application.

An *overlay* is a class of Programmable Logic design. Programmable Logic designs are usually highly optimized for a specific task. Overlays however, are designed to be configurable, and reusable for broad set of applications. A PYNQ overlay will have a Python interface, allowing a software programmer to use it like any other Python package.

A software programmer can use an overlay, but will not usually create overlay, as this usually requires a high degree of hardware design expertise.

There are a number of components required in the process of creating an overlay:

- Board Settings
- PS-PL Interface
- MicroBlaze Soft Processors
- Python/C Integration
- Python AsyncIO
- Python Overlay API
- Python Packaging

This section will give an overview of the process of creating an overlay and integrating it into PYNQ, but will not cover the hardware design process in detail. Hardware design will be familiar to Zynq, and FPGA hardware developers.

2.6.1 Overlay Design

An overlay consists of two main parts; the PL design (bitstream) and the project block diagram Tcl file. Overlay design is a specialized task for hardware engineers. This section assumes the reader has some experience with digital design, building Zynq systems, and with the Vivado design tools.

PL Design

The Xilinx® Vivado software is used to create a Zynq design. A *bitstream* or *binary* file (.bit file) will be generated that can be used to program the Zynq PL.

A free WebPack version of Vivado is available to build overlays. <https://www.xilinx.com/products/design-tools/vivado/vivado-webpack.html>

The hardware designer is encouraged to support programmability in the IP used in a PYNQ overlays. Once the IP has been created, the PL design is carried out in the same way as any other Zynq design. IP in an overlay that can be controlled by PYNQ will be memory mapped, connected to GPIO. IP may also have a master connection to the PL. PYNQ provides Python libraries to interface to the PL design and which can be used to create their own drivers. The Python API for an overlay will be and will be covered in the next sections.

Overlay Tcl file

The Tcl from the Vivado IP Integrator block design for the PL design is used by PYNQ to automatically identify the Zynq system configuration, IP including versions, interrupts, resets, and other control signals. Based on this information, some parts of the system configuration can be automatically modified from PYNQ, drivers can be automatically assigned, features can be enabled or disabled, and signals can be connected to corresponding Python methods.

The Tcl file must be generated and provided with the bitstream file as part of an overlay. The Tcl file can be generated in Vivado by *exporting* the IP Integrator block diagram at the end of the overlay design process. The Tcl file should be provided with a bitstream when downloading an overlay. The PYNQ PL class will automatically parse the Tcl.

A custom, or manually created Tcl file can be used to build a Vivado project, but Vivado should be used to generate and export the Tcl file for the block diagram. This automatically generated Tcl should ensure that it can be parsed correctly by the PYNQ.

To generate the Tcl for the Block Diagram from the Vivado GUI:

- Click **File > Export > Block Design**

Or, run the following in the Tcl console:

```
write_bd_tcl
```

The Tcl filename should match the .bit filename. For example, *my_overlay.bit* and *my_overlay.tcl*.

The Tcl is parsed when the overlay is instantiated and downloaded.

```
from pynq import Overlay
ol = Overlay("base.bit") # Tcl is parsed here
```

An error will be displayed if a Tcl is not available when attempting to download an overlay, or if the Tcl filename does not match the .bit file name.

Programmability

An overlay should have post-bitstream programmability to allow customization of the system. A number of reusable PYNQ IP blocks are available to support programmability. For example, a PYNQ MicroBlaze can be used on Pmod, and Arduino interfaces. IP from the various overlays can be reused to provide run-time configurability.

Zynq PS Settings

A Vivado project for a Zynq design consists of two parts; the PL design, and the PS configuration settings.

The PYNQ image which is used to boot the board configures the Zynq PS at boot time. This will fix most of the PS configuration, including setup of DRAM, and enabling of the Zynq PS peripherals, including SD card, Ethernet, USB and UART which are used by PYNQ.

The PS configuration also includes settings for system clocks, including the clocks used in the PL. The PL clocks can be programmed at runtime to match the requirements of the overlay. This is managed automatically by the PYNQ Overlay class.

During the process of downloading a new overlay, the clock configuration will be parsed from the overlay's Tcl file. The new clock settings for the overlay will be applied automatically before the overlay is downloaded.

Existing Overlays

Existing overlays can be used as a starting point to create a new overlay. The *base* overlay can be found in the *boards* directory in the PYNQ repository, and includes reference IP for peripherals on the board:

```
<PYNQ repository>/boards/Pynq-Z1/base
```

A makefile exists in each folder that can be used to rebuild the Vivado project and generate the bitstream and Tcl for the overlay. (On windows, instead of using *make*, the Tcl file can be sourced from Vivado.)

The bitstream and Tcl for the overlay are available on the board, and also in the GitHub project repository:

```
<PYNQ repository>/boards/Pynq-Z1/base
```

2.6.2 Board Settings

For information on the board, see the [Digilent PYNQ-Z1 webpage](#)

Base overlay project

The source files for the *base* overlay can be found in the PYNQ GitHub. The project can be rebuilt using the make-file/TCL available here:

```
<GitHub repository>/boards/Pynq-Z1/base
```

The base design can be used as a starting point to create a new design.

Vivado board files

Vivado board files contain the configuration for a board that is required when creating a new project in Vivado.

- [Download the PYNQ-Z1 board files](#)

Installing these files in Vivado, allows the board to be selected when creating a new project. This will configure the Zynq PS settings for the PYNQ-Z1.

To install the board files, extract, and copy the board files folder to:

```
<Xilinx installation directory>\Vivado\<version>\data\boards
```

If Vivado is open, it must be restart to load in the new project files before a new project can be created.

Pynq-Z1 XDC constraints file

- [Download the PYNQ-Z1 Master XDC constraints](#)

2.6.3 PS/PL Interfaces


There are four `pynq` classes that are used to manage data movement between the Zynq PS (including the PS DRAM) and PL.

- MMIO - Memory Mapped IO
- Xlnk - Memory allocation
- DMA - Direct Memory Access
- GPIO - General Purpose Input/Output

The class used depends on the Zynq PS interface the IP is connected to, and the interface of the IP. For more information on these classes, please refer to [PYNQ Libraries](#).

GPIO

There are also GPIO, which are simple wires between PS and PL.

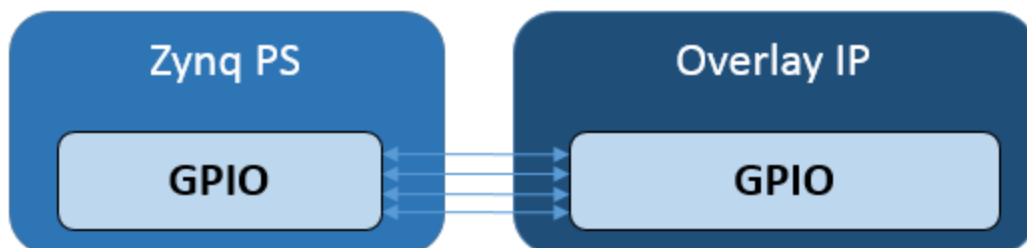

GPIO wires from the PS can be used as a very simple way to communicate between PS and PL. For example, GPIO can be used as control signals for resets, or interrupts.

MMIO

MMIO can be used read/write a memory mapped location. A MMIO read or write command can transfer 32 bits of data. MMIO is most appropriate for reading and writing small amounts of data.

The following example sets up an MMIO instance to access memory location from the `IP_BASE_ADDRESS` (`0x40000000`) to the `IP_BASE_ADDRESS + ADDRESS_RANGE` (`0x40001000`).

Some data (e.g. `0xdeadbeef`) is sent to location `ADDRESS_OFFSET` (`0x10`). `ADDRESS_OFFSET` is offset from the IP base address `IP_BASE_ADDRESS`. This means `0xdeadbeef` will be written to `0x40000010`.

The same location is then read and stored in `result`.

```
IP_BASE_ADDRESS = 0x40000000
ADDRESS_RANGE = 0x1000
ADDRESS_OFFSET = 0x10

from pynq import MMIO
mmio = MMIO(IP_BASE_ADDRESS, ADDRESS_RANGE)

data = 0xdeadbeef
self.mmio.write(ADDRESS_OFFSET, data)
result = self.mmio.read(ADDRESS_OFFSET)
```

This example assumes the memory mapped area defined for the MMIO, from `0x40000000` to `0x40001000`, is accessible to the PS.

Xlnk

Memory must be allocated before it can be accessed by the IP. Xlnk allows memory buffers to be allocated. Xlnk allocates a contiguous memory buffer which allows efficient transfers of data between PS and PL. Python or other code running in Linux on the PS can access the memory buffer directly.

As PYNQ is running Linux, the buffer will exist in the Linux virtual memory. The Zynq AXI Slave ports allow an AXI-master IP in an overlay to access physical memory. Xlnk can also provide the physical memory pointer to the buffer which can be sent to an IP in the overlay. The physical address is stored in the `physical_address` property of the allocated memory buffer instance. An IP in an overlay can then access the same buffer using the physical address.

For example, a program running on a MicroBlaze processor in an overlay may need to write data to main memory so that it could be read in Python. First, the memory can be allocated in Linux using Xlnk. Then the physical pointer is sent to the MicroBlaze, and finally the MicroBlaze program can write data to the memory buffer using the pointer.

Xlnk can allocate arrays using the Python NumPy package. This allows the data type, and size/shape of the array to be specified using NumPy.

Xlnk is also used implicitly by the DMA class to allocate memory.

Create an Xlnk instance and use `cma_array()` to allocate a *unsigned 32-bit int* contiguous block of memory of 5 elements:

Allocating the memory buffer:

```
from pynq import Xlnk
import numpy as np

xlnk = Xlnk()
input_buffer = xlnk.cma_array(shape=(5,), dtype=np.uint32)
```

physical_address property of the memory buffer:

```
input_buffer.physical_address
```

Writing data to the buffer:

```
for i in range(5):
    input_buffer[i] = i

# Input buffer: [0 1 2 3 4]
```

DMA

The pynq DMA class supports the [AXI Direct Memory Access IP](#). This allows data to be read from DRAM, and sent to an AXI stream, or received from a stream and written to DRAM.

This example assumes the overlay contains two AXI Direct Memory Access IP, one with a read channel from DRAM, and an AXI Master stream interface (for an output stream), and the other with a write channel to DRAM, and an AXI Slave stream interface (for an input stream). The two DMAs are connected in a loopback configuration through an AXI FIFO.

In the Python code, two DMA instances are created, one for sending data, and the other for receiving.

Two memory buffers, one for input, and the other for output are allocated.

```
import pynq.lib.dma
from pynq import Xlnk
import numpy as np

xlnk = Xlnk()

dma_send = ol.axi_dma_from_ps_to_pl
dma_recv = ol.axi_dma_from_pl_to_ps

input_buffer = xlnk.cma_array(shape=(5,), dtype=np.uint32)
output_buffer = xlnk.cma_array(shape=(5,), dtype=np.uint32)
```

Write some data to the array:

```
for i in range(5):
    input_buffer[i] = i
# Input buffer: [0 1 2 3 4]
```

Transfer the input_buffer to the *send* DMA, and read back from the *recv* DMA to the output buffer. The `wait()` method ensures the DMA transactions have complete.

```
dma_send.sendchannel.transfer(input_buffer)
dma_recv.recvchannel.transfer(output_buffer)
dma_send.sendchannel.wait()
dma_recv.recvchannel.wait()
```

```
# Output buffer: [0 1 2 3 4]
```

Interrupt

Finally there are dedicated interrupts which are linked with asyncio events in the python environment. To integrate into the PYNQ framework Dedicated interrupts must be attached to an AXI Interrupt controller which is in turn attached to the first interrupt line to the processing system. If more than 32 interrupts are required then AXI interrupt controllers can be cascaded. This arrangement leaves the other interrupts free for IP not controlled by PYNQ directly such as SDSoC accelerators.

The `Interrupt` class represents a single interrupt pin in the block design. It mimics a python `Event` by having a single `wait` function that blocks until the interrupt is raised. The event will be cleared automatically when the interrupt is cleared. To construct an event, pass in fully qualified path to the pin in the block diagram, e.g. `'my_ip/interrupt'` as the only argument.

An interrupt is only enabled for as long there is a thread or coroutine waiting on the corresponding event. The recommended approach to using interrupts is to wait in a loop, checking and clearing the interrupt registers in the IP before resuming the wait. As an example, the `AxiGPIO` class uses this approach to wait for a desired value to be present.

```
class AxiGPIO(DefaultIP):
    # Rest of class definition

    def wait_for_level(self, value):
        while self.read() != value:
            self._interrupt.wait()
            # Clear interrupt
            self._mmio.write(IP_ISR, 0x1)
```

The implementation is built on top of asyncio, a newly added part of the python standard library. For more details on asyncio, how it can be used with PYNQ see the asyncio section of this documentation.

2.6.4 PYNQ MicroBlaze Subsystem

The PYNQ MicroBlaze subsystem gives flexibility to support a wide range of hardware peripherals from Python. The PYNQ MicroBlaze is intended as an offload processor, and can deal with the low level communication protocols and data processing and provides data from a sensor that can be accessed from Python. The subsystem is deterministic, and is suitable for real-time control.

MicroBlaze applications will typically be developed in C or C++, and will run bare-metal.

The following sections show how to develop applications for the MicroBlaze soft processors running inside an overlay.

Memory Architecture

Each PYNQ MicroBlaze has local memory (implemented in Xilinx BRAMs) and a connection to the PS DDR memory.

The PYNQ MicroBlaze instruction and data memory is implemented in a dual port Block RAM, with one port connected to the PYNQ MicroBlaze, and the other to the ARM processor. This allows an executable binary file to be written from the ARM to the PYNQ MicroBlaze instruction memory. The PYNQ MicroBlaze can also be reset by the ARM, allowing the PYNQ MicroBlaze to start executing the new program.

The PYNQ MicroBlaze data memory, either in local memory, or in DDR memory, can be used as a mailbox for communication and data exchanges between the ARM processor and the PYNQ MicroBlaze.

DDR memory is managed by the Linux kernel running on the Cortex-A9s. Therefore, the PYNQ MicroBlaze must first be allocated memory regions to access DRAM. The PYNQ `Xlnk()` class is used to allocate memory in Linux. It also provides the physical address of the memory. A PYNQ applications can send the physical address to a PYNQ MicroBlaze, and the PYNQ MicroBlaze can then access the buffer.

DDR Memory

The PYNQ MicroBlazes are connected to the DDR memory via the General Purpose AXI slave port. This is a direct connection, so it is only suitable for simple data transfers from the PYNQ MicroBlaze. The MicroBlaze can attempt to read or write the DDR as quickly as possible in a loop, but there is no support for bursts, or streaming data.

PYNQ MicroBlaze Memory Map

The local PYNQ MicroBlaze memory is 64KB of shared data and instruction memory. Instruction memory for the PYNQ MicroBlaze starts at address 0x0.

Pynq and the application running on the PYNQ MicroBlaze can write to anywhere in the shared memory space. You should be careful not to write to the instruction memory unintentionally as this will corrupt the running application.

When building the MicroBlaze project, the compiler will only ensure that *allocated* stack and heap of the application fit into the BRAM and DDR if used. For communication between the ARM and the MicroBlaze, a part of the shared memory space must also be reserved within the MicroBlaze address space.

There is no memory management in the PYNQ MicroBlaze. You must ensure the application, including stack and heap, do not overflow into the defined data area. Remember that declaring a stack and heap size only allocates space to the stack and heap. No boundary is created, so if sufficient space was not allocated, the stack and heap may overflow and corrupt your application.

If you need to modify the stack and heap for an application, the linker script can be found in the `<project_directory>/src/` directory.

It is recommended to follow the same convention for data communication between the two processors via a MAILBOX.

| | |
|-----------------------------------|--------|
| Instruction and data memory start | 0x0 |
| Instruction and data memory size | 0xf000 |
| Shared mailbox memory start | 0xf000 |
| Shared mailbox memory size | 0x1000 |
| Shared mailbox Command Address | 0xfffc |

These MAILBOX values for a PYNQ MicroBlaze application are defined here:

```
<PYNQ repository>/boards/ip/pmod_io_switch_1.0/drivers/ \
pmod_io_switch_v1_0/src/pmod.h
<PYNQ repository>/boards/ip/arduino_io_switch_1.0/drivers/ \
arduino_io_switch_v1_0/src/arduino.h
```

The corresponding Python constants are defined here:

```
<PYNQ repository>/pynq/lib/pmod/constants.py
<PYNQ repository>/pynq/lib/arduino/constants.py
```

The following example explains how Python could initiate a read from a peripheral connected to a PYNQ MicroBlaze.

1. Python writes a read command (e.g. 0x3) to the mailbox command address (0xfffc).

2. MicroBlaze application checks the command address, and reads and decodes the command.
3. MicroBlaze performs a read from the peripheral and places the data at the mailbox base address (0xf000).
4. MicroBlaze writes 0x0 to the mailbox command address (0xfffc) to confirm transaction is complete.
5. Python checks the command address (0xfffc), and sees that the MicroBlaze has written 0x0, indicating the read is complete, and data is available.
6. Python reads the data in the mailbox base address (0xf000), completing the read.

Running Code on Different MicroBlazes

The MicroBlaze local BRAM memory is mapped into the MicroBlaze address space, and also to the ARM address space. These address spaces are independent, so the local memory will be located at different addresses in each memory space. Some example mappings are shown below to highlight the address translation between MicroBlaze and ARM's memory spaces.

| MicroBlaze Base Address | MicroBlaze Address Space | ARM Equivalent Address Space |
|-------------------------|---------------------------|------------------------------|
| 0x4000_0000 | 0x0000_0000 - 0x0000_ffff | 0x4000_0000 - 0x4000_ffff |
| 0x4200_0000 | 0x0000_0000 - 0x0000_ffff | 0x4200_0000 - 0x4200_ffff |
| 0x4400_0000 | 0x0000_0000 - 0x0000_ffff | 0x4400_0000 - 0x4400_ffff |

Note that each MicroBlaze has the same range for its address space. However, the location of the address space in the ARM memory map is different for each PYNQ MicroBlaze. As the MicroBlaze address space is the same for each Pynq MicroBlaze, any binary compiled for one PYNQ MicroBlaze will work on another PYNQ MicroBlaze.

For example, suppose a PYNQ MicroBlaze exists at 0x4000_0000, and a second PYNQ MicroBlaze exists at 0x4200_0000. The same binary can run on the first PYNQ MicroBlaze by writing the binary from python to the address space 0x4000_0000, and on the second PYNQ MicroBlaze by writing to 0x4200_0000.

Building Applications

There are a number of steps required before you can start writing your own software for a PYNQ MicroBlaze. This document will describe the PYNQ MicroBlaze architecture, and how to set up and build the required software projects to allow you to write your own application for the MicroBlaze inside an PYNQ MicroBlaze. Xilinx® SDK projects can be created manually using the SDK GUI, or software can be built using a Makefile flow.

MicroBlaze Processors

As described in the previous section, a PYNQ MicroBlaze can be used as a flexible controller for different types of external peripherals. The ARM® Cortex®-A9 is an application processor, which runs Pynq and Jupyter notebook on a Linux OS. This scenario is not well suited to real-time applications, which is a common requirement for an embedded systems. In the base overlay there are three PYNQ MicroBlazes. As well as acting as a flexible controller, a PYNQ MicroBlaze can be used as dedicated real-time controller.

PYNQ MicroBlazes can also be used standalone to offload some processing from the main processor. However, note that the MicroBlaze processor inside a Pynq MicroBlaze in the base overlay is running at 100 MHz, compared to the Dual-Core ARM Cortex-A9 running at 650 MHz. The clock speed, and different processor architectures and features should be taken into account when offloading pure application code. e.g. Vector processing on the ARM Cortex-A9 Neon processing unit will be much more efficient than running on the MicroBlaze. The MicroBlaze is most appropriate for low-level, background, or real-time applications.

Software Requirements

[Xilinx SDK \(Software Development Kit\)](#) contains the MicroBlaze cross-compiler which can be used to build software for the MicroBlaze inside a PYNQ MicroBlaze. SDK is available for free as part of the [Xilinx Vivado WebPack](#).

The full source code for all supported PYNQ MicroBlaze peripherals is available from the project GitHub. Pynq ships with precompiled PYNQ MicroBlaze executables to support various peripherals (see [PYNQ Libraries](#)), so Xilinx software is only needed if you intend to modify existing code, or build your own PYNQ MicroBlaze applications/peripheral drivers.

The current Pynq release is built using Vivado and SDK 2016.1. it is recommended to use the same version to rebuild existing Vivado and SDK projects. If you only intend to build software, you will only need to install SDK. The full Vivado and SDK installation is only required to modify or design new overlays. [Download Xilinx Vivado and SDK 2016.1](#) You can use the Vivado HLx Web Install Client and select SDK and/or Vivado during the installation.

Compiling Projects

Software executables run on the MicroBlaze inside a PYNQ MicroBlaze. Code for the MicroBlaze can be written in C or C++ and compiled using Xilinx SDK .

You can pull or clone the PYNQ repository, and all the driver source and project files can be found in `<PYNQ_repository>\pynq\lib\<driver_group_name>\<project_directory>`, (Where `<PYNQ_repository>` is the location of the PYNQ repository).

SDK Application, Board Support Package, Hardware Platform

Each SDK application project requires a BSP project (Board Support Package), and a hardware platform project. The application project will include the user code (C/C++). The Application project is linked to a BSP. The BSP (Board Support Package) contains software libraries and drivers to support the underlying peripherals in the system.

Internally, the BSP is linked to a Hardware Platform. A Hardware Platform defines the peripherals in the PYNQ MicroBlaze subsystem, and the memory map of the system. It is used by the BSP to build software libraries to support the underlying hardware.

All *Application* projects can be compiled from the command line using makefiles, or imported into the SDK GUI.

You can also use existing projects as a starting point to create your own project.

Board Support Package

A Board Support Package (BSP) includes software libraries for peripherals in the system. For example, the SDK projects for Pmod and Arduino peripherals require the following 2 BSPs:

BSP for the Arduino PYNQ MicroBlaze:

```
<PYNQ_repository>/pynq/lib/arduino/bsp_arduino/
```

BSP for the Pmod PYNQ MicroBlaze:

```
<PYNQ_repository>/pynq/lib/pmod/bsp_pmod
```

A BSP is specific to a processor subsystem. There can be many BSPs associated with an overlay, depending on the types of processors available in the system.

An application for the Pmod PYNQ MicroBlaze will be linked to the Pmod Pynq MicroBlaze BSP. As the two Pmod PYNQ MicroBlazes are identical, an application written for one Pmod PYNQ MicroBlaze can run on the other Pmod PYNQ MicroBlaze.

An Arduino application will be linked to the Arduino PYNQ MicroBlaze BSP.

Building the Projects

To build all the software projects, for example, you can run the corresponding makefile:

```
<PYNQ repository>/pynq/lib/arduino/makefile
```


```
<PYNQ repository>/pynq/lib/pmod/makefile
```

Application projects for peripherals that ship with Pynq (e.g. Pmod and Arduino peripherals) can also be found in the same location. Each project is contained in a separate folder.

The makefile compiles the application projects based on the BSP provided in the correct location.

The makefile requires SDK to be installed, and can be run from Windows, or Linux.

To run make from Windows, open SDK, and choose a temporary workspace (make sure this path is external to the downloaded PYNQ repository). From the *Xilinx Tools* menu, select *Launch Shell*.

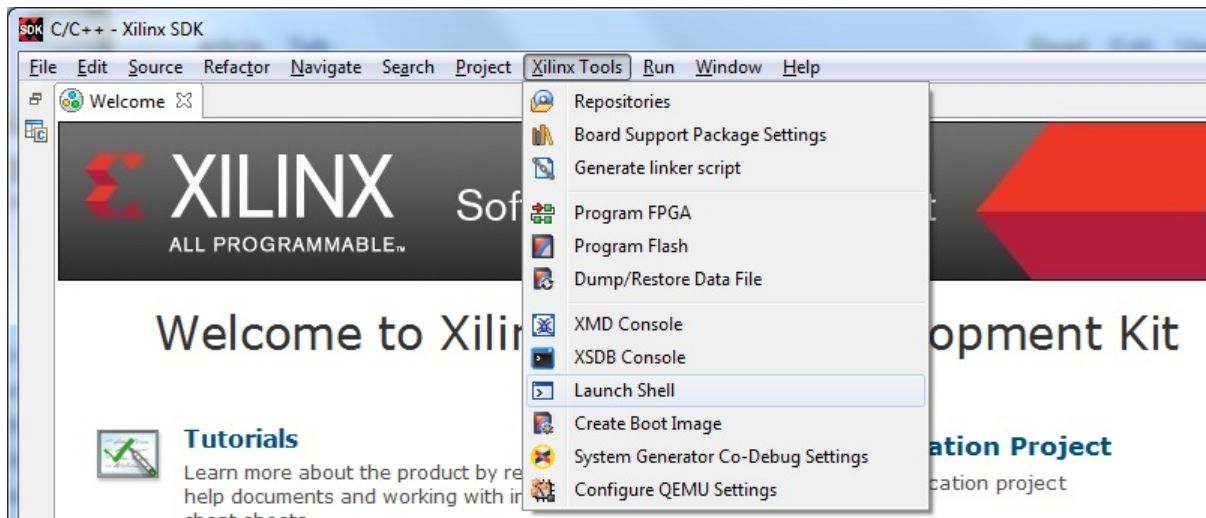

In Linux, open a terminal, and source the SDK tools.

From either the Windows Shell, or the Linux terminal, navigate to the sdk folder in your local copy of the PYNQ repository:

The following example shows how to run make in <PYNQ repository>/pynq/lib/pmod/:

```
yunq@xsjpsgv106-64% ls
bsp_pmod          pmod_dpot.py      pmod_grove_ear_hr.py  pmod_grove_oled.py  pmod_pwm.py
constants.py      pmod_dpot.bin     pmod_grove_finger_hr  pmod_grove_pir.py   pmod.py
__init__.py       pmod_grove_adc    pmod_grove_finger_hr.bin  pmod_grove_th02    pmod_tcl
makefile          pmod_grove_adc.bin  pmod_grove_finger_hr.py  pmod_grove_th02.bin  pmod_tcl1
pmod_adc          pmod_grove_adc.py  pmod_grove_haptic_motor  pmod_grove_th02.py  pmod_tcl1.py
pmod_adc.bin     pmod_grove_buzzer  pmod_grove_haptic_motor.bin  pmod_grove_tmp.py  pmod_timer
pmod_adc.py       pmod_grove_buzzer.bin  pmod_grove_haptic_motor.py  pmod_iic.py         pmod_timer.bin
pmod_als          pmod_grove_color   pmod_grove_imu          pmod_io.py          pmod_tnp2
pmod_als.bin     pmod_grove_color.bin  pmod_grove_imu.py       pmod_led8.py        pmod_tnp2.py
pmod_cable.py     pmod_grove_color.py  pmod_grove_ledbar       pmod_mailbox        pmod_tnp2.py
pmod_dac          pmod_grove_dlight   pmod_grove_ledbar.bin    pmod_mailbox.bin    tests
pmod_dac.bin     pmod_grove_dlight.bin  pmod_grove_ledbar.py     pmod_oled            pmod_pwm
pmod_dac.py       pmod_grove_dlight.py  pmod_grove_light.py      pmod_oled.py        pmod_pwm.bin
pmod_devmode.py   pmod_grove_ear_hr    pmod_grove_oled          pmod_pwm            pmod_pwm
pmod_dpot         pmod_grove_ear_hr.bin  pmod_grove_oled.bin      pmod_pwm            pmod_pwm
```

This will clean all the existing compiled binaries (bin files), and rebuild all the application projects.

```

Building target: pmod_grove_haptic_motor.elf
Invoking: MicroBlaze gcc linker
mb-gcc -WL,-T -WL,../src/lscript.ld -L,../bsp_pmod/iopl_mb/lib -mlittle-endian -mcpu=v9.5 -mxl-soft-mul -WL,--no-relax
-o "pmod_grove_haptic_motor.elf" ../src/pmod_grove_haptic_motor.o -WL,--start-group, lxil, lgcc, lc, --end-group
Finished building target: pmod_grove_haptic_motor.elf

Invoking: MicroBlaze Print Size
mb-size pmod_grove_haptic_motor.elf |tee "pmod_grove_haptic_motor.elf.size"
      text    data    bss    dec    hex filename
  14196     360    3316   17872   45d0 pmod_grove_haptic_motor.elf
Finished building: pmod_grove_haptic_motor.elf.size

Invoking: MicroBlaze Bin Gen
mb-objcopy -O binary pmod_grove_haptic_motor.elf pmod_grove_haptic_motor.bin
Finished building: pmod_grove_haptic_motor.bin

make[1]: Leaving directory `/home/yunq/Pynq-Python/PYNQ-rock/pynq/lib/pmod/pmod_grove_haptic_motor/Debug'
cd pmod_grove_th02/Debug && make clean && make
make[1]: Entering directory `/home/yunq/Pynq-Python/PYNQ-rock/pynq/lib/pmod/pmod_grove_th02/Debug'
rm -rf ../src/pmod_grove_th02.o ../src/pmod_grove_th02.d pmod_grove_th02.elf.size pmod_grove_th02.elf pmod_grove_th02.b
in

make[1]: Leaving directory `/home/yunq/Pynq-Python/PYNQ-rock/pynq/lib/pmod/pmod_grove_th02/Debug'
make[1]: Entering directory `/home/yunq/Pynq-Python/PYNQ-rock/pynq/lib/pmod/pmod_grove_th02/Debug'
Building file: ../src/pmod_grove_th02.c
Invoking: MicroBlaze gcc compiler
mb-gcc -Wall -O1 -g3 -c -fmessage-length=0 -MT"src/pmod_grove_th02.o" -I,../bsp_pmod/iopl_mb/include -mlittle-endian -m
cpu=v9.5 -mxl-soft-mul -WL,--no-relax -MMD -MP -MF"src/pmod_grove_th02.d" -MT"src/pmod_grove_th02.d" -o "src/pmod_grove_t
h02.o" "../src/pmod_grove_th02.c"
Finished building: ../src/pmod_grove_th02.c

Building target: pmod_grove_th02.elf
Invoking: MicroBlaze gcc linker
mb-gcc -WL,-T -WL,../src/lscript.ld -L,../bsp_pmod/iopl_mb/lib -mlittle-endian -mcpu=v9.5 -mxl-soft-mul -WL,--no-relax
-o "pmod_grove_th02.elf" ../src/pmod_grove_th02.o -WL,--start-group, lxil, lgcc, lc, --end-group
Finished building target: pmod_grove_th02.elf

Invoking: MicroBlaze Print Size
mb-size pmod_grove_th02.elf |tee "pmod_grove_th02.elf.size"
      text    data    bss    dec    hex filename
  14240     360    3312   17912   45f8 pmod_grove_th02.elf
Finished building: pmod_grove_th02.elf.size

Invoking: MicroBlaze Bin Gen
mb-objcopy -O binary pmod_grove_th02.elf pmod_grove_th02.bin
Finished building: pmod_grove_th02.bin

make[1]: Leaving directory `/home/yunq/Pynq-Python/PYNQ-rock/pynq/lib/pmod/pmod_grove_th02/Debug'

Completed Microblaze Projects' Builds

yunq@xsjpsgv106-67% █

```

If you examine the makefile, you can the *BIN_PMOD* variable at the top of the makefile includes all the bin files required by Pmod peripherals. If you want to add your own custom project to the build process, you need to add the project name to the *BIN_PMOD* variable, and save the project in the same location as the other application projects.

Similarly, you have to following the same steps to build Arduino application projects.

In addition, individual projects can be built by navigating to the `<project_directory>/Debug` and running `make`.

Binary Files

Compiling code produces an executable file (.elf) which needs to be converted to binary format (.bin) to be downloaded to, and run on a PYNQ MicroBlaze.

A .bin file can be generated from a .elf by running the following command from the SDK shell:

```
mb-objcopy -O binary <input_file>.elf <output_file>.bin
```

This is done automatically by the makefile for the existing application projects. The makefile will also copy all .bin files into the `<PYNQ repository>/pynq/lib/<driver_group_name>/` folder.

Creating Your Own

Using the makefile flow, you can use an existing project as a starting point for your own project.

Copy and rename the project, and modify or replace the .c file in the src/ with your C code. The generated .bin file will have the same base name as your C file.


For example, if your C code is `my_peripheral.c`, the generated .elf and .bin will be `my_peripheral.elf` and `my_peripheral.bin`.

The naming convention recommended for peripheral applications is `<pmod|arduino>_<peripheral>`.

You will need to update references from the old project name to your new project name in `<project_directory>/Debug/makefile` and `<project_directory>/Debug/src/subdir.mk`.

If you want your project to build in the main makefile, you should also append the .bin name of your project to the `BIN_PMOD` (or `BIN_ARDUINO`) variable at the top of the makefile.

If you are using the SDK GUI, you can import the Hardware Platform, BSP, and any application projects into your SDK workspace.

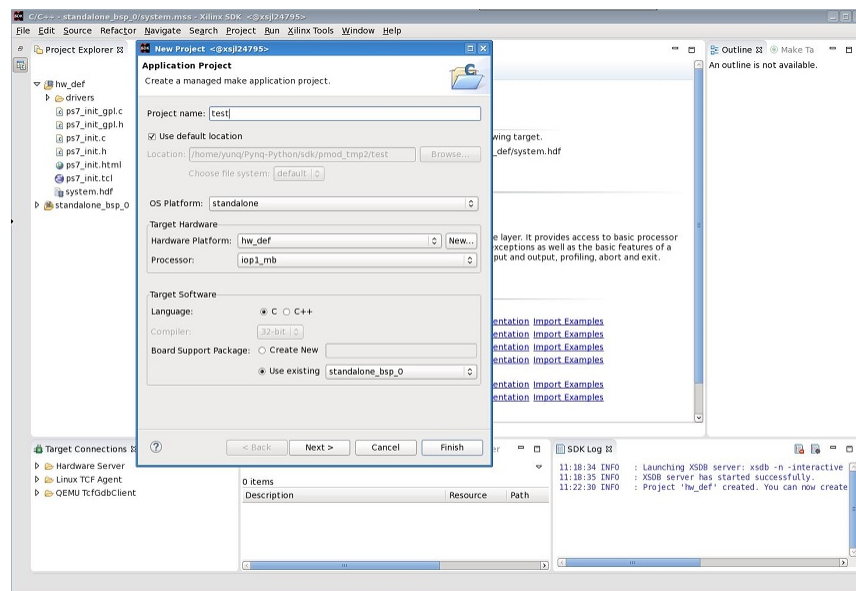

The SDK GUI can be used to build and debug your code.

Writing Applications

The previous section described the software architecture and the software build process. This section will cover how to write the PYNQ MicroBlaze application and also the corresponding Python interface.

The section assumes that the hardware platform and the BSPs have already been generated as detailed in the previous section.

Header Files and Libraries

A library is provided for the PYNQ MicroBlaze which includes an API for local peripherals (IIC, SPI, Timer, Uart, GPIO), the configurable switch, links to the peripheral addresses, and mappings for the mailbox used in the existing PYNQ MicroBlaze peripheral applications provided with Pynq. This library can be used to write custom PYNQ MicroBlaze applications.

The only IP that is specific to each PYNQ MicroBlaze is the configurable switch. There is a `pmod_io_switch` and an `arduino_io_switch`. The header files for the PYNQ MicroBlazes are associated with the corresponding configurable switch, and can be found:

```
<PYNQ repository>/boards/ip/pmod_io_switch_1.0/drivers/ \
pmod_io_switch_v1_0/src/pmod.h
<PYNQ repository>/boards/ip/arduino_io_switch_1.0/drivers/ \
arduino_io_switch_v1_0/src/arduino.h
```

The corresponding C code, `pmod.c` or `arduino.c` can also be found in this directory.

To use these files in a PYNQ MicroBlaze application, include these header file(s) in the C program.

For a Pmod PYNQ MicroBlaze:

```
#include "pmod.h"
#include "pmod_io_switch.h"
```

or for an Arduino PYNQ MicroBlaze:

```
#include "arduino.h"
#include "arduino_io_switch.h"
```

Pmod applications should call `pmod_init()` at the beginning of the application, and Arduino applications, `arduino_init()`. This will initialize all the PYNQ MicroBlaze peripherals in the subsystem.

Controlling the Pmod PYNQ MicroBlaze Switch

The PYNQ MicroBlaze switch needs to be configured by the PYNQ MicroBlaze application before any peripherals can be used. This can be done statically from within the application, or the application can allow Python to write a switch configuration to shared memory, which can be used to configure the switch. This functionality must be implemented by the user, but existing Pynq MicroBlaze applications can be used as a guide. For example, the `arduino_lcd18` PYNQ MicroBlaze project shows an example of reading the switch configuration from the mailbox, and using this to configure the switch.

There are 8 data pins on a Pmod port, that can be connected to any of 16 internal peripheral pins (8x GPIO, 2x SPI, 4x IIC, 2x Timer). This means the configuration switch for the Pmod has 8 connections to make to the data pins.

Each pin can be configured by writing a 4 bit value to the corresponding place in the PYNQ MicroBlaze Switch configuration register. The first nibble (4-bits) configures the first pin, the second nibble the second pin and so on.

The following function, part of the provided `pmod_io_switch_v1_0` driver (`pmod.h`) can be used to configure the switch from a PYNQ MicroBlaze application.

```
void config_pmod_switch(char pin0, char pin1, char pin2, char pin3, \
    char pin4, char pin5, char pin6, char pin7);
```

While each parameter is a “char” only the lower 4-bits are used to configure each pin.

Switch mappings used for PYNQ MicroBlaze Switch configuration:

| Pin | Value |
|--------|-------|
| GPIO_0 | 0x0 |
| GPIO_1 | 0x1 |
| GPIO_2 | 0x2 |
| GPIO_3 | 0x3 |
| GPIO_4 | 0x4 |
| GPIO_5 | 0x5 |
| GPIO_6 | 0x6 |
| GPIO_7 | 0x7 |
| SCL | 0x8 |
| SDA | 0x9 |
| SPICLK | 0xa |
| MISO | 0xb |
| MOSI | 0xc |
| SS | 0xd |
| PWM | 0xe |
| TIMER | 0xf |

For example:

```
config_pmod_switch(SS,MOSI,GPIO_2,SPICLK,GPIO_4,GPIO_5,GPIO_6,GPIO_7);
```

This would connect a SPI interface:

- Pin 0: SS
- Pin 1: MOSI
- Pin 2: GPIO_2
- Pin 3: SPICLK
- Pin 4: GPIO_4
- Pin 5: GPIO_5
- Pin 6: GPIO_6
- Pin 7: GPIO_7

Note that if two or more pins are connected to the same signal, the pins are OR'd together internally.

```
config_pmod_switch(GPIO_1,GPIO_1,GPIO_1,GPIO_1,GPIO_1,GPIO_1,GPIO_1,GPIO_1);
```

This is not recommended and should not be done unintentionally.

Controlling the Arduino PYNQ MicroBlaze Switch

Switch mappings used for IO switch configuration:

| Pin | A/D IO | A_INT | Inter-
rupt | UART | PWM | Timer | SPI | IIC | Input-
Capture |
|-----|--------|-------|----------------|--------|--------|---------------------|----------|-----|--------------------|
| A0 | A_GPIO | A_INT | | | | | | | |
| A1 | A_GPIO | A_INT | | | | | | | |
| A2 | A_GPIO | A_INT | | | | | | | |
| A3 | A_GPIO | A_INT | | | | | | | |
| A4 | A_GPIO | A_INT | | | | | | IIC | |
| A5 | A_GPIO | A_INT | | | | | | IIC | |
| D0 | D_GPIO | | D_INT | D_UART | | | | | |
| D1 | D_GPIO | | D_INT | D_UART | | | | | |
| D2 | D_GPIO | | D_INT | | | | | | |
| D3 | D_GPIO | | D_INT | | D_PWM0 | D_TIMER
Timer0 | | | IC Timer0 |
| D4 | D_GPIO | | D_INT | | | D_TIMER
Timer0_6 | | | |
| D5 | D_GPIO | | D_INT | | D_PWM1 | D_TIMER
Timer1 | | | IC Timer1 |
| D6 | D_GPIO | | D_INT | | D_PWM2 | D_TIMER
Timer2 | | | IC Timer2 |
| D7 | D_GPIO | | D_INT | | | | | | |
| D8 | D_GPIO | | D_INT | | | D_TIMER
Timer1_7 | | | Input Cap-
ture |
| D9 | D_GPIO | | D_INT | | D_PWM3 | D_TIMER
Timer3 | | | IC Timer3 |
| D10 | D_GPIO | | D_INT | | D_PWM4 | D_TIMER
Timer4 | D_SS | | IC Timer4 |
| D11 | D_GPIO | | D_INT | | D_PWM5 | D_TIMER
Timer5 | D_MOSI | | IC Timer5 |
| D12 | D_GPIO | | D_INT | | | | D_MISO | | |
| D13 | D_GPIO | | D_INT | | | | D_SPICLK | | |

For example, to connect the UART to D0 and D1, write D_UART to the configuration register for D0 and D1.

```
config_arduino_switch(A_GPIO, A_GPIO, A_GPIO, A_GPIO, A_GPIO, A_GPIO,
                      D_UART, D_UART, D_GPIO, D_GPIO, D_GPIO,
                      D_GPIO, D_GPIO, D_GPIO, D_GPIO,
                      D_GPIO, D_GPIO, D_GPIO, D_GPIO);
```

PYNQ MicroBlaze Example

MicroBlaze C Code

Taking Pmod ALS as an example PYNQ MicroBlaze driver (used to control the Pmod light sensor):

```
<PYNQ repository>/pynq/lib/pmod/pmod_als/src/pmod_als.c
```

First note that the `pmod.h` header file is included.

```
#include "pmod.h"
```

Some constants for commands are defined. These values can be chosen properly. The corresponding Python code will send the appropriate command values to control the PYNQ MicroBlaze application.

By convention, 0x0 is reserved for no command (idle, or acknowledged); then PYNQ MicroBlaze commands can be any non-zero value.

```
// MAILBOX_WRITE_CMD
#define READ_SINGLE_VALUE 0x3
#define READ_AND_LOG      0x7
// Log constants
#define LOG_BASE_ADDRESS (MAILBOX_DATA_PTR(4))
#define LOG_ITEM_SIZE sizeof(u32)
#define LOG_CAPACITY (4000/LOG_ITEM_SIZE)
```

The ALS peripheral has as SPI interface. The user defined function `get_sample()` calls an SPI function `spi_transfer()`, defined in `pmod.h`, to read data from the device.

```
u32 get_sample() {
    /*
     * ALS data is 8-bit in the middle of 16-bit stream.
     * Two bytes need to be read, and data extracted.
     */
    u8 raw_data[2];
    spi_transfer(SPI_BASEADDR, 2, raw_data, NULL);
    return ( ((raw_data[1] & 0xf0) >> 4) + ((raw_data[0] & 0x0f) << 4) );
}
```

In `main()` notice `config_pmod_switch()` is called to initialize the switch with a static configuration. This application does not allow the switch configuration to be modified from Python. This means that if you want to use this code with a different pin configuration, the C code must be modified and recompiled.

```
int main(void)
{
    int cmd;
    u16 als_data;
    u32 delay;

    pmod_init(0,1);
    config_pmod_switch(SS, GPIO_1, MISO, SPICLK, \
                      GPIO_4, GPIO_5, GPIO_6, GPIO_7);
    // to initialize the device
    get_sample();
}
```

Next, the `while(1)` loop continually checks the `MAILBOX_CMD_ADDR` for a non-zero command. Once a command is received from Python, the command is decoded, and executed.

```
// Run application
while(1) {

    // wait and store valid command
    while ( (MAILBOX_CMD_ADDR & 0x01) == 0 );
    cmd = MAILBOX_CMD_ADDR;
```

Taking the first case, reading a single value; `get_sample()` is called and a value returned to the first position (0) of the `MAILBOX_DATA`.

`MAILBOX_CMD_ADDR` is reset to zero to acknowledge to the ARM processor that the operation is complete and data is available in the mailbox.

Remaining code:


```

switch(cmd) {
    case READ_SINGLE_VALUE:
        // write out reading, reset mailbox
        MAILBOX_DATA(0) = get_sample();
        MAILBOX_CMD_ADDR = 0x0;
        break;
    case READ_AND_LOG:
        // initialize logging variables, reset cmd
        cb_init(&pmod_log, LOG_BASE_ADDRESS, LOG_CAPACITY, LOG_ITEM_SIZE);
        delay = MAILBOX_DATA(1);
        MAILBOX_CMD_ADDR = 0x0;

        do{
            als_data = get_sample();
            cb_push_back(&pmod_log, &als_data);
            delay_ms(delay);
        } while((MAILBOX_CMD_ADDR & 0x1) == 0);

        break;

    default:
        // reset command
        MAILBOX_CMD_ADDR = 0x0;
        break;
}
}
return(0);
}

```

Python Code

With the PYNQ MicroBlaze Driver written, the Python class can be built to communicate with that PYNQ MicroBlaze.

<PYNQ repository>/pynq/lib/pmod/pmod_als.py

First the Pmod package is imported:

```
from . import Pmod
```

Then some other constants are defined:

```

PMOD_ALS_PROGRAM = "pmod_als.bin"
PMOD_ALS_LOG_START = MAILBOX_OFFSET+16
PMOD_ALS_LOG_END = PMOD_ALS_LOG_START+(1000*4)
RESET = 0x1
READ_SINGLE_VALUE = 0x3
READ_AND_LOG = 0x7

```

The MicroBlaze binary file for the PYNQ MicroBlaze is defined. This is the application executable, and will be loaded into the PYNQ MicroBlaze instruction memory.

The ALS class and an initialization method are defined:

```

class Pmod_ALS(object):

    def __init__(self, mb_info):

```

The initialization function for the module requires the MicroBlaze information. The `__init__` is called when a module is initialized. For example, from Python:

```
from pynq.lib.pmod import Pmod_ALS
from pynq.lib.pmod import PMODA
als = Pmod_ALS(PMODA)
```

This will create a `Pmod_ALS` instance, and load the MicroBlaze executable (`PMOD_ALS_PROGRAM`) into the instruction memory of the specified Pynq MicroBlaze.

Since the MicroBlaze information, imported as `Pmod` constants, can also be extracted as an attribute of the overlay, the following code also works:

```
from pynq.overlays.base import BaseOverlay
base = BaseOverlay("base.bit")
als = Pmod_ALS(base.PMODA)
```

In the initialization method, an instance of the `Pmod` class is created. This `Pmod` class controls the basic functionalities of the MicroBlaze processor, including reading commands/data, and writing commands/data.

Internally, when the `Pmod` class is initialized, the `run()` call pulls the PYNQ MicroBlaze out of reset. After this, the PYNQ MicroBlaze will be running the `pmod_als.bin` executable.

The `read()` method in the `Pmod_ALS` class will read an ALS sample and return that value to the caller. The following steps demonstrate a Python to MicroBlaze read transaction specific to the `Pmod_ALS` class.

```
def read(self):
```

First, the command is written to the MicroBlaze shared memory. In this case the value `READ_SINGLE_VALUE` represents a command value. This value is user defined in the Python code, and must match the value the C program expects for the same function.

```
self.microblaze.write_blocking_command(READ_SINGLE_VALUE)
```

The command is blocking so that Python code will not proceed unless an acknowledgement has been received from the MicroBlaze. Internally, after the PYNQ MicroBlaze has finished its task, it will write `0x0` to clear the command area. The Python code checks this command area (in this case, the Python code constantly checks whether the `0x3` value is still present at the `CMD_OFFSET`).

Once the command is no longer `0x3` (the acknowledge has been received), the result is read from the data area of the shared memory `MAILBOX_OFFSET`.

```
data = self.microblaze.read_mailbox(0)
return data
```

2.6.5 Python-C Integration

In some instances, the performance of Python classes to manage data transfer to an overlay may not be sufficient. Usually this would be determined by implementing the driver in Python, and profiling to determine performance.

A higher performance library can be developed in a lower level language (e.g. C/C++) and optimized for an overlay. The driver functions in the library can be called from Python using CFFI (C Foreign Function Interface).

CFFI provides a simple way to interface with C code from Python. The CFFI package is preinstalled in the PYNQ image. It supports four modes, API and ABI, each with “in-line” or “out-of-line compilation”. *Inline* ABI (Application Binary Interface) compatibility mode allows dynamic loading and running of functions from executable modules, and API mode allows building of C extension modules.

The following example taken from <http://docs.python-guide.org/en/latest/scenarios/clibs/> shows the ABI inline mode, calling the C function `strlen()` in from Python

C function prototype:

```
size_t strlen(const char*);
```

The C function prototype is passed to `cdef()`, and can be called using `clib`.

```
from cffi import FFI
ffi = FFI()
ffi.cdef("size_t strlen(const char*);")
clib = ffi.dlopen(None)
length = clib.strlen(b"String to be evaluated.")
print("{}".format(length))
```

C functions inside a shared library can be called from Python using the C Foreign Function Interface (CFFI). The shared library can be compiled online using the CFFI from Python, or it can be compiled offline.

For more information on CFFI and shared libraries refer to:

<http://cffi.readthedocs.io/en/latest/overview.html>

<http://www.tldp.org/HOWTO/Program-Library-HOWTO/shared-libraries.html>

2.6.6 PYNQ and Asyncio

Interacting with hardware frequently involves waiting for accelerators to complete or stalling for data. Polling is an inefficient way of waiting for data especially in a language like python which can only have one executing thread at once.

The Python `asyncio` library manages multiple IO-bound tasks asynchronously, thereby avoiding any blocking caused by waiting for responses from slower IO subsystems. Instead, the program can continue to execute other tasks that are ready to run. When the previously-busy tasks are ready to resume, they will be executed in turn, and the cycle is repeated.

In PYNQ real-time tasks are most often implemented using IP blocks in the Programmable Logic (PL). While such tasks are executing in the PL they can raise interrupts on the PS CPUs at any time. Python's `asyncio` library provides an effective way to manage such events from asynchronous, IO-bound tasks.

The foundation of `asyncio` in Pynq is the `Interrupts` class in the *[pynq.interrupt Module](#)* which provides an `asyncio`-style event that can be used for waiting for interrupts to be raised. The video Library, AXI GPIO and the PynqMicroblaze drivers are build on top of the interrupt event to provide coroutines for any functions that might otherwise block.

Asyncio Fundamentals

The `asyncio` concurrency framework relies on coroutines, futures, tasks, and an event loop. We will introduce these briefly before demonstrating their use with some introductory examples.

Coroutines

Coroutines are a new Python language construct. Coroutines introduce two new keywords `await` and `async` the Python syntax. Coroutines are stateful functions whose execution can be paused. This means that they can yield execution, while they wait on some task or event to complete. While suspended, coroutines maintain their state. They are resumed once the outstanding activity is resolved. The `await` keyword determines the point in the coroutine where it yields control and from which execution will resume.

Futures

A `future` is an object that acts as a proxy for a result that is initially unknown, usually because the action has not yet completed. The futures concept is essential components in the internals of `asyncio`: futures encapsulate pending operations so that they can be put in queues, their state of completion can be queried, and their results can be retrieved when ready. They are meant to be instantiated exclusively by the concurrency framework, rather than directly by the user.

Tasks

Coroutines do not execute directly. Instead, they are wrapped in `tasks` and registered with an `asyncio` event loop. `tasks` are a subclass of futures.

Event Loop

The event loop is responsible for executing all *ready* tasks, polling the status of suspended tasks, and scheduling outstanding tasks.

An event loop runs only one task at a time. It relies on cooperative scheduling. This means that no task interrupts another, and each task yields control to the event loop when its execution is blocked. The result is single-threaded, concurrent code in which the next cycle of the loop does not start until all the event handlers are executed sequentially.

A simple example is shown below. The example defines an coroutine named `wake_up` defined using the new `async` `def` syntax. Function `main` creates an `asyncio` event loop that wraps the `wake_up` coroutine in a task called `wake_up_task` and registers the task with the event loop. Within the coroutine, the `await` statement marks the point at which execution is initially suspended, and later resumed. The loop executes the following schedule:

1. Starts executing `wake_up_task`
2. Suspends `wake_up_task` and preserves its state
3. Runs `asyncio.sleep` runs for 1 to 5 seconds
4. Resumes `wake_up_task` from preserved state
5. Runs to completion using the preserved state

Finally the event loop is closed.

```
import asyncio
import random
import time

# Coroutine
async def wake_up(delay):
    '''A coroutine that will yield to asyncio.sleep() for a few seconds
    and then resume, having preserved its state while suspended'''

    start_time = time.time()
    print(f'The time is: {time.strftime("%I:%M:%S")}')
    print(f'Suspending coroutine 'wake_up' at 'await` statement\n")
    await asyncio.sleep(delay)
    print(f'Resuming coroutine 'wake_up' from 'await` statement")
    end_time = time.time()
    sleep_time = end_time - start_time
    print(f''wake-up' was suspended for precisely: {sleep_time} seconds")
```

```
# Event loop
if __name__ == '__main__':
    delay = random.randint(1,5)
    my_event_loop = asyncio.get_event_loop()
    try:
        print("Creating task for coroutine 'wake_up'\n")
        wake_up_task = my_event_loop.create_task(wake_up(delay))
        my_event_loop.run_until_complete(wake_up_task)
    except RuntimeError as err:
        print(f'{err}' +
              ' - restart the Jupyter kernel to re-run the event loop')
    finally:
        my_event_loop.close()
```

A sample run of the code produces the following output:

```
Creating task for coroutine 'wake_up'

The time is: 11:09:28
Suspending coroutine 'wake_up' at 'await` statement

Resuming coroutine 'wake_up' from 'await` statement
'wake-up' was suspended for precisely: 3.0080409049987793 seconds
```

Any blocking call in event loop should be replaced with a coroutine. If you do not do this, when a blocking call is reached, it will block the rest of the loop.

If you need blocking calls, they should be in separate threads. Compute workloads should also be in separate threads/processes.

Instances of Asyncio in pynq

Asyncio can be used for managing a variety of potentially blocking operations in the overlay. A coroutine can be run in an event loop and used to wait for an interrupt to fire. Other user functions can also be run in the event loop. If an interrupt is triggered, any coroutines waiting on the corresponding event will be rescheduled. The responsiveness of the interrupt coroutine will depend on how frequently the user code yields control in the loop.

GPIO Peripherals

User I/O peripherals can trigger interrupts when switches are toggled or buttons are pressed. Both the [Button](#) and [Switch](#) classes have a function `wait_for_level` and a coroutine `wait_for_level_async` which block until the corresponding button or switch has the specified value. This follows a convention throughout the pynq package that that coroutines have an `_async` suffix.

As an example, consider an application where each LED will light up when the corresponding button is pressed. First a coroutine specifying this functionality is defined:

```
base = pynq.overlays.base.BaseOverlay('base.bit')

async def button_to_led(number):
    button = base.buttons[number]
    led = base.leds[number]
    while True:
        await button.wait_for_level_async(1)
```

```
led.on()
await button.wait_for_level_async(0)
led.off()
```

Next add instances of the coroutine to the default event loop

```
tasks = [asyncio.ensure_future(button_to_led(i)) for i in range(4)]
```

Finally, running the event loop will cause the coroutines to be active. This code runs the event loop until an exception is thrown or the user interrupts the process.

```
asyncio.get_event_loop().run_forever()
```

PynqMicroblaze

The *PynqMicroblaze* class has an `interrupt` member variable which acts like an `asyncio.Event` with a `wait()` coroutine and a `clear()` method. This event is automatically wired to the correct interrupt pin or set to `None` if interrupts are not available in the loaded overlay.

For example:

```
def __init__(self)
    self.iop = pynq.lib.PynqMicroblaze(mb_info, IOP_EXECUTABLE)
    if self.iop.interrupt is None:
        warn("Interrupts not available in this Overlay")
```

There are two options for running functions from this new IOP wrapper class. The function can be called from an external `asyncio` event loop (set up elsewhere), or the function can set up its own event loop and then call its `asyncio` function from the event loop.

Async Functions

`pynq` offers both an `asyncio` coroutine and a blocking function call for all interrupt-driven functions. It is recommended that this should be extended to any user-provided drivers. The blocking function can be used where there is no need to work with `asyncio`, or as a convenience function to run the event loop until a specified condition.

The following code defines an `asyncio` coroutine. Notice the `async` and `await` keywords are the only additional code needed to make this function an `asyncio` coroutine.

```
async def interrupt_handler_async(self, value):
    if self.iop.interrupt is None:
        raise RuntimeError('Interrupts not available in this Overlay')
    while(1):
        await self.iop.interrupt.wait() # Wait for interrupt
        # Do something when an interrupt is received
        self.iop.interrupt.clear()
```

Event Loops

The following code wraps the `asyncio` coroutine, adding to the default event loop and running it until the coroutine completes.

```
def interrupt_handler(self):
    if self.iop.interrupt is None:
        raise RuntimeError('Interrupts not available in this Overlay')
    loop = asyncio.get_event_loop()
    loop.run_until_complete(asyncio.ensure_future(
        self.interrupt_handler_async()
    ))
```

Custom Interrupt Handling

The *Interrupts* class allows custom interrupt handlers to be built in Python.

This class abstracts away management of the AXI interrupt controller in the PL. It is not necessary to examine this code in detail to use interrupts. The interrupt class takes the pin name of the interrupt line and offers a single `wait_async` coroutine and the corresponding wait function that wraps it. The interrupt is only enabled in the hardware for as long as a coroutine is waiting on an *Interrupt* object. The general pattern for using an *Interrupt* is as follows:

```
while condition:
    await interrupt.wait()
    # Clear interrupt
```

This pattern avoids race conditions between the interrupt and the controller and ensures that an interrupt isn't seen multiple times.

Examples

For more examples, see the AsyncIO Buttons Notebook in the on the Pynq-Z1 in the following directory:

```
<Jupyter Dashboard>/base/board/
```

2.6.7 Python Overlay API

The Python API is the user interface for the overlay, exposing the programmable functionality in the design.

An API for a PYNQ overlay can consist of

- a simple Python wrapper that interfaces directly with the hardware IP blocks in the overlay
- a more substantial Python layer utilising other Python packages
- a Python library that interfaces to a lower level higher performance library (written in C/C++ for example) to control the overlay

The API for an overlay will manage the transfer of data between the Python environment in the PS, and the overlay in the PL. This may be the transfer of data directly from the PS to a peripheral or managing system memory to allow a peripheral in the PL to read or write data from DRAM that can also be access by from the Python environment.

The Default API

When an Overlay is loaded using the `pynq.Overlay` function all of the IP and hierarchies in the overlay will have drivers assigned to them and used to construct an object hierarchy. The IP can then be accessed via attributes on the returned overlay class using the names of the IP and hierarchies in the block diagram.

If no driver has been specified for a type of IP then a `DefaultIP` will be instantiated offering `read` and `write` functions to access the IP's address space and named accessors to any interrupts or GPIO pins connected to the IP. Hierarchies likewise will be instances of `DefaultHierarchy` offering access to any sub hierarchies or contained IP. The top-level `DefaultOverlay` also acts just like any other IP.

Customising Drivers

While the default drivers are useful for getting started with new hardware in a design it is preferable to have a higher level driver for end users to interact with. Each of `DefaultIP`, `DefaultHierarchy` and `DefaultOverlay` can be subclassed and automatically bound to elements of the block diagram. New drivers will only be bound when the overlay is reloaded.

Creating IP Drivers

All IP drivers should inherit from `DefaultIP` and include a `bindto` class attribute consisting of an array of strings. Each string should be a type of IP that the driver should bind to. It is also strongly recommend to call `super()`. `__init__` in the class's constructor. The type of an IP can be found as the `VLNV` parameter in Vivado or from the `ip_dict` of the overlay.

A template for an IP driver is as follows:

```
from pynq import DefaultIP

class MyIP(DefaultIP):
    bindto = ['My IP Type']
    def __init__(self, description):
        super().__init__(description)
```

Creating Hierarchy Drivers

Hierarchy drivers should inherit from `DefaultHierarchy` and provide a static method `checkhierarchy` that takes a description and returns `True` if the driver can bind to it. Any class that meets these two requirements will be automatically added to a list of drivers tested against each hierarchy in a newly loaded overlay.

A template for a hierarchy driver is as follows:

```
from pynq import DefaultHierarchy

class MyHierarchy(DefaultHierarchy):
    def __init__(self, description):
        super().__init__(description)

    @staticmethod
    def checkhierarchy(description):
        return False
```

Creating Custom Overlay Classes

Finally the class changed from the `DefaultOverlay` to provide a more suitable high-level API or provide overlay-specific initialisation. The overlay loader will look for a python file located alongside the bitstream and TCL files, import it and then call the `Overlay` function.

A template for a custom overlay class is as follows:

```
from pynq import DefaultOverlay

class MyOverlay(DefaultOverlay):
    def __init__(self, bitfile_name, download):
        super().__init__(bitfile_name, download)

        # Other initialisation

Overlay = MyOverlay
```

Working with Physically Contiguous Memory

In many applications there is a need for large buffers to be transferred between the PS and PL either using DMA engines or HLS IP with AXI master interfaces. In PYNQ the Xlnk class provides a mechanism to acquire numpy arrays allocated as to be physically contiguous. First an instance of the xlnk class must be instantiated:

```
from pynq import Xlnk

xlnk = Xlnk()
```

Then the `cma_array` function can be used to allocate a physically contiguous numpy array. The function takes a `shape` parameter and a `dtype` parameter in a similar way to other numpy construction functions.

```
import numpy as np

matrix1 = xlnk.cma_array(shape=(32,32), dtype=np.float32)
```

These arrays can either be passed directly to the DMA driver's transfer function or they contain a `physical_address` attribute which can be used by custom driver code.

When the array is no longer needed the underlying resources should be freed using the `freebuffer` function. Alternatively a context manager can be used to ensure that the buffer is freed at the end of a scope.

```
with xlnk.cma_array(shape=(32,32), dtype=np.float32) as matrix2:
    dma.sendchannel.transfer(matrix2)
    dma.recvchannel.transfer(matrix1)
    dma.sendchannel.wait()
    dma.recvchannel.wait()
    matrix1.freebuffer()
```

2.6.8 Python Packaging

PYNQ uses pip - the Python Packaging Authority's recommended Python Package Installer to install and deliver custom installations of PYNQ. pip's flexible package delivery model has many useful features.

Packaging pynq for Distribution

Packaging the pynq Python project that pip can use is hugely beneficial, but requires careful thought and project architecture. There are many useful references that provide up-to-date information. For more information about how the pynq library is packaged see the following links:

- [Open Sourcing a Python Project The Right way](#)

- [How to Package Your Python Code](#)

Delivering Non-Python Files

One extremely useful feature that pip provides is the ability to deliver non-python files. In the PYNQ project this is useful for delivering FPGA binaries (.bit), overlay TCL source files (.tcl), PYNQ MicroBlaze binaries (.bin), and Jupyter Notebooks (.ipynb), along side the pynq Python libraries.

From a Terminal on the PYNQ board, installing the pynq Python libraries is as simple as running:

```
sudo pip3.6 install --upgrade git+https://github.com/Xilinx/PYNQ.git
```

After pip finishes installation, the board must be rebooted.

An example of using pip's **setup.py** file to provide non-python content is shown below:

```
from setuptools import setup, find_packages
import subprocess
import sys
import shutil
import new_overlay

setup(
    name = "new_overlay",
    version = new_overlay.__version__,
    url = 'https://github.com/your_github/new_overlay',
    license = 'All rights reserved.',
    author = "Your Name",
    author_email = "your@email.com",
    packages = ['new_overlay'],
    package_data = {
        '' : ['*.bit', '*.tcl', '*.py', '*.so'],
    },
    install_requires=[
        'pynq',
    ],
    dependency_links=['http://github.com/xilinx/PYNQ'],
    description = "New custom overlay for PYNQ-Z1"
)
```

The `package_data` argument specifies which files will be installed as part of the package.

Using pynq as a Dependency

One of the most useful features of pip is the ability to *depend* on a project, instead of forking or modifying it.

When designing overlays, the best practice for re-using pynq code is to create a Python project as described above and add pynq as a dependency. A good example of this is the [BNN-PYNQ project](#).

The BNN-PYNQ project is an Overlay that *depends* on pynq but does not modify it. The developers list pynq as a dependency in the pip configuration files, which installs pynq (if it isn't already). After installation, the BNN-PYNQ files are added to the installation: notebooks, overlays, and drivers are installed alongside pynq without modifying or breaking the previous source code.

Needless to say, we highly recommend *depending* on pynq instead of *forking and modifying* pynq. An example of depending on pynq is shown in the code segment from the previous section.

2.6.9 Overlay Tutorial

This notebook gives an overview of how the Overlay class has changed in PYNQ 2.0 and how to use it efficiently.

The redesigned Overlay class has three main design goals * Allow overlay users to find out what is inside an overlay in a consistent manner * Provide a simple way for developers of new hardware designs to test new IP * Facilitate reuse of IP between Overlays

This tutorial is primarily designed to demonstrate the final two points, walking through the process of interacting with a new IP, developing a driver, and finally building a more complex system from multiple IP blocks. All of the code and block diagrams can be found at [\[https://github.com/PeterOgden/overlay_tutorial\]](https://github.com/PeterOgden/overlay_tutorial). For these examples to work copy the contents of the overlays directory into the home directory on the PYNQ-Z1 board.

Developing a Single IP

For this first example we are going to use a simple design with a single IP contained in it. This IP was developed using HLS and adds two 32-bit integers together. The full code for the accelerator is:

```
void add(int a, int b, int& c) {
#pragma HLS INTERFACE ap_ctrl_none port=return
#pragma HLS INTERFACE s_axilite port=a
#pragma HLS INTERFACE s_axilite port=b
#pragma HLS INTERFACE s_axilite port=c

    c = a + b;
}
```

With a block diagram consisting solely of the HLS IP and required glue logic to connect it to the ZYNQ7 IP

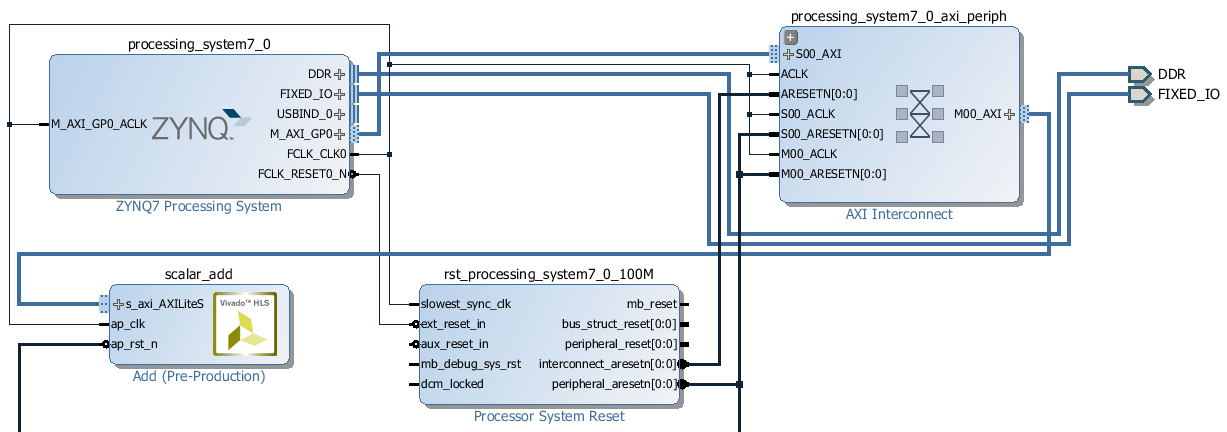


Fig. 2.1: Simple Block Diagram

To interact with the IP first we need to load the overlay containing the IP.

```
In [1]: from pynq import Overlay

        overlay = Overlay('/home/xilinx/tutorial_1.bit')
```

Creating the overlay will automatically download it. We can now use `help` to find out what is in the overlay.

```
In [2]: help(overlay)
```

Help on Overlay in module pynq.overlay object:

```
class Overlay(pynq.pl.Bitstream)
|   Default documentation for overlay /home/xilinx/tutorial_1.bit. The following
|   attributes are available on this overlay:
|
IP Blocks
scalar_add          : pynq.overlay.DefaultIP
Hierarchies
-----
None
Interrupts
-----
None
GPIO Outputs
-----
None
Method resolution order:
Overlay
pynq.pl.Bitstream
builtins.object
Methods defined here:
__dir__(self)
__dir__() -> list
default dir() implementation
__getattr__(self, key)
Overload of __getattr__ to return a driver for an IP or
hierarchy. Throws an `RuntimeError` if the overlay is not loaded.
__init__(self, bitfile_name, download=True, ignore_version=False)
Return a new Overlay object.
An overlay instantiates a bitstream object as a member initially.
Parameters
-----
bitfile_name : str
The bitstream name or absolute path as a string.
download : boolean or None
Whether the overlay should be downloaded. If None then the
overlay will be downloaded if it isn't already loaded.
Note
----
This class requires a Vivado '.tcl' file to be next to bitstream file
with same name (e.g. base.bit and base.tcl).
download(self)
The method to download a bitstream onto PL.
Note
```

```

|     ----
|     After the bitstream has been downloaded, the "timestamp" in PL will be
|     updated. In addition, all the dictionaries on PL will
|     be reset automatically.
|
Returns
None
is_loaded(self)
This method checks whether a bitstream is loaded.
This method returns true if the loaded PL bitstream is same
as this Overlay's member bitstream.
Returns
-----
bool
True if bitstream is loaded.
load_ip_data(self, ip_name, data)
This method loads the data to the addressable IP.
Calls the method in the super class to load the data. This method can
be used to program the IP. For example, users can use this method to
load the program to the Microblaze processors on PL.
Note
----
The data is assumed to be in binary format (.bin). The data name will
be stored as a state information in the IP dictionary.
Parameters
-----
ip_name : str
The name of the addressable IP.
data : str
The absolute path of the data to be loaded.
Returns
-----
None
reset(self)
This function resets all the dictionaries kept in the overlay.
This function should be used with caution.
Returns
-----
None
-----
Data descriptors inherited from pynq.pl.Bitstream:
__dict__
dictionary for instance variables (if defined)
__weakref__

```

```
|         list of weak references to the object (if defined)
```

All of the entries are accessible via attributes on the overlay class with the specified driver. Accessing the `scalar_add` attribute of the will create a driver for the IP - as there is no driver currently known for the Add IP core DefaultIP driver will be used so we can interact with IP core.

```
In [3]: add_ip = overlay.scalar_add
        help(add_ip)
```

Help on DefaultIP in module pynq.overlay object:

```
class DefaultIP(builtins.object)
|   Driver for an IP without a more specific driver
|
|   This driver wraps an MMIO device and provides a base class
|   for more specific drivers written later. It also provides
|   access to GPIO outputs and interrupts inputs via attributes. More specific
|   drivers should inherit from `DefaultIP` and include a
|   `bindto` entry containing all of the IP that the driver
|   should bind to. Subclasses meeting these requirements will
|   automatically be registered.
|
Attributes
mmio : pynq.MMIO
Underlying MMIO driver for the device
_interrupts : dict
Subset of the PL.interrupt_pins related to this IP
_gpio : dict
Subset of the PL.gpio_dict related to this IP
Methods defined here:
__init__(self, description)
Initialize self.  See help(type(self)) for accurate signature.
read(self, offset=0)
Read from the MMIO device
Parameters
-----
offset : int
Address to read
write(self, offset, value)
Write to the MMIO device
Parameters
-----
offset : int
Address to write to
value : int or bytes
Data to write
-----
Data descriptors defined here:
__dict__
dictionary for instance variables (if defined)
```

```
|
|  __weakref__
|      list of weak references to the object (if defined)
```

Reading the documentation generated by HLS tells us that use the core we need to write the two arguments to offset 0x10 and 0x18 and read the result back from 0x20.

```
In [4]: add_ip.write(0x10, 4)
        add_ip.write(0x18, 5)
        add_ip.read(0x20)
```

```
Out[4]: 9
```

Creating a Driver

While the UnknownIP driver is useful for determining that the IP is working it is not the most user-friendly API to expose to the eventual end-users of the overlay. Ideally we want to create an IP-specific driver exposing a single add function to call the accelerator. Custom drivers are created by inheriting from UnknownIP and adding a bindto class attribute consisting of the IP types the driver should bind to. The constructor of the class should take a single description parameter and pass it through to the super class __init__. The description is a dictionary containing the address map and any interrupts and GPIO pins connected to the IP.

```
In [5]: from pynq import DefaultIP

        class AddDriver(DefaultIP):
            def __init__(self, description):
                super().__init__(description=description)

            bindto = ['xilinx.com:hls:add:1.0']

            def add(self, a, b):
                self.write(0x10, a)
                self.write(0x18, b)
                return self.read(0x20)
```

Now if we reload the overlay and query the help again we can see that our new driver is bound to the IP.

```
In [6]: overlay = Overlay('/home/xilinx/tutorial_1.bit')
        help(overlay)
```

Help on Overlay in module pynq.overlay object:

```
class Overlay(pynq.pl.Bitstream)
|   Default documentation for overlay /home/xilinx/tutorial_1.bit. The following
|   attributes are available on this overlay:
|
IP Blocks
scalar_add          : __main__.AddDriver
Hierarchies
-----
None
Interrupts
-----
None
GPIO Outputs
```

```
| -----
| None
|
| Method resolution order:
|     Overlay
|     pynq.pl.Bitstream
|     builtins.object
|
| Methods defined here:
|
| __dir__(self)
|     __dir__() -> list
|     default dir() implementation
|
| __getattr__(self, key)
|     Overload of __getattr__ to return a driver for an IP or
|     hierarchy. Throws an `RuntimeError` if the overlay is not loaded.
|
| __init__(self, bitfile_name, download=True, ignore_version=False)
|     Return a new Overlay object.
|
|     An overlay instantiates a bitstream object as a member initially.
|
Parameters
bitfile_name : str
The bitstream name or absolute path as a string.
download : boolean or None
Whether the overlay should be downloaded. If None then the
overlay will be downloaded if it isn't already loaded.
Note
----
This class requires a Vivado '.tcl' file to be next to bitstream file
with same name (e.g. base.bit and base.tcl).
download(self)
The method to download a bitstream onto PL.
Note
----
After the bitstream has been downloaded, the "timestamp" in PL will be
updated. In addition, all the dictionaries on PL will
be reset automatically.
Returns
-----
None
is_loaded(self)
This method checks whether a bitstream is loaded.
This method returns true if the loaded PL bitstream is same
as this Overlay's member bitstream.
Returns
-----
bool
True if bitstream is loaded.
```



```

|
| load_ip_data(self, ip_name, data)
|     This method loads the data to the addressable IP.
|
|     Calls the method in the super class to load the data. This method can
|     be used to program the IP. For example, users can use this method to
|     load the program to the Microblaze processors on PL.
|
Note
The data is assumed to be in binary format (.bin). The data name will
be stored as a state information in the IP dictionary.
Parameters
-----
ip_name : str
The name of the addressable IP.
data : str
The absolute path of the data to be loaded.
Returns
-----
None
reset(self)
This function resets all the dictionaries kept in the overlay.
This function should be used with caution.
Returns
-----
None
-----
Data descriptors inherited from pynq.pl.Bitstream:
__dict__
dictionary for instance variables (if defined)
__weakref__
list of weak references to the object (if defined)

```

And we can access the same way as before except now our custom driver with an add function is created instead of DefaultIP

```
In [7]: overlay.scalar_add.add(15,20)
```

```
Out[7]: 35
```

Reusing IP

Suppose we or someone else develops a new overlay and wants to reuse the existing IP. As long as they import the python file containing the driver class the drivers will be automatically created. As an example consider the next design which, among other things includes a renamed version of the scalar_add IP.

Running help on the new overlay shows that the driver is still bound.

```
In [8]: overlay = Overlay('/home/xilinx/tutorial_2.bit')
```

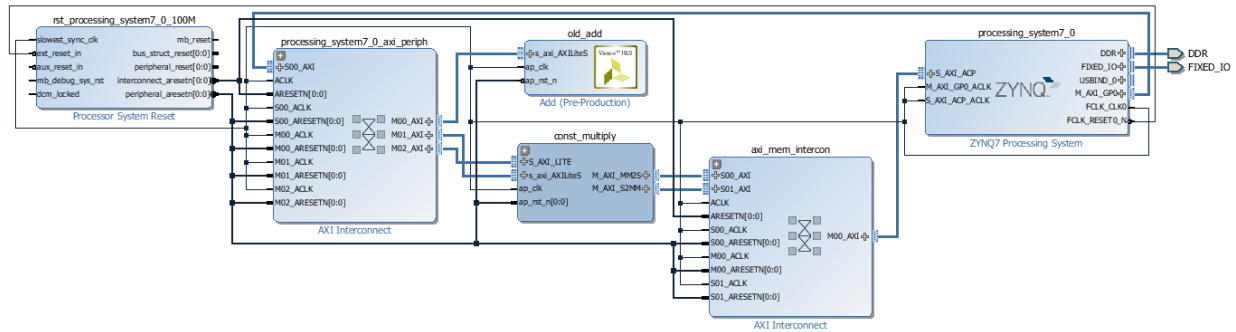


Fig. 2.2: Second Block Diagram

```
help(overlay)
```

Help on Overlay in module pynq.overlay object:

```
class Overlay(pynq.pl.Bitstream)
|   Default documentation for overlay /home/xilinx/tutorial_2.bit. The following
|   attributes are available on this overlay:
|
IP Blocks
old_add          : __main__.AddDriver
Hierarchies
-----
const_multiply   : pynq.overlay.DefaultHierarchy
Interrupts
-----
None
GPIO Outputs
-----
None
Method resolution order:
Overlay
pynq.pl.Bitstream
builtins.object
Methods defined here:
__dir__(self)
__dir__() -> list
default dir() implementation
__getattr__(self, key)
Overload of __getattr__ to return a driver for an IP or
hierarchy. Throws an `RuntimeError` if the overlay is not loaded.
__init__(self, bitfile_name, download=True, ignore_version=False)
Return a new Overlay object.
```

```

|
|     An overlay instantiates a bitstream object as a member initially.
|
Parameters
bitfile_name : str
The bitstream name or absolute path as a string.
download : boolean or None
Whether the overlay should be downloaded. If None then the
overlay will be downloaded if it isn't already loaded.
Note
----
This class requires a Vivado '.tcl' file to be next to bitstream file
with same name (e.g. base.bit and base.tcl).
download(self)
The method to download a bitstream onto PL.
Note
----
After the bitstream has been downloaded, the "timestamp" in PL will be
updated. In addition, all the dictionaries on PL will
be reset automatically.
Returns
-----
None
is_loaded(self)
This method checks whether a bitstream is loaded.
This method returns true if the loaded PL bitstream is same
as this Overlay's member bitstream.
Returns
-----
bool
True if bitstream is loaded.
load_ip_data(self, ip_name, data)
This method loads the data to the addressable IP.
Calls the method in the super class to load the data. This method can
be used to program the IP. For example, users can use this method to
load the program to the Microblaze processors on PL.
Note
----
The data is assumed to be in binary format (.bin). The data name will
be stored as a state information in the IP dictionary.
Parameters
-----
ip_name : str
The name of the addressable IP.
data : str
The absolute path of the data to be loaded.

```

```

Returns
None
reset(self)
This function resets all the dictionaries kept in the overlay.
This function should be used with caution.
Returns
-----
None
-----
Data descriptors inherited from pynq.pl.Bitstream:
__dict__
dictionary for instance variables (if defined)
__weakref__
list of weak references to the object (if defined)

```

IP Hierarchies

The block diagram above also contains a hierarchy looking like this:

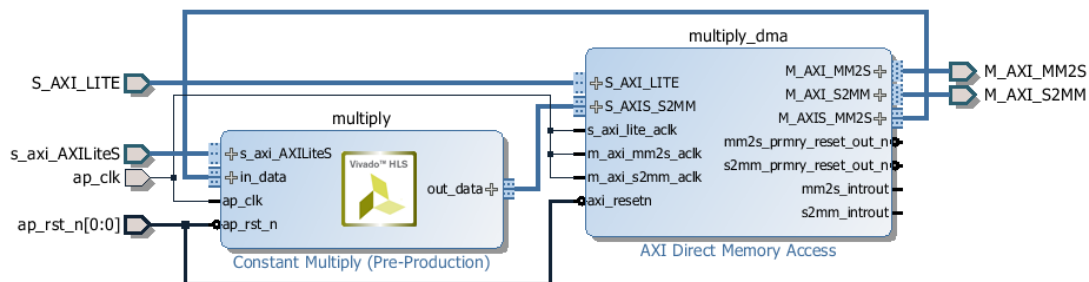


Fig. 2.3: Hierarchy

Containing a custom IP for multiple a stream of numbers by a constant and a DMA engine for transferring the data. As streams are involved and we need correctly handle TLAST for the DMA engine the HLS code is a little more complex with additional pragmas and types but the complete code is still relatively short.

```

typedef ap_axiu<32,1,1,1> stream_type;

void mult_constant(stream_type* in_data, stream_type* out_data, ap_int<32> constant) {
#pragma HLS INTERFACE s_axilite register port=constant
#pragma HLS INTERFACE ap_ctrl_none port=return
#pragma HLS INTERFACE axis port=in_data

```

```
#pragma HLS INTERFACE axis port=out_data
    out_data->data = in_data->data * constant;
    out_data->dest = in_data->dest;
    out_data->id = in_data->id;
    out_data->keep = in_data->keep;
    out_data->last = in_data->last;
    out_data->strb = in_data->strb;
    out_data->user = in_data->user;
}
```

Looking at the HLS generated documentation we again discover that to set the constant we need to set the register at offset 0x10 so we can write a simple driver for this purpose

```
In [9]: class ConstantMultiplyDriver(DefaultIP):
        def __init__(self, description):
            super().__init__(description=description)

        bindto = ['Xilinx:hls:mult_constant:1.0']

        @property
        def constant(self):
            return self.read(0x10)

        @constant.setter
        def constant(self, value):
            self.write(0x10, value)
```

The DMA engine driver is already included inside the PYNQ driver so nothing special is needed for that other than ensuring the module is imported. Reloading the overlay will make sure that our newly written driver is available for use.

```
In [10]: import pynq.lib.dma

        overlay = Overlay('/home/xilinx/tutorial_2.bit')

        dma = overlay.const_multiply.multiply_dma
        multiply = overlay.const_multiply.multiply
```

The DMA driver transfers numpy arrays allocated using the xlnk driver. Lets test the system by multiplying 5 numbers by 3.

```
In [11]: from pynq import Xlnk
        import numpy as np

        xlnk = Xlnk()
        in_buffer = xlnk.cma_array(shape=(5,), dtype=np.uint32)
        out_buffer = xlnk.cma_array(shape=(5,), dtype=np.uint32)

        for i in range(5):
            in_buffer[i] = i

        multiply.constant = 3
        dma.sendchannel.transfer(in_buffer)
        dma.recvchannel.transfer(out_buffer)
        dma.sendchannel.wait()
        dma.recvchannel.wait()

        out_buffer
```

```
Out[11]: CMABuffer([ 0,  3,  6,  9, 12], dtype=uint32)
```

While this is one way to use the IP, it still isn't exactly user-friendly. It would be preferable to treat the entire hierarchy as a single entity and write a driver that hides the implementation details. The overlay class allows for drivers to be written against hierarchies as well as IP but the details are slightly different.

Hierarchy drivers are subclasses of `pynq.DefaultHierarchy` and, similar to `DefaultIP` have a constructor that takes a description of hierarchy. To determine whether the driver should bind to a particular hierarchy the class should also contain a static `checkhierarchy` method which takes the description of a hierarchy and returns `True` if the driver should be bound or `False` if not. Similar to `DefaultIP`, any classes that meet the requirements of subclasses `DefaultHierarchy` and have a `checkhierarchy` method will automatically be registered.

For our constant multiply hierarchy this would look something like:

```
In [12]: from pynq import DefaultHierarchy

class StreamMultiplyDriver(DefaultHierarchy):
    def __init__(self, description):
        super().__init__(description)

    def stream_multiply(self, stream, constant):
        self.multiply.constant = constant
        with xlnk.cma_array(shape=(len(stream),), dtype=np.uint32) as in_buffer,\
            xlnk.cma_array(shape=(len(stream),), dtype=np.uint32) as out_buffer:
            for i, v, in enumerate(stream):
                in_buffer[i] = v
            self.multiply_dma.sendchannel.transfer(in_buffer)
            self.multiply_dma.recvchannel.transfer(out_buffer)
            self.multiply_dma.sendchannel.wait()
            self.multiply_dma.recvchannel.wait()
            result = out_buffer.copy()
        return result

    @staticmethod
    def checkhierarchy(description):
        if 'multiply_dma' in description['ip'] and 'multiply' in description['ip']:
            return True
        return False
```

We can now reload the overlay and ensure the higher-level driver is loaded

```
In [13]: overlay = Overlay('/home/xilinx/tutorial_2.bit')
         help(overlay)
```

Help on Overlay in module pynq.overlay object:

```
class Overlay(pynq.pl.Bitstream)
|   Default documentation for overlay /home/xilinx/tutorial_2.bit. The following
|   attributes are available on this overlay:
|
IP Blocks
old_add          : __main__.AddDriver
Hierarchies
-----
const_multiply   : __main__.StreamMultiplyDriver
Interrupts
-----
None
```

```

|
GPIO Outputs
None
Method resolution order:
Overlay
pynq.pl.Bitstream
builtins.object
Methods defined here:
__dir__(self)
__dir__() -> list
default dir() implementation
__getattr__(self, key)
Overload of __getattr__ to return a driver for an IP or
hierarchy. Throws an `RuntimeError` if the overlay is not loaded.
__init__(self, bitfile_name, download=True, ignore_version=False)
Return a new Overlay object.
An overlay instantiates a bitstream object as a member initially.
Parameters
-----
bitfile_name : str
The bitstream name or absolute path as a string.
download : boolean or None
Whether the overlay should be downloaded. If None then the
overlay will be downloaded if it isn't already loaded.
Note
----
This class requires a Vivado '.tcl' file to be next to bitstream file
with same name (e.g. base.bit and base.tcl).
download(self)
The method to download a bitstream onto PL.
Note
----
After the bitstream has been downloaded, the "timestamp" in PL will be
updated. In addition, all the dictionaries on PL will
be reset automatically.
Returns
-----
None
is_loaded(self)
This method checks whether a bitstream is loaded.
This method returns true if the loaded PL bitstream is same
as this Overlay's member bitstream.
Returns
-----

```

```
|     bool
|         True if bitstream is loaded.
|
| load_ip_data(self, ip_name, data)
|     This method loads the data to the addressable IP.
|
|     Calls the method in the super class to load the data. This method can
|     be used to program the IP. For example, users can use this method to
|     load the program to the Microblaze processors on PL.
|
Note
The data is assumed to be in binary format (.bin). The data name will
be stored as a state information in the IP dictionary.
Parameters
-----
ip_name : str
The name of the addressable IP.
data : str
The absolute path of the data to be loaded.
Returns
-----
None
reset(self)
This function resets all the dictionaries kept in the overlay.
This function should be used with caution.
Returns
-----
None
-----
Data descriptors inherited from pynq.pl.Bitstream:
__dict__
dictionary for instance variables (if defined)
__weakref__
list of weak references to the object (if defined)
```

and use it

```
In [14]: overlay.const_multiply.stream_multiply([1,2,3,4,5], 5)
```

```
Out[14]: CMABuffer([ 5, 10, 15, 20, 25], dtype=uint32)
```

Overlay Customisation

While the default overlay is sufficient for many use cases, some overlays will require more customisation to provide a user-friendly API. As an example the default AXI GPIO drivers expose channels 1 and 2 as separate attributes meaning that accessing the LEDs in the base overlay requires the following contortion

```
In [15]: base = Overlay('base.bit')
         base.swsleds_gpio.channel2[0].on()
```


To mitigate this the overlay developer can provide a custom class for their overlay to expose the subsystems in a more user-friendly way. The base overlay includes custom overlay class which performs the following functions: * Make the AXI GPIO devices better named and range/direction restricted * Make the IOPs accessible through the pmoda, pmodb and arduino names * Create a special class to interact with RGB LEDs

The result is that the LEDs can be accessed like:

```
In [16]: from pynq.overlays.base import BaseOverlay

        base = BaseOverlay('base.bit')
        base.leds[0].on()
```

Using a well defined class also allows for custom docstrings to be provided also helping end users.

```
In [17]: help(base)
```

Help on BaseOverlay in module pynq.overlays.base.base object:

```
class BaseOverlay(pynq.overlay.Overlay)
|   The Base overlay for the Pynq-Z1
|
|   This overlay is designed to interact with all of the on board peripherals
|   and external interfaces of the Pynq-Z1 board. It exposes the following
|   attributes:
|
Attributes
pmoda : IOP
IO processor connected to the PMODA interface
pmodb : IOP
IO processor connected to the PMODB interface
arduino : IOP
IO processor connected to the Arduino/ChipKit interface
leds : AxiGPIO
4-bit output GPIO for interacting with the green LEDs LD0-3
buttons : AxiGPIO
4-bit input GPIO for interacting with the buttons BTN0-3
switches : AxiGPIO
2-bit input GPIO for interacting with the switches SW0 and SW1
rgbleds : [pynq.board.RGBLED]
Wrapper for GPIO for LD4 and LD5 multicolour LEDs
video : pynq.lib.video.HDMIWrapper
HDMI input and output interfaces
audio : pynq.lib.audio.Audio
Headphone jack and on-board microphone
Method resolution order:
BaseOverlay
pynq.overlay.Overlay
pynq.pl.Bitstream
builtins.object
Methods defined here:
__init__(self, bitfile, **kwargs)
Return a new Overlay object.
An overlay instantiates a bitstream object as a member initially.
Parameters
-----
```

```

|     bitfile_name : str
|         The bitstream name or absolute path as a string.
|     download : boolean or None
|         Whether the overlay should be downloaded. If None then the
|         overlay will be downloaded if it isn't already loaded.
|
Note
This class requires a Vivado '.tcl' file to be next to bitstream file
with same name (e.g. base.bit and base.tcl).
-----
Methods inherited from pynq.overlay.Overlay:
__dir__(self)
__dir__() -> list
default dir() implementation
__getattr__(self, key)
Overload of __getattr__ to return a driver for an IP or
hierarchy. Throws an `RuntimeError` if the overlay is not loaded.
download(self)
The method to download a bitstream onto PL.
Note
----
After the bitstream has been downloaded, the "timestamp" in PL will be
updated. In addition, all the dictionaries on PL will
be reset automatically.
Returns
-----
None
is_loaded(self)
This method checks whether a bitstream is loaded.
This method returns true if the loaded PL bitstream is same
as this Overlay's member bitstream.
Returns
-----
bool
True if bitstream is loaded.
load_ip_data(self, ip_name, data)
This method loads the data to the addressable IP.
Calls the method in the super class to load the data. This method can
be used to program the IP. For example, users can use this method to
load the program to the Microblaze processors on PL.
Note
----
The data is assumed to be in binary format (.bin). The data name will
be stored as a state information in the IP dictionary.
Parameters

```

```

|         -----
|         ip_name : str
|             The name of the addressable IP.
|         data : str
|             The absolute path of the data to be loaded.
|
Returns
None
reset(self)
This function resets all the dictionaries kept in the overlay.
This function should be used with caution.
Returns
-----
None
-----
Data descriptors inherited from pynq.pl.Bitstream:
__dict__
dictionary for instance variables (if defined)
__weakref__
list of weak references to the object (if defined)

```

Creating a custom overlay

Custom overlay classes should inherit from `pynq.UnknownOverlay` taking a the full path of the bitstream file and possible additional keyword arguments. These parameters should be passed to `super().__init__()` at the start of `__init__` to initialise the attributes of the Overlay. This example is designed to go with our `tutorial_2` overlay and adds a function to more easily call the multiplication function

```

In [18]: class TestOverlay(Overlay):
|         def __init__(self, bitfile, **kwargs):
|             super().__init__(bitfile, **kwargs)
|
|         def multiply(self, stream, constant):
|             return self.const_multiply.stream_multiply(stream, constant)

```

To test our new overlay class we can construct it as before.

```

In [19]: overlay = TestOverlay('/home/xilinx/tutorial_2.bit')
|         overlay.multiply([2,3,4,5,6], 4)

Out[19]: CMABuffer([ 8, 12, 16, 20, 24], dtype=uint32)

```

Included Drivers

The `pynq` library includes a number of drivers as part of the `pynq.lib` package. These include * AXI GPIO * AXI DMA (simple mode only) * AXI VDMA * AXI Interrupt Controller (internal use) * Pynq-Z1 Audio IP * Pynq-Z1 HDMI IP * Color convert IP * Pixel format conversion * HDMI input and output frontends * Pynq Microblaze program loading

2.7 PYNQ SD Card

The PYNQ image for the PYNQ-Z1 is provided precompiled as a downloadable SD card image, so you do not need to rerun this flow for the PYNQ-Z1 unless you want to make changes to the image flow.

This flow can also be used as a starting point to build a PYNQ image for another Zynq board.

The image flow will create the Zynq BOOT.bin, the u-boot bootloaded, the Linux Device tree blob, and the Linux kernel.

The source files for the PYNQ image flow build can be found here:

```
<PYNQ repository>/sdbuild
```

More details on configuring the root filesystem can be found in the README file in the folder above.

2.7.1 Building the Image

It is recommended to use a Virtual machine to run the image build flow. A clean and recent VM image is recommended. The flow provided has been tested on Ubuntu 16.04.

To build the image follow the steps below:

1. Install Vivado 2016.1 and Xilinx SDK 2016.1
2. Install dependencies using the following script

```
<PYNQ repository>/sdbuild/scripts/setup_host.sh
```

3. Source the appropriate settings files from Vivado and Xilinx SDK
4. Navigate to the following directory and run make

```
cd <PYNQ repository>/sdbuild/  
make
```

The build flow can take several hours.

2.7.2 Retargeting to a Different Board

While the root filesystem is portable between different Zynq boards the boot files will have to be customised for each board. The boot files can be found in

```
<PYNQ repository>/sdbuild/boot_configs
```

There is a standardised flow for Zynq-7000 boards defined in

```
<PYNQ repository>/sdbuild/Zynq7000.makefile
```

This file is customised by setting a number of variables and providing paths to some setup scripts. The Board-specific config file is by convention placed in:

```
<PYNQ repository>/sdbuild/boot_configs/<Board Name>-defconfig
```

Variables in config

The config file must define several variables:

- **BOARD**: e.g. PYNQ-Z1. This is used to customize some parts of the flow, and will ultimately be used by Python
- **BOARD_PART**: e.g. xc7z020clg400-1. This is used to create a Vivado project and generate a Hardware Description File (.hdf) for use in Xilinx SDK.
- **BOARD_CONSTRAINTS**: Path to the constraints file (.xdc) containing the top level constraints file for the board.
- **PS_CONFIG_TCL**: The path to a tcl file that configures the instantiated Processing System IP.
- **LINUX_REPO**: The GitHub path to the Linux repository to clone from
- **LINUX_COMMIT**: The GitHub hash from which to clone the linux repository
- **LINUX_CONFIG**: The path to the Linux configuration file (.config)
- **UBOOT_REPO**: The GitHub path to the UBoot repository to clone from
- **UBOOT_COMMIT**: The GitHub hash from which to clone the UBoot repository
- **UBOOT_CONFIG**: The path to the UBoot configuration file (.config)
- **BOARD_DTSI**: The path to the devicetree fragment applied to the device tree generated by Xilinx SDK.

The config file can define several optional variables

- **BOOT_BITSTREAM**: The bitstream file (.bit) to be downloaded onto the PL at boot

Build Flow Description

The SD Card build flow starts by creating a simple Vivado Project using the **BOARD**, **BOARD_PART**, **BOARD_CONSTRAINTS**, and **PS_CONFIG** variables. This vivado project is used to generate a Hardware Description File (.hdf) for Xilinx SDK.

Following the cration of the Hardware Description File, the First State Bootloader (FSBL) and Device Tree file are created. While the FSBL is not customisable, the device tree can be modified by adding or reconfiguring entries or by **BOARD_DTSI**.

Next, the **LINUX_REPO** and **UBOOT_REPO** repositories are cloned, checked out and configured.

Finally, the **BOOT_BITSTREAM** is packaged.

Once a boot configuration is defined for a board it needs to be incorporated into a release which live in the following folder:

```
<PYNQ repository>/sdbuild/releases
```

A release is a single (.config) file defining the variables:

- **BOOT_CONFIG**: Path to the name of the project folder in boot_configs
- **ROOTFS_CONFIG**: Should be Pynq-Z1-Wily

While the root filesystem is designed around the Pynq-Z1 board it should work on any board with similar connectivity, i.e. PS attached Ethernet and USB host ports.

2.8 pynq Package

All PYNQ code is contained in the *pynq* Python package and can be found on the [Github repository](#).

To learn more about Python package structures, please refer to the [official python documentation](#).

Foundational modules:

- *pynq.ps* - Facilitates management of the Processing System (PS) and PS/PL interface.
- *pynq.pl* - Facilitates management of the Programmable Logic (PL).
- *pynq.overlay* - Manages the state, drivers, and contents of overlays.

Data Movement modules:

- *pynq.mmio* - Implements PYNQ Memory Mapped IO (MMIO) API
- *pynq.gpio* - Implements PYNQ General-Purpose IO (GPIO) by wrapping the Linux Sysfs API
- *pynq.xlnk* - Implements Contiguous Memory Allocation for PYNQ DMA

Interrupt/AsyncIO Module:

- *pynq.interrupt* - Implements PYNQ asyncio

Sub-packages:

- *pynq.lib* - Contains sub-packages with drivers for for PMOD, Arduino and Logictools PYNQ Libraries, and drivers for various communication controllers (GPIO, DMA, Video, Audio)

2.8.1 pynq.interrupt Module

```
class pynq.interrupt.Interrupt(pinname)
```

Bases: object

Class that provides the core wait-based API to end users

Provides a single coroutine wait that waits until the interrupt signal goes high. If the Overlay is changed or re-downloaded this object is invalidated and waiting results in undefined behaviour.

```
wait ()
```

Wait for the interrupt to be active

May raise an exception if the Overlay has been changed since initialisation.

2.8.2 pynq.gpio Module

The *pynq.gpio* module is a driver for reading and writing PS GPIO pins on a board. PS GPIO pins are not connected to the PL.

```
class pynq.gpio.GPIO(gpio_index, direction)
```

Bases: object

Class to wrap Linux's GPIO Sysfs API.

This GPIO class does not handle PL I/O.

```
index
```

int – The index of the GPIO, starting from the GPIO base.

```
direction
```

str – Input/output direction of the GPIO.

path

str – The path of the GPIO device in the linux system.

direction

Direction of the GPIO pin - either 'in' or 'out' – str

static get_gpio_base()

This method returns the GPIO base using Linux's GPIO Sysfs API.

This is a static method. To use:

```
>>> from pynq import GPIO
```

```
>>> gpio = GPIO.get_gpio_base()
```

Note: For path '/sys/class/gpio/gpiochip138/', this method returns 138.

Returns The GPIO index of the base.

Return type int

static get_gpio_pin(gpio_user_index)

This method returns a GPIO instance for PS GPIO pins.

Users only need to specify an index starting from 0; this static method will map this index to the correct Linux GPIO pin number.

Note: The GPIO pin number can be calculated using: GPIO pin number = GPIO base + GPIO offset + user index e.g. The GPIO base is 138, and pin 54 is the base GPIO offset. Then the Linux GPIO pin would be $(138 + 54 + 0) = 192$.

Parameters **gpio_user_index** (*int*) – The index specified by users, starting from 0.

Returns The Linux Sysfs GPIO pin number.

Return type int

index

Index of the GPIO pin – int

path

Path to the GPIO pin in the filesystem – str

read()

The method to read a value from the GPIO.

Returns An integer read from the GPIO

Return type int

write(value)

The method to write a value into the GPIO.

Parameters **value** (*int*) – An integer value, either 0 or 1

Returns

Return type None

2.8.3 pynq.lib Package

pynq.lib contains the arduino, pmod, and logictools subpackages, and additional modules for communicating with other controllers in an overlay.

Modules:

- pynq.lib.audio - Implements mono-mode audio driver using pulse density modulation (PDM)
- pynq.lib.axigpio - Implements driver for AXI GPIO IP
- pynq.lib.button - Implements driver for AXI GPIO push button IP
- pynq.lib.dma - Implements driver for the AXI Direct Memory Access (DMA) IP
- pynq.lib.led - Implements driver for AXI GPIO LED IP
- pynq.lib.pynqmicroblaze - Implements communication and control for a PYNQ MicroBlaze subsystem
- pynq.lib.rgbled - Implements driver for AXI GPIO multi color LEDs
- pynq.lib.switch - Implements driver for AXI GPIO Dual In-Line (DIP) switches
- pynq.lib.usb_wifi - Implements driver for USB WiFi dongles
- pynq.lib.video - Implements driver for HDMI video input/output

Subpackages:

- pynq.lib.arduino - Implements driver for Arduino IO Processor Subsystem
- pynq.lib.pmod - Implements driver for PMOD IO Processor Subsystem
- pynq.lib.logictools - Implements driver for Logictools IP Processor Subsystem

pynq.lib.audio Module

The pynq.lib.audio module is a driver for reading and recording values from an on-board audio microphone, loading preexisting audio files, or playing audio input to an output device.

class pynq.lib.audio.**Audio** (*description*, *gpio_name=None*)

Bases: *pynq.overlay.DefaultHierarchy*

Class to interact with audio controller.

Each audio sample is a 32-bit integer. The audio controller supports only mono mode, and uses pulse density modulation (PDM).

mmio

MMIO – The MMIO object associated with the audio controller.

gpio

GPIO – The GPIO object associated with the audio controller.

buffer

numpy.ndarray – The numpy array to store the audio.

sample_rate

int – Sample rate of the current buffer content.

sample_len

int – Sample length of the current buffer content.

bypass_start ()

Stream audio controller input directly to output.

Returns**Return type** None**bypass_stop()**

Stop streaming input to output directly.

Returns**Return type** None**static checkhierarchy** (*description*)

Hierarchy can be bound if it contains the 'd_axi_pdm_1' IP and it contains exactly one GPIO pin.

static info (*file*)

Prints information about pdm files.

The information includes name, channels, samples, frames, etc.

Note: The file will be searched in the specified path, or in the working directory in case the path does not exist.

Parameters file (*string*) – File name, with a default extension of *pdm*.**Returns****Return type** None**load** (*file*)

Loads file into internal audio buffer.

The recorded file is of format **.pdm*.

Note: The file will be searched in the specified path, or in the working directory in case the path does not exist.

Parameters file (*string*) – File name, with a default extension of *pdm*.**Returns****Return type** None**play()**

Play audio buffer via audio jack.

Returns**Return type** None**record** (*seconds*)

Record data from audio controller to audio buffer.

The sample rate per word is 192000Hz.

Parameters seconds (*float*) – The number of seconds to be recorded.**Returns****Return type** None

save (*file*)

Save audio buffer content to a file.

The recorded file is of format **.pdm*.

Note: The saved file will be put into the specified path, or in the working directory in case the path does not exist.

Parameters **file** (*string*) – File name, with a default extension of *pdm*.

Returns

Return type None

pynq.lib.axigpio Module

The `pynq.lib.axigpio` module is a driver for interacting with the Xilinx AXIGPIO IP Block. Each AXI GPIO IP instantiated in the fabric has at least one, and at most two channels.

class `pynq.lib.axigpio.AxiGPIO` (*description*)

Bases: `pynq.overlay.DefaultIP`

Class for interacting with the AXI GPIO IP block.

This class exposes the two banks of GPIO as the *channel1* and *channel2* attributes. Each channel can have the direction and the number of wires specified.

The wires in the channel can be accessed from the channel using slice notation - all slices must have a stride of 1. Input wires can be *read* and output wires can be written to, toggled, or turned off or on. InOut channels combine the functionality of input and output channels. The tristate of the pin is determined by whether the pin was last read or written.

class `Channel` (*parent, channel*)

Bases: `object`

Class representing a single channel of the GPIO controller.

Wires are and bundles of wires can be accessed using array notation with the methods on the wires determined by the type of the channel:

```
input_channel[0].read()
output_channel[1:3].on()
```

This class instantiated not used directly, instead accessed through the *AxiGPIO* classes attributes. This class exposes the wires connected to the channel as an array or elements. Slices of the array can be assigned simultaneously.

read ()

Read the state of the input pins

setdirection (*direction*)

Set the direction of the channel

Must be one of `AxiGPIO.{Input, Output, InOut}` or the string 'in', 'out', or 'inout'

setlength (*length*)

Set the number of wires connected to the channel

trimask

Gets or sets the tri-state mask for an inout channel

wait_for_interrupt_async()

Wait for the interrupt on the channel to be signalled

This is intended to be used by slices waiting for a particular value but can be used in any situation to wait for a per-channel interrupt.

write(val, mask)

Set the state of the output pins

class InOut (*parent, start, stop*)

Bases: `pynq.lib.axigpio.Output`, `pynq.lib.axigpio.Input`

Class representing wires in an inout channel.

This class should be passed to *setdirection* to indicate the channel should be used for both input and output. It should not be used directly.

read()

Reads the value of all the wires in the slice

Changes the tristate of the slice to input. If there is more than one wire in the slice then the least significant bit of the return value corresponds to the wire with the lowest index.

write(val)

Set the value of the slice

Changes the tristate of the slice to output. If the slice consists of more than one wire then the least significant bit of *val* corresponds to the lowest index wire.

class Input (*parent, start, stop*)

Bases: `object`

Class representing wires in an input channel.

This class should be passed to *setdirection* to indicate the channel should be used for input only. It should not be used directly.

read()

Reads the value of all the wires in the slice

If there is more than one wire in the slice then the least significant bit of the return value corresponds to the wire with the lowest index.

wait_for_value(value)

Wait until the specified value is read

This function is dependent on interrupts being enabled and will throw a *RuntimeError* otherwise. Internally it uses `asyncio` so should not be used inside an `asyncio` task. Use *wait_for_value_async* if using `asyncio`.

wait_for_value_async(value)

Coroutine that waits until the specified value is read

This function relies on interrupts being available for the IP block and will throw a *RuntimeError* otherwise.

class Output (*parent, start, stop*)

Bases: `object`

Class representing wires in an output channel.

This class should be passed to *setdirection* to indicate the channel should be used for output only. It should not be used directly.

off()

Turns off all of the wires in the slice

on()

Turns on all of the wires in the slice

read()

Reads the value of all the wires in the slice

If there is more than one wire in the slice then the least significant bit of the return value corresponds to the wire with the lowest index.

toggle()

Toggles all of the wires in the slice

write(val)

Set the value of the slice

If the slice consists of more than one wire then the least significant bit of *val* corresponds to the lowest index wire.

bindto = ['xilinx.com:ip:axi_gpio:2.0']

setdirection(direction, channel=1)

Sets the direction of a channel in the controller

Must be one of AxiGPIO.{Input, Output, InOut} or the string 'in', 'out' or 'inout'

setlength(length, channel=1)

Sets the length of a channel in the controller

pynq.lib.button Module

The pynq.lib.rgbled module is a driver for reading values from onboard push-buttons and waiting for button-triggered events.

class pynq.lib.button.Button(index)

Bases: object

This class controls the onboard push-buttons.

index

int – Index of the push-buttons, starting from 0.

read()

Read the current value of the button.

Returns Either 1 if the button is pressed or 0 otherwise

Return type int

wait_for_value(value)

Wait for the button to be pressed or released

Parameters

- **value** (*int*) – 1 to wait for press or 0 to wait for release
- **function wraps the coroutine form so the asyncio(This) –**
- **loop will run until the function returns(event) –**

wait_for_value_async(value)

Wait for the button to be pressed or released

Parameters

- **value** (*int*) – 1 to wait for press or 0 to wait for release
- **function is an asyncio coroutine** (*This*) –

pynq.lib.dma Module

class pynq.lib.dma.**DMA** (*description, *args, **kwargs*)

Bases: *pynq.overlay.DefaultIP*

Class for Interacting with the AXI Simple DMA Engine

This class provides two attributes for the read and write channels. The read channel copies data from the stream into memory and the write channel copies data from memory to the output stream. Both channels have an identical API consisting of *transfer* and *wait* functions. If interrupts have been enabled and connected for the DMA engine then *wait_async* is also present.

Buffers to be transferred must be allocated through the Xlnk driver using the *cma_array* function either directly or indirectly. This means that Frames from the video subsystem can be transferred using this class.

recvchannel

_DMAChannel – The stream to memory channel

sendchannel

_DMAChannel – The memory to stream channel

bindto = ['xilinx.com:ip:axi_dma:7.1']

class pynq.lib.dma.**LegacyDMA** (*address, direction=1, attr_dict=None*)

Bases: *object*

Python class which controls DMA.

This is a generic DMA class that can be used to access main memory.

The DMA direction can be:

- (0) 'DMA_TO_DEV' : DMA sends data to PL.
- (1) 'DMA_FROM_DEV' : DMA receives data from PL.
- (3) 'DMA_BIDIRECTIONAL' : DMA can send/receive data from PL.

buf

ffi.FFI.CData – A pointer to physically contiguous buffer.

bufLength

int – Length of internal buffer in bytes.

phyAddress

int – Physical address of the DMA device.

DMAengine

*cdata 'XAxidma *'* – DMA engine instance defined in C. Not to be directly modified.

DMAinstance

*cdata 'XAxidma_Config *'* – DMA configuration instance struct. Not to be directly modified.

direction

int – The direction indicating whether DMA sends/receives data from PL.

Configuration

dict – Current DMAinstance configuration values.

Note: If this class is parsed on an unsupported architecture it will issue a warning and leave the class variables `libxlnk` and `libdma` undefined

`DMA_BIDIRECTIONAL = 3`

`DMA_FROM_DEV = 1`

`DMA_TO_DEV = 0`

`DMA_TRANSFER_LIMIT_BYTES = 8388607`

`DefaultConfig = {'Mm2SDataWidth': 32, 'HasS2Mm': 1, 'DeviceId': 0, 'HasMm2S': 0, 'H`

`DeviceId = 0`

`LIB_SEARCH_PATH = '/home/docs/checkouts/readthedocs.org/user_builds/pynq/checkouts/v2.`

configure (*attr_dict=None*)

Reconfigure and Reinitialize the DMA IP.

Uses a user provided dict to reinitialize the DMA. This method also frees the internal buffer associated with current object.

The keys in *attr_dict* should exactly match the ones used in default config. All the keys are not required. The default configuration is defined in `self.DefaultConfig` dict. Users can reinitialize the DMA with new configuration after creating the object.

Parameters *attr_dict* (*dict*) – A dictionary specifying DMA configuration values.

Returns

Return type `None`

create_buf (*num_bytes, cacheable=0*)

Allocate physically contiguous memory buffer.

Allocates/Reallocates buffer needed for DMA operations.

Possible values for parameter *cacheable* are:

1: the memory buffer is cacheable.

0: the memory buffer is non-cacheable.

Note: This buffer is allocated inside the kernel space using `xlnk` driver. The maximum allocatable memory is defined at kernel build time using the CMA memory parameters. For Pynq-Z1 kernel, it is specified as 128MB.

Parameters

- **num_bytes** (*int*) – Length of the allocated array in bytes.
- **cacheable** (*int*) – Indicating whether or not the memory buffer is cacheable

Returns

Return type `None`

`ffi = <cffi.api.FFI object>`

free_buf()

Free the memory buffer associated with this object.

Use this to free a previously allocated memory buffer. This is specially useful for reallocations.

Parameters **None** –

Returns

Return type None

get_buf(*width=32*)

Get a CFFI pointer to object's internal buffer.

This can be accessed like a regular array in python. The width can be either 32 or 64.

Parameters **width**(*int*) – The data width in the buffer.

Returns An CFFI object which can be accessed similar to arrays in C.

Return type cffi.FFI.CData

get_ndarray(*shape=None, dtype=<class 'numpy.float32'>, cacheable=0*)

Get a numpy ndarray of the DMA buffer, if shape is provided the buffer is resized to fit the specified shape.

Parameters

- **shape**(*int array*) – Shape of the numpy array to return
- **dtype**(*numpy.dtype*) – Type of the numpy array to return
- **cacheable**(*int*) – Passed to create_buf if a shape is provided

Returns Numpy view of the DMA buffer

Return type numpy.ndarray

memapi = <cffi.api.FFI object>

transfer(*num_bytes=-1, direction=-1*)

Transfer data using DMA (Non-blocking).

Used to initiate transfer of data between a physically contiguous buffer and PL. The buffer should be allocated using *create_buf* or *get_ndarray* before this call.

The *num_bytes* defaults to the buffer size and be both less than or equal to the buffer size and *DMA_TRANSFER_LIMIT_BYTES*.

Possible values for *direction* are:

(0)'DMA_TO_DEV' : DMA sends data to PL.

(1)'DMA_FROM_DEV' : DMA receives data from PL.

If the direction is not specified it uses the direction passed at initialisation. This is not valid for bidirectional DMA.

Parameters

- **num_bytes**(*int*) – Number of bytes to transfer.
- **direction**(*int*) – Direction in which DMA transfers data.

Returns

Return type None

wait (*wait_timeout=10*)

Block till DMA is busy or a timeout occurs.

Default value of timeout is 10 seconds.

Parameters **wait_timeout** (*int*) – Time to wait in seconds before timing out wait operation.

Returns

Return type None

class pynq.lib.dma.**timeout** (*seconds=1, error_message='Timeout'*)

Bases: object

Internal timeout functions.

This class is only used internally.

handle_timeout (*signum, frame*)

pynq.lib.led Module

The pynq.lib.rgbled module is a driver for controlling onboard single-color Light Emitting Diodes (LEDs).

class pynq.lib.led.**LED** (*index*)

Bases: object

This class controls the onboard LEDs.

index

int – The index of the onboard LED, starting from 0.

off ()

Turn off a single LED.

Returns

Return type None

on ()

Turn on a single LED.

Returns

Return type None

read ()

Retrieve the LED state.

Returns Either 0 if the LED is off or 1 if the LED is on.

Return type int

toggle ()

Flip the state of a single LED.

If the LED is on, it will be turned off. If the LED is off, it will be turned on.

Returns

Return type None

write (*value*)

Set the LED state according to the input value.

Parameters `value` (*int*) – This parameter can be either 0 (off) or 1 (on).

Raises `ValueError` – If the value parameter is not 0 or 1.

pynq.lib.pynqmicroblaze Module

class `pynq.lib.pynqmicroblaze.MBInterruptEvent` (*intr_pin, intr_ack_gpio*)

Bases: `object`

The class provides an asyncio Event-like interface to the interrupt subsystem for a Microblaze. The event is set by raising an interrupt and cleared using the clear function.

Typical use is to call clear prior to sending a request to the Microblaze and waiting in a loop until the response is received. This order of operations will avoid race conditions between the Microblaze and the host code.

clear ()

Clear the interrupt and reset the event. Resetting the event should be done before sending a request that will be acknowledged interrupts.

wait ()

Coroutine to wait until the event is set by an interrupt.

class `pynq.lib.pynqmicroblaze.MicroblazeHierarchy` (*description, mbtype='Unknown'*)

Bases: `pynq.overlay.DefaultHierarchy`

Hierarchy driver for the microblaze subsystem.

Enables the user to *load* programs on to the microblaze. All function calls and member accesses are delegated to the loaded program.

static `checkhierarchy` (*description*)

mbtype

The defined type of the microblaze subsystem. Used by driver programs to limit what microblaze subsystems the program is run on. The Pynq-Z1 base overlay has 'Ardiuno' and 'Pmod' microblaze types.

class `pynq.lib.pynqmicroblaze.PynqMicroblaze` (*mb_info, mb_program*)

Bases: `object`

This class controls the active Microblaze instances in the system.

ip_name

str – The name of the IP corresponding to the Microblaze.

rst_name

str – The name of the reset pin for the Microblaze.

mb_program

str – The absolute path of the Microblaze program.

state

str – The status (IDLE, RUNNING, or STOPPED) of the Microblaze.

reset_pin

GPIO – The reset pin associated with the Microblaze.

mmio

MMIO – The MMIO instance associated with the Microblaze.

interrupt

Event – An `asyncio.Event`-like class for waiting on and clearing interrupts.

program()

This method programs the Microblaze.

This method is called in `__init__()`; it can also be called after that. It uses the attribute `self.mb_program` to program the Microblaze.

Returns

Return type None

read(offset, length=1)

This method reads data from the shared memory of Microblaze.

Parameters

- **offset** (*int*) – The beginning offset where data are read from.
- **length** (*int*) – The number of data (32-bit int) to be read.

Returns An int of a list of data read from the shared memory.

Return type int/list

reset()

Reset the Microblaze to stop it from running.

This method will update the status of the Microblaze.

Returns

Return type None

run()

Start the Microblaze to run program loaded.

This method will update the status of the Microblaze.

Returns

Return type None

write(offset, data)

This method write data into the shared memory of the Microblaze.

Parameters

- **offset** (*int*) – The beginning offset where data are written into.
- **data** (*int/list*) – A list of 32b words to be written.

Returns

Return type None

pynq.lib.rgbled Module

The `pynq.lib.rgbled` module is a driver for controlling onboard Red-Green-Blue (RGB) Light Emitting Diodes (LEDs).

class `pynq.lib.rgbled.RGBLED(index)`

Bases: `object`

This class controls the onboard RGB LEDs.

index

int – The index of the RGB LED, from 4 (LD4) to 5 (LD5).

`_mmio`

MMIO – Shared memory map for the RGBLED GPIO controller.

`_rgbleds_val`

int – Global value of the RGBLED GPIO pins.

`off()`

Turn off a single RGBLED.

Returns

Return type None

`on(color)`

Turn on a single RGB LED with a color value (see color constants).

Parameters **`color`** (*int*) – Color of RGB specified by a 3-bit RGB integer value.

Returns

Return type None

`read()`

Retrieve the RGBLED state.

Returns The color value stored in the RGBLED.

Return type int

`write(color)`

Set the RGBLED state according to the input value.

Parameters **`color`** (*int*) – Color of RGB specified by a 3-bit RGB integer value.

Returns

Return type None

pynq.lib.switch Module

The `pynq.lib.switch` module is a driver for reading, and waiting for value changes on onboard switches.

`class pynq.lib.switch.Switch(index)`

Bases: object

This class controls the onboard switches.

`index`

int – Index of the onboard switches, starting from 0.

`read()`

Read the current value of the switch.

Returns Either 0 if the switch is off or 1 if the switch is on

Return type int

`wait_for_value(value)`

Wait for the switch to be set to a particular position

Parameters

- **`value`** (*int*) – 1 for the switch up and 0 for the switch down
- **function wraps the coroutine form so the `asyncio(This)` –**

- **loop** will run until the function returns (*event*) –

wait_for_value_async (*value*)
Wait for the switch to be set to a particular position

Parameters

- **value** (*int*) – 1 for the switch up and 0 for the switch down
- **function is an asyncio coroutine** (*This*) –

pynq.lib.usb_wifi Module

The pynq.lib.usb_wifi module is a python module for interacting with USB WiFi dongles. This module can be used to connect and disconnect to wireless networks.

class pynq.lib.usb_wifi.Usb_Wifi

Bases: object

This class controls the usb dongle wifi connection.

The board is compatible with RALink RT5370 devices.

Note: Administrator rights are necessary to create network interface file

wifi_port

str – string identifier of the wireless network device

connect (*ssid, password*)

Make a new wireless connection.

This function kills the wireless connection and connect to a new one using network ssid and WPA passphrase. Wrong ssid or passphrase will reject the connection.

Parameters

- **ssid** (*str*) – Unique identifier of the wireless network
- **password** (*str*) – String WPA passphrase necessary to access the network

Returns

Return type None

gen_network_file (*ssid, password*)

Generate the network authentication file.

Generate the file from network SSID and WPA passphrase

Parameters

- **ssid** (*str*) – String unique identifier of the wireless network
- **password** (*str*) – String WPA passphrase necessary to access the network

Returns

Return type None

reset ()

Shutdown the network connection.

This function shutdown the network connection and delete the interface file.

Returns**Return type** None**pynq.lib.video Module**

The pynq.lib.video module is a driver capturing streaming HDMI input, producing streaming HDMI output and hardware-accelerated colorspace conversion.

```
class pynq.lib.video.AxiVDMA (description, framecount=4)
```

Bases: *pynq.overlay.DefaultIP*

Driver class for the Xilinx VideoDMA IP core

The driver is split into input and output channels are exposed using the readchannel and writechannel attributes. Each channel has start and stop methods to control the data transfer. All channels **MUST** be stopped before reprogramming the bitstream or inconsistent behaviour may result.

The DMA uses a single ownership model of frames in that frames are either owned by the DMA or the user code but not both. S2MMChannel.readframe and MM2SChannel.newframe both return a frame to the user. It is the user's responsibility to either free the frame using the freebuffer() method or to hand ownership back to the DMA using MM2SChannel.writeframe. Once ownership has been returned the user should not access the contents of the frame as the underlying memory may be deleted without warning.

readchannel

AxiVDMA.S2MMChannel – Video input DMA channel

writechannel

AxiVDMA.MM2SChannel – Video output DMA channel

```
class MM2SChannel (parent, interrupt)
```

Bases: object

DMA channel from memory to a video output.

Will continually repeat the most recent frame written.

mode

VideoMode – Video mode of the DMA channel

activeframe**desiredframe****framedelay****mode**

The video mode of the DMA, must be called prior to starting. If changed while the DMA channel is running the channel will be stopped

newframe ()

Returns a frame of the appropriate size for the video mode.

The contents of the frame are undefined and should not be assumed to be black

Returns

Return type numpy.ndarray video frame

parked

Is the channel parked or running in circular buffer mode

reload ()

Reload the configuration of the DMA. Should only be called by the _FrameList class or if you really know what you are doing

reset ()
Soft reset the DMA channel

running

setframe (frame)
Sets a frame without blocking or taking ownership. In most circumstances writeframe() is more appropriate

start ()
Start the DMA channel with a blank screen. The mode must be set prior to calling or a RuntimeError will result.

stop ()
Stop the DMA channel and empty the frame cache

writeframe (frame)
Schedule the specified frame to be the next one displayed. Assumes ownership of frame which should no longer be modified by the user. May block if there is already a frame scheduled.

writeframe_async (frame)
Same as writeframe() but yields instead of blocking if a frame is already scheduled

class S2MMChannel (parent, interrupt)
Bases: object

Read channel of the Video DMA

Brings frames from the video input into memory. Hands ownership of the read frames to the user code.

mode
VideoMode – The video mode of the DMA channel

activeframe
The frame index currently being processed by the DMA

This process requires clearing any error bits in the DMA channel

desiredframe
The next frame index to the processed by the DMA

irqframecount

mode
The video mode of the DMA. Must be set prior to starting. Changing this while the DMA is running will result in the DMA being stopped.

parked
Is the channel parked or running in circular buffer mode

readframe ()
Read a frame from the channel and return to the user

This function may block until a complete frame has been read. A single frame buffer is kept so the first frame read after a long pause in reading may return a stale frame. To ensure an up-to-date frame when starting processing video read an additional time before starting the processing loop.

Returns
Return type numpy.ndarray of the video frame

readframe_async ()
Read a frame from the channel, yielding instead of blocking if no data is available. See readframe for more details

reload()
Reload the configuration of the DMA. Should only be called by the `_FrameList` class or if you really know what you are doing

reset()
Soft reset the DMA. Finishes all transfers before starting the reset process

running
Is the DMA channel running

start()
Start the DMA. The mode must be set prior to this being called

stop()
Stops the DMA, clears the frame cache and unhooks any tied outputs

tie(channel)
Ties an output channel to this input channel. This is used to pass video from input to output without invoking the CPU for each frame. Main use case is when some slow processing is being done on a subset of frames while the video is passed through directly to the output. Only one output may be tied to an output. The tie is broken either by calling `tie(None)` or writing a frame to the tied output channel.

```
bindto = ['xilinx.com:ip:axi_vdma:6.2']
```

```
class pynq.lib.video.ColorConverter(description)
```

Bases: `pynq.overlay.DefaultIP`

Driver for the color space converter

The colorspace convert implements a 3x4 matrix for performing arbitrary linear color conversions. Each coefficient is represented as a 10 bit signed fixed point number with 2 integer bits. The result of the computation can be visualised as a table

```
# in1 in2 in3 1 # out1 c1 c2 c3 c10 # out2 c4 c5 c6 c11 # out3 c7 c8 c9 c12
```

The color can be changed mid-stream.

colorspace

list of float – The coefficients of the colorspace conversion

```
bindto = ['xilinx.com:hls:color_convert:1.0']
```

colorspace

The colorspace to convert. See the class description for details of the coefficients. The coefficients are a list of floats of length 12

```
class pynq.lib.video.HDMIIn(description, vdma=None)
```

Bases: `pynq.overlay.DefaultHierarchy`

Wrapper for the input video pipeline of the Pynq-Z1 base overlay

This wrapper assumes the following pipeline structure and naming

color_convert_in -> pixel_pack -> axi_vdma with vtc_in and axi_gpio_hdmiin helper IP

frontend

`pynq.lib.video.HDMIInFrontend` – The HDMI frontend for signal detection

color_convert

`pynq.lib.video.ColorConverter` – The input color format converter

pixel_pack

`pynq.lib.video.PixelPacker` – Converts the input pixel size to that required by the VDMA

static checkhierarchy (*description*)

close ()

Uninitialise the drivers, stopping the pipeline beforehand

colorspace

The colorspace of the pipeline, can be changed without stopping the pipeline

configure (*pixelformat=<pynq.lib.video.PixelFormat object>*)

Configure the pipeline to use the specified pixel format.

If the pipeline is running it is stopped prior to the configuration being changed

Parameters pixelformat (*PixelFormat*) – The pixel format to configure the pipeline for

mode

Video mode of the input

readframe ()

Read a video frame

See `AxiVDMA.S2MMChannel.readframe` for details

readframe_async ()

Read a video frame

See `AxiVDMA.S2MMChannel.readframe` for details

start ()

Start the pipeline

stop ()

Stop the pipeline

tie (*output*)

Mirror the video input on to an output channel

Parameters output (*HDMIOut*) – The output to mirror on to

class `pynq.lib.video.HDMIInFrontend` (*description*)

Bases: `pynq.overlay.DefaultHierarchy`

Class for interacting the with HDMI input frontend

This class is used for enabling the HDMI input and retrieving the mode of the incoming video

mode

VideoMode – The detected mode of the incoming video stream

static checkhierarchy (*description*)

mode

start (*init_timeout=10*)

Method that blocks until the video mode is successfully detected

stop ()

Currently empty function included for symmetry with the `HDMIOutFrontend` class

class `pynq.lib.video.HDMIOut` (*description, vdma=None*)

Bases: `pynq.overlay.DefaultHierarchy`

Wrapper for the output video pipeline of the Pynq-Z1 base overlay

This wrapper assumes the following pipeline structure and naming

`axi_vdma -> pixel_unpack -> color_convert -> frontend` with `vtc_out` and `axi_dynclk` helper IP

frontend*pynq.lib.video.HDMIOutFrontend* – The HDMI frontend for mode setting**color_convert***pynq.lib.video.ColorConverter* – The output color format converter**pixel_unpack***pynq.lib.video.PixelPacker* – Converts the input pixel size to 24 bits-per-pixel**static checkhierarchy** (*description*)**close** ()

Close the pipeline and uninitialise the drivers

colorspace

Set the colorspace for the pipeline - can be done without stopping the pipeline

configure (*mode*, *pixelformat=None*)

Configure the pipeline to use the specified pixel format and size.

If the pipeline is running it is stopped prior to the configuration being changed

Parameters

- **mode** (*VideoMode*) – The video mode to output
- **pixelformat** (*PixelFormat*) – The pixel format to configure the pipeline for

mode

The currently configured video mode

newframe ()

Return an uninitialised video frame of the correct type for the pipeline

start ()

Start the pipeline

stop ()

Stop the pipeline

writeframe (*frame*)

Write the frame to the video output

See *AxiVDMA.MM2SChannel.writeframe* for more details**writeframe_async** (*frame*)

Write the frame to the video output

See *AxiVDMA.MM2SChannel.writeframe* for more details**class** *pynq.lib.video.HDMIOutFrontend* (*description*)Bases: *pynq.overlay.DefaultHierarchy*

Class for interacting the HDMI output frontend

This class is used for enabling the HDMI output and setting the desired mode of the video stream

mode*VideoMode* – Desired mode for the output video. Must be set prior to calling start**static checkhierarchy** (*description*)**mode**

Get or set the video mode for the HDMI output, must be set to one of the following resolutions:

640x480 800x600 1280x720 1280x1024 1920x1080

Any other resolution will result in a `ValueError` being raised. The bits per pixel will always be 24 when retrieved and ignored when set.

start = None

Start the HDMI output - requires the that mode is already set

stop = None

Stop the HDMI output

class `pynq.lib.video.HDMIWrapper` (*description*)

Bases: `pynq.overlay.DefaultHierarchy`

Hierarchy driver for the entire Pynq-Z1 video subsystem.

Exposes the input, output and video DMA as attributes. For most use cases the wrappers for the input and output pipelines are sufficient and the VDMA will not need to be used directly.

hdmi_in

`pynq.lib.video.HDMIIn` – The HDMI input pipeline

hdmi_out

`pynq.lib.video.HDMIOut` – The HDMI output pipeline

axi_vdma

`pynq.lib.video.AxiVDMA` – The video DMA.

static `checkhierarchy` (*description*)

class `pynq.lib.video.PixelFormat` (*bits_per_pixel, in_color, out_color*)

Bases: `object`

Wrapper for all of the information about a video format

bits_per_pixel

int – Number of bits for each pixel

in_color

list of float – Coefficients from BGR stream to pixel format

out_color

list of float – Coefficient from pixel format to BGR stream

class `pynq.lib.video.PixelPacker` (*description*)

Bases: `pynq.overlay.DefaultIP`

Driver for the pixel format convert

Changes the number of bits per pixel in the video stream. The stream should be paused prior to the width being changed. This can be targeted at either a `pixel_pack` or a `pixel_unpack` IP core. For a packer the input is always 24 bits per pixel while for an unpacker the output 24 bits per pixel.

bindto = `['xilinx.com:hls:pixel_pack:1.0', 'xilinx.com:hls:pixel_unpack:1.0']`

bits_per_pixel

Number of bits per pixel in the stream

Valid values are 8, 24 and 32. The following table describes the operation for packing and unpacking for each width

| | | | | | | | | | | | | | | |
|------|------|--------|-------|-----------------------------|---------------------------|--------|-----------------------|-----------------------|--------|-----------|-----------|--------|----------------------|-------------------|
| Mode | Pack | Unpack | 8 bpp | Keep only the first channel | Pad other channels with 0 | 16 bpp | Dependent on resample | Dependent on resample | 24 bpp | No change | No change | 32 bpp | Pad channel 4 with 0 | Discard channel 4 |
|------|------|--------|-------|-----------------------------|---------------------------|--------|-----------------------|-----------------------|--------|-----------|-----------|--------|----------------------|-------------------|

resample

Perform chroma resampling in 16 bpp mode

Boolean property that only affects 16 bpp mode. If True then the two chroma channels are multiplexed on to the second output pixel, otherwise only the first and second channels are transferred and the third is discarded

```
class pynq.lib.video.VideoMode (width, height, bits_per_pixel, stride=None)
```

Bases: object

Class for holding the information about a video mode

height

int – Height of the video frame in lines

width

int – Width of the video frame in pixels

stride

int – Width of a line in the video frame in bytes

bits_per_pixel

int – Bits per pixel

bytes_per_Pixel

int – Bytes required to represent each pixel

shape

tuple of int – Numpy-style tuple describing the video frame

pynq.lib.arduino Package

The pynq.lib.arduino package is a collection of drivers for controlling peripherals attached to an Arduino pin interface. The Arduino interface can control Arduino peripherals or Grove peripherals (via the PYNQ Grove shield)

pynq.lib.arduino.arduino_analog Module

```
class pynq.lib.arduino.arduino_analog.Arduino_Analog (mb_info, gr_pin)
```

Bases: object

This class controls the Arduino Analog.

XADC is an internal analog controller in the hardware. This class provides API to do analog reads from IOP.

microblaze

Arduino – Microblaze processor instance used by this module.

log_running

int – The state of the log (0: stopped, 1: started).

log_interval_ms

int – Time in milliseconds between samples on the same channel.

gr_pin

list – A group of pins on arduino-grove shield.

num_channels

int – The number of channels sampled.

get_log()

Return list of logged samples.

Returns List of valid voltage samples (floats) from the ADC sensor.

Return type list

get_log_raw()

Return list of logged raw samples.

Returns List of valid raw samples from the analog device.

Return type list

read()

Read the voltage value from the analog peripheral.

Returns The float values after translation.

Return type list

read_raw()

Read the analog raw value from the analog peripheral.

Returns The raw values from the analog device.

Return type list

reset()

Resets the system monitor for analog devices.

Returns

Return type None

set_log_interval_ms(log_interval_ms)

Set the length of the log for the analog peripheral.

This method can set the time interval between two samples, so that users can read out multiple values in a single log.

Parameters **log_interval_ms** (*int*) – The time between two samples in milliseconds, for logging only.

Returns

Return type None

start_log()

Start recording multiple voltage values (float) in a log.

This method will first call `set_log_interval_ms()` before writing to the MMIO.

Returns

Return type None

start_log_raw()

Start recording raw data in a log.

This method will first call `set_log_interval_ms()` before writing to the MMIO.

Returns

Return type None

stop_log()

Stop recording the voltage values in the log.

This can be done by calling the `stop_log_raw()` method.

Returns

Return type None

stop_log_raw()

Stop recording the raw values in the log.

Simply write 0xC to the MMIO to stop the log.

Returns

Return type None

pynq.lib.arduino.arduino_grove_adc Module

class `pynq.lib.arduino.arduino_grove_adc.Grove_ADC` (*mb_info*, *gr_pin*)

Bases: `object`

This class controls the Grove IIC ADC.

Grove ADC is a 12-bit precision ADC module based on ADC121C021. Hardware version: v1.2.

microblaze

Arduino – Microblaze processor instance used by this module.

log_running

int – The state of the log (0: stopped, 1: started).

log_interval_ms

int – Time in milliseconds between sampled reads.

get_log()

Return list of logged samples.

Returns List of valid voltage samples (floats) from the ADC sensor.

Return type list

get_log_raw()

Return list of logged raw samples.

Returns List of valid raw samples from the ADC sensor.

Return type list

read()

Read the ADC voltage from the Grove ADC peripheral.

Returns The float value after translation.

Return type float

read_raw()

Read the ADC raw value from the Grove ADC peripheral.

Returns The raw value from the sensor.

Return type int

reset()

Resets/initializes the ADC.

Returns

Return type None

set_log_interval_ms (*log_interval_ms*)

Set the length of the log for the Grove ADC peripheral.

This method can set the time interval between two samples, so that users can read out multiple values in a single log.

Parameters **log_interval_ms** (*int*) – The time between two samples in milliseconds, for logging only.

Returns

Return type None

start_log ()

Start recording multiple voltage values (float) in a log.

This method will first call set_log_interval_ms() before sending the command.

Returns

Return type None

start_log_raw ()

Start recording raw data in a log.

This method will first call set_log_interval_ms() before sending the command.

Returns

Return type None

stop_log ()

Stop recording the voltage values in the log.

Simply send the command 0xC to stop the log.

Returns

Return type None

stop_log_raw ()

Stop recording the raw values in the log.

Simply send the command 0xC to stop the log.

Returns

Return type None

pynq.lib.arduino.arduino_grove_buzzer Module

class pynq.lib.arduino.arduino_grove_buzzer.**Grove_Buzzer** (*mb_info*, *gr_pin*)

Bases: object

This class controls the Grove Buzzer.

The grove buzzer module has a piezo buzzer as the main component. The piezo can be connected to digital outputs, and will emit a tone when the output is HIGH. Alternatively, it can be connected to an analog pulse-width modulation output to generate various tones and effects. Hardware version: v1.2.

microblaze

Arduino – Microblaze processor instance used by this module.

play_melody ()

Play a melody.

Returns**Return type** None**play_tone** (*tone_period*, *num_cycles*)Play a single tone with *tone_period* for *num_cycles***Parameters**

- **tone_period** (*int*) – The period of the tone in microsecond.
- **num_cycles** (*int*) – The number of cycles for the tone to be played.

Returns**Return type** None**pynq.lib.arduino.arduino_grove_color Module****class** pynq.lib.arduino.arduino_grove_color.**Grove_Color** (*mb_info*, *gr_pin*)

Bases: object

This class controls the Grove IIC Color sensor.

Grove Color sensor based on the TCS3414CS. Hardware version: v1.3.

microblaze*Arduino* – Microblaze processor instance used by this module.**read()**

Read the color values from the Grove Color peripheral.

The output contains 4 integer values: Red, Green, Blu and Clear. Clear represents the value of the sensor if no color filters are applied.

Returns A list of (red, green, blue, clear) components.**Return type** list**pynq.lib.arduino.arduino_grove_ear_hr Module****class** pynq.lib.arduino.arduino_grove_ear_hr.**Grove_EarHR** (*mb_info*, *gr_pin*)

Bases: object

This class controls the Grove ear clip heart rate sensor. Sensor model: MED03212P.

microblaze*Arduino* – Microblaze processor instance used by this module.**read()**

Read the heart rate from the sensor.

Returns The heart rate as beats per minute**Return type** float**read_raw()**

Read the number of heart beats.

Read the number of beats since the sensor initialization; also read the time elapsed in ms between the latest two heart beats.

Returns Number of heart beats and the time elapsed between 2 latest beats.

Return type tuple

`pynq.lib.arduino.arduino_grove_finger_hr` Module

class `pynq.lib.arduino.arduino_grove_finger_hr.Grove_FingerHR` (*mb_info*, *gr_pin*)

Bases: object

This class controls the Grove finger clip heart rate sensor.

Grove Finger sensor based on the TCS3414CS. Hardware version: v1.3.

microblaze

Arduino – Microblaze processor instance used by this module.

log_running

int – The state of the log (0: stopped, 1: started).

log_interval_ms

int – Time in milliseconds between sampled reads.

get_log ()

Return list of logged samples.

Returns List of integers containing the heart rate.

Return type list

read ()

Read the heart rate value from the Grove Finger HR peripheral.

Returns An integer representing the heart rate frequency.

Return type int

start_log (*log_interval_ms=100*)

Start recording multiple heart rate values in a log.

This method will first call set the log interval before writing to the MMIO.

Parameters **log_interval_ms** (*int*) – The time between two samples in milliseconds.

Returns

Return type None

stop_log ()

Stop recording the values in the log.

Simply write 0xC to the MMIO to stop the log.

Returns

Return type None

`pynq.lib.arduino.arduino_grove_haptic_motor` Module

class `pynq.lib.arduino.arduino_grove_haptic_motor.Grove_HapticMotor` (*mb_info*,
gr_pin)

Bases: object

This class controls the Grove Haptic Motor based on the DRV2605L. Hardware version v0.9.

microblaze

Arduino – Microblaze processor instance used by this module.

is_playing()

Check if a vibration effect is running on the motor.

Returns True if a vibration effect is playing, false otherwise

Return type bool

play(effect)

Play a vibration effect on the Grove Haptic Motor peripheral.

Valid effect identifiers are in the range [1, 127].

Parameters **effect** (*int*) – An integer that specifies the effect.

Returns

Return type None

play_sequence(sequence)

Play a sequence of effects possibly separated by pauses.

At most 8 effects or pauses can be specified at a time. Pauses are defined using negative integer values in the range [-1, -127] that correspond to a pause length in the range [10, 1270] ms

Valid effect identifiers are in the range [1, 127]

As an example, in the following sequence example: [4,-20,5] effect 4 is played and after a pause of 200 ms effect 5 is played

Parameters **sequence** (*list*) – At most 8 values specifying effects and pauses.

Returns

Return type None

stop()

Stop an effect or a sequence on the motor peripheral.

Returns

Return type None

pynq.lib.arduino.arduino_grove_imu Module

class pynq.lib.arduino.arduino_grove_imu.**Grove_IMU**(*mb_info*, *gr_pin*)

Bases: object

This class controls the Grove IIC IMU.

Grove IMU 10DOF is a combination of grove IMU 9DOF (MPU9250) and grove barometer sensor (BMP180). MPU-9250 is a 9-axis motion tracking device that combines a 3-axis gyroscope, 3-axis accelerometer, 3-axis magnetometer and a Digital Motion Processor (DMP). BMP180 is a high precision, low power digital pressure sensor. Hardware version: v1.1.

microblaze

Arduino – Microblaze processor instance used by this module.

get_acc1()

Get the data from the accelerometer.

Returns A list of the acceleration data along X-axis, Y-axis, and Z-axis.

Return type list

get_altitude()

Get the current altitude.

Returns The altitude value.

Return type float

get_atm()

Get the current pressure in relative atmosphere.

Returns The related atmosphere.

Return type float

get_compass()

Get the data from the magnetometer.

Returns A list of the compass data along X-axis, Y-axis, and Z-axis.

Return type list

get_gyro()

Get the data from the gyroscope.

Returns A list of the gyro data along X-axis, Y-axis, and Z-axis.

Return type list

get_heading()

Get the value of the heading.

Returns The angle deviated from the X-axis, toward the positive Y-axis.

Return type float

get_pressure()

Get the current pressure in Pa.

Returns The pressure value.

Return type float

get_temperature()

Get the current temperature in degree C.

Returns The temperature value.

Return type float

get_tilt_heading()

Get the value of the tilt heading.

Returns The tilt heading value.

Return type float

reset()

Reset all the sensors on the grove IMU.

Returns

Return type None

pynq.lib.arduino.arduino_grove_ledbar Module

class pynq.lib.arduino.arduino_grove_ledbar.Grove_LEDbar(*mb_info*, *gr_pin*)

Bases: object

This class controls the Grove LED BAR.

Grove LED Bar is comprised of a 10 segment LED gauge bar and an MY9221 LED controlling chip. Model: LED05031P. Hardware version: v2.0.

microblaze

Arduino – Microblaze processor instance used by this module.

read()

Reads the current status of LEDbar.

Reads the current status of LED bar and returns 10-bit binary string. Each bit position corresponds to a LED position in the LEDbar, and bit value corresponds to the LED state.

Red LED corresponds to the LSB, while green LED corresponds to the MSB.

Returns String of 10 binary bits.

Return type str

reset()

Resets the LEDbar.

Clears the LED bar, sets all LEDs to OFF state.

Returns

Return type None

write_binary(*data_in*)

Set individual LEDs in the LEDbar based on 10 bit binary input.

Each bit in the 10-bit *data_in* points to a LED position on the LEDbar. Red LED corresponds to the LSB, while green LED corresponds to the MSB.

Parameters *data_in* (*int*) – 10 LSBs of this parameter control the LEDbar.

Returns

Return type None

write_brightness(*data_in*, *brightness*=[170, 170, 170, 170, 170, 170, 170, 170, 170, 170])

Set individual LEDs with 3 level brightness control.

Each bit in the 10-bit *data_in* points to a LED position on the LEDbar. Red LED corresponds to the LSB, while green LED corresponds to the MSB.

Brightness of each LED is controlled by the brightness parameter. There are 3 perceivable levels of brightness: 0xFF : HIGH 0xAA : MED 0x01 : LOW

Parameters

- *data_in* (*int*) – 10 LSBs of this parameter control the LEDbar.
- *brightness* (*list*) – Each element controls a single LED.

Returns

Return type None

write_level (*level*, *bright_level*, *green_to_red*)

Set the level to which the leds are to be lit in levels 1 - 10.

Level can be set in both directions. *set_level* operates by setting all LEDs to the same brightness level.

There are 4 preset brightness levels: *bright_level* = 0: off *bright_level* = 1: low *bright_level* = 2: medium *bright_level* = 3: maximum

green_to_red indicates the direction, either from red to green when it is 0, or green to red when it is 1.

Parameters

- **level** (*int*) – 10 levels exist, where 1 is minimum and 10 is maximum.
- **bright_level** (*int*) – Controls brightness of all LEDs in the LEDbar, from 0 to 3.
- **green_to_red** (*int*) – Sets the direction of the sequence.

Returns

Return type None

pynq.lib.arduino.arduino_grove_light Module

class pynq.lib.arduino.arduino_grove_light.**Grove_Light** (*mb_info*, *gr_pin*)

Bases: [*pynq.lib.arduino.arduino_grove_adc.Grove_ADC*](#)

This class controls the grove light sensor.

This class inherits from the Grove_ADC class. To use this module, grove ADC has to be used as a bridge. The light sensor incorporates a Light Dependent Resistor (LDR) GL5528. Hardware version: v1.1.

microblaze

Arduino – Microblaze processor instance used by this module.

log_running

int – The state of the log (0: stopped, 1: started).

log_interval_ms

int – Time in milliseconds between sampled reads.

get_log ()

Return list of logged light sensor resistances.

Returns List of valid light sensor resistances.

Return type list

read ()

Read the light sensor resistance in from the light sensor.

This method overrides the definition in grove ADC.

Returns The light reading in terms of the sensor resistance.

Return type float

start_log ()

Start recording the light sensor resistance in a log.

This method will call the *start_log_raw*() in the parent class.

Returns

Return type None

stop_log()

Stop recording light values in a log.

This method will call the stop_log_raw() in the parent class.

Returns

Return type None

pynq.lib.arduino.arduino_grove_oled Module

class pynq.lib.arduino.arduino_grove_oled.**Grove_OLED**(*mb_info*, *gr_pin*)

Bases: object

This class controls the Grove IIC OLED.

Grove LED 128x64 Display module is an OLED monochrome 128x64 matrix display module. Model: OLE35046P. Hardware version: v1.1.

microblaze

Arduino – Microblaze processor instance used by this module.

clear()

Clear the OLED screen.

This is done by writing empty strings into the OLED in Microblaze.

Returns

Return type None

set_contrast(*brightness*)

Set the contrast level for the OLED display.

The contrast level is in [0, 255].

Parameters **brightness** (*int*) – The brightness of the display.

Returns

Return type None

set_horizontal_mode()

Set the display mode to horizontal.

Returns

Return type None

set_inverse_mode()

Set the display mode to inverse.

Returns

Return type None

set_normal_mode()

Set the display mode to normal.

Returns

Return type None

set_page_mode()

Set the display mode to paged.

Returns**Return type** None**set_position** (*row*, *column*)

Set the position of the display.

The position is indicated by (row, column).

Parameters

- **row** (*int*) – The row number to start the display.
- **column** (*int*) – The column number to start the display.

Returns**Return type** None**write** (*text*)

Write a new text string on the OLED.

Clear the screen first to correctly show the new text.

Parameters **text** (*str*) – The text string to be displayed on the OLED screen.**Returns****Return type** None**pynq.lib.arduino.arduino_grove_pir Module****class** pynq.lib.arduino.arduino_grove_pir.**Grove_PIR** (*mb_info*, *gr_pin*)Bases: [pynq.lib.arduino.arduino_io.Arduino_IO](#)

This class controls the PIR motion sensor.

Hardware version: v1.2.

microblaze*Arduino* – Microblaze processor instance used by this module.**read** ()

Receive the value from the PIR sensor.

Returns 0 when there is no motion, and returns 1 otherwise.

Returns The data (0 or 1) read from the PIR sensor.**Return type** int**pynq.lib.arduino.arduino_grove_th02 Module****class** pynq.lib.arduino.arduino_grove_th02.**Grove_TH02** (*mb_info*, *gr_pin*)Bases: [object](#)

This class controls the Grove I2C Temperature and Humidity sensor.

Temperature & humidity sensor (high-accuracy & mini). Hardware version: v1.0.

microblaze*Arduino* – Microblaze processor instance used by this module.

log_running

int – The state of the log (0: stopped, 1: started).

log_interval_ms

int – Time in milliseconds between sampled reads.

get_log()

Return list of logged samples.

Returns List of tuples containing (temperature, humidity)

Return type list

read()

Read the temperature and humidity values from the TH02 peripheral.

Returns Tuple containing (temperature, humidity)

Return type tuple

start_log(log_interval_ms=100)

Start recording multiple heart rate values in a log.

This method will first call set the log interval before sending the command.

Parameters **log_interval_ms** (*int*) – The time between two samples in milliseconds.

Returns

Return type None

stop_log()

Stop recording the values in the log.

Simply send the command 0xC to stop the log.

Returns

Return type None

pynq.lib.arduino.arduino_grove_tmp Module

class pynq.lib.arduino.arduino_grove_tmp.**Grove_TMP** (*mb_info*, *gr_pin*, *version*='v1.2')

Bases: [pynq.lib.arduino.arduino_grove_adc.Grove_ADC](#)

This class controls the grove temperature sensor.

This class inherits from the Grove_ADC class. To use this module, grove ADC has to be used as a bridge. The temperature sensor uses a thermistor to detect the ambient temperature. Hardware version: v1.2.

microblaze

Arduino – Microblaze processor instance used by this module.

log_running

int – The state of the log (0: stopped, 1: started).

log_interval_ms

int – Time in milliseconds between sampled reads.

bValue

int – The thermistor constant.

get_log()

Return list of logged temperature samples.

Returns List of valid temperature readings from the temperature sensor.

Return type list

read()

Read temperature values in Celsius from temperature sensor.

This method overrides the definition in Grove_ADC.

Returns The temperature reading in Celsius.

Return type float

start_log()

Start recording temperature in a log.

This method will call the start_log_raw() in the parent class.

stop_log()

Stop recording temperature in a log.

This method will call the stop_log_raw() in the parent class.

Returns

Return type None

pynq.lib.arduino.arduino_io Module

class pynq.lib.arduino.arduino_io.**Arduino_IO**(*mb_info, index, direction*)

Bases: pynq.lib.arduino.arduino_devmode.Arduino_DevMode

This class controls the Arduino IO pins as inputs or outputs.

Note: The parameter ‘direction’ determines whether the instance is input/output: ‘in’ : receiving input from offchip to onchip. ‘out’ : sending output from onchip to offchip.

Note: The index of the Arduino pins: upper row, from right to left: {0, 1, ..., 13}. (D0 - D13) lower row, from left to right: {14, 15, ..., 19}. (A0 - A5)

microblaze

Arduino – Microblaze processor instance used by this module.

index

int – The index of the Arduino pin, from 0 to 19.

direction

str – Input ‘in’ or output ‘out’.

read()

Receive the value from the offboard Arduino IO device.

Note: Only use this function when direction is ‘in’.

Returns The data (0 or 1) on the specified Arduino IO pin.

Return type int

write (*value*)

Send the value to the offboard Arduino IO device.

Note: Only use this function when direction is 'out'.

Parameters **value** (*int*) – The value to be written to the Arduino IO device.

Returns

Return type None

pynq.lib.arduino.arduino_lcd18 Module

class pynq.lib.arduino.arduino_lcd18.**Arduino_LCD18** (*mb_info*)

Bases: object

This class controls the Adafruit 1.8" LCD shield from AdaFruit.

The LCD panel consists of ST7735 LCD controller, a joystick, and a microSD socket. This class uses the LCD panel (128x160 pixels) and the joystick. The joystick uses A3 analog channel. <https://www.adafruit.com/product/802>.

microblaze

Arduino – Microblaze processor instance used by this module.

buf_manager

Xlnk – DDR management unit that provides the physical address of the image.

clear ()

Clear the screen.

Returns

Return type None

display (*img_path*, *x_pos=0*, *y_pos=127*, *orientation=3*, *background=None*, *frames=1*)

Animate the image at the desired location for multiple frames.

The maximum screen resolution is 160x128.

Users can specify the position to display the image. For example, to display the image in the center, *x_pos* can be $(160 - \text{width}/2)$, *y_pos* can be $(128/2) + (\text{height}/2)$.

A typical orientation is 3. The origin of orientation 0, 1, 2, and 3 corresponds to upper right corner, lower right corner, lower left corner, and upper left corner, respectively. Currently, only 1 and 3 are valid orientations. If users choose orientation 1, the picture will be shown upside-down. If users choose orientation 3, the picture will be shown consistently with the LCD screen orientation.

Parameter *background* specifies the color of the background; it is a list of 3 elements: R, G, and B, each with 8 bits for color level.

Parameters

- **img_path** (*str*) – The file path to the image stored in the file system.
- **x_pos** (*int*) – x position of a pixel where the image starts.
- **y_pos** (*int*) – y position of a pixel where the image starts.
- **background** (*list*) – A list of [R, G, B] components for background, each of 8 bits.

- **orientation** (*int*) – orientation of the image; valid values are 1 and 3.
- **frames** (*int*) – Number of frames the image is moved, must be less than 65536.

Returns

Return type None

display_async (*img_path*, *x_pos*=0, *y_pos*=127, *orientation*=3, *background*=None, *frames*=1)
Animate the image at the desired location for multiple frames.

The maximum screen resolution is 160x128.

Users can specify the position to display the image. For example, to display the image in the center, *x_pos* can be (160-width/2), *y_pos* can be (128/2)+(height/2).

A typical orientation is 3. The origin of orientation 0, 1, 2, and 3 corresponds to upper right corner, lower right corner, lower left corner, and upper left corner, respectively. Currently, only 1 and 3 are valid orientations. If users choose orientation 1, the picture will be shown upside-down. If users choose orientation 3, the picture will be shown consistently with the LCD screen orientation.

Parameter *background* specifies the color of the background; it is a list of 3 elements: R, G, and B, each with 8 bits for color level.

Parameters

- **img_path** (*str*) – The file path to the image stored in the file system.
- **x_pos** (*int*) – x position of a pixel where the image starts.
- **y_pos** (*int*) – y position of a pixel where the image starts.
- **background** (*list*) – A list of [R, G, B] components for background, each of 8 bits.
- **orientation** (*int*) – orientation of the image; valid values are 1 and 3.
- **frames** (*int*) – Number of frames the image is moved, must be less than 65536.

Returns

Return type None

draw_filled_rectangle (*x_start_pos*, *y_start_pos*, *width*, *height*, *color*=None, *background*=None, *orientation*=3)
Draw a filled rectangle.

Parameter *color* specifies the color of the text; it is a list of 3 elements: R, G, and B, each with 8 bits for color level.

Parameter *background* is similar to parameter *color*, except that it specifies the background color.

A typical orientation is 3. The origin of orientation 0, 1, 2, and 3 corresponds to upper right corner, lower right corner, lower left corner, and upper left corner, respectively. Currently, only 1 and 3 are valid orientations. If users choose orientation 1, the picture will be shown upside-down. If users choose orientation 3, the picture will be shown consistently with the LCD screen orientation.

Parameters

- **x_start_pos** (*int*) – x position (in pixels) where the rectangle starts.
- **y_start_pos** (*int*) – y position (in pixels) where the rectangle starts.
- **width** (*int*) – Width of the rectangle (in pixels).
- **height** (*int*) – Height of the rectangle (in pixels).
- **color** (*list*) – A list of [R, G, B] components for line color, each of 8 bits.

- **background** (*list*) – A list of [R, G, B] components for background, each of 8 bits.
- **orientation** (*int*) – orientation of the image; valid values are 1 and 3.

Returns

Return type None

draw_line (*x_start_pos*, *y_start_pos*, *x_end_pos*, *y_end_pos*, *color=None*, *background=None*, *orientation=3*)

Draw a line from starting point to ending point.

The maximum screen resolution is 160x128.

Parameter *color* specifies the color of the line; it is a list of 3 elements: R, G, and B, each with 8 bits for color level.

Parameter *background* is similar to parameter *color*, except that it specifies the background color.

A typical orientation is 3. The origin of orientation 0, 1, 2, and 3 corresponds to upper right corner, lower right corner, lower left corner, and upper left corner, respectively. Currently, only 1 and 3 are valid orientations. If users choose orientation 1, the picture will be shown upside-down. If users choose orientation 3, the picture will be shown consistently with the LCD screen orientation.

Parameters

- **x_start_pos** (*int*) – x position (in pixels) where the line starts.
- **y_start_pos** (*int*) – y position (in pixels) where the line starts.
- **x_end_pos** (*int*) – x position (in pixels) where the line ends.
- **y_end_pos** (*int*) – y position (in pixels) where the line ends.
- **color** (*list*) – A list of [R, G, B] components for line color, each of 8 bits.
- **background** (*list*) – A list of [R, G, B] components for background, each of 8 bits.
- **orientation** (*int*) – orientation of the image; valid values are 1 and 3.

Returns

Return type None

print_string (*x_start_pos*, *y_start_pos*, *text*, *color=None*, *background=None*, *orientation=3*)

Draw a character with a specific color.

The maximum screen resolution is 160x128.

Parameter *color* specifies the color of the text; it is a list of 3 elements: R, G, and B, each with 8 bits for color level.

Parameter *background* is similar to parameter *color*, except that it specifies the background color.

A typical orientation is 3. The origin of orientation 0, 1, 2, and 3 corresponds to upper right corner, lower right corner, lower left corner, and upper left corner, respectively. Currently, only 1 and 3 are valid orientations. If users choose orientation 1, the picture will be shown upside-down. If users choose orientation 3, the picture will be shown consistently with the LCD screen orientation.

Parameters

- **x_start_pos** (*int*) – x position (in pixels) where the line starts.
- **y_start_pos** (*int*) – y position (in pixels) where the line starts.
- **text** (*str*) – printable ASCII characters.
- **color** (*list*) – A list of [R, G, B] components for line color, each of 8 bits.

- **background** (*list*) – A list of [R, G, B] components for background, each of 8 bits.
- **orientation** (*int*) – orientation of the image; valid values are 1 and 3.

Returns

Return type None

read_joystick()

Read the joystick values.

The joystick values can be read when user is pressing the button toward a specific direction.

The returned values can be: 1: left; 2: down; 3: center; 4: right; 5: up; 0: no button pressed.

Returns Indicating the direction towards which the button is pushed.

Return type int

pynq.lib.pmod Package

The pynq.lib.pmod package is a collection of drivers for controlling peripherals attached to a PMOD port. The PMOD interface can control PMOD peripherals or Grove peripherals (via the PYNQ Grove shield)

pynq.lib.pmod.pmod_adc Module

class pynq.lib.pmod.pmod_adc.Pmod_ADC (*mb_info*)

Bases: object

This class controls an Analog to Digital Converter Pmod.

The Pmod AD2 (PB 200-217) is an analog-to-digital converter powered by AD7991. Users may configure up to 4 conversion channels at 12 bits of resolution.

microblaze

Pmod – Microblaze processor instance used by this module.

log_running

int – The state of the log (0: stopped, 1: started).

get_log()

Get the log of voltage values.

First stop the log before getting the log.

Returns List of voltage samples from the ADC.

Return type list

get_log_raw()

Get the log of raw values.

First stop the log before getting the log.

Returns List of raw samples from the ADC.

Return type list

read (*ch1=1, ch2=0, ch3=0*)

Get the voltage from the Pmod ADC.

When ch1, ch2, and ch3 values are 1 then the corresponding channel is included.

For each channel selected, this method reads and returns one sample.

Note: The 4th channel is not available due to the jumper setting on ADC.

Note: This method reads the voltage values from ADC.

Parameters

- **ch1** (*int*) – 1 means include channel 1, 0 means do not include.
- **ch2** (*int*) – 1 means include channel 2, 0 means do not include.
- **ch3** (*int*) – 1 means include channel 3, 0 means do not include.

Returns The voltage values read from the 3 channels of the Pmod ADC.

Return type list

read_raw (*ch1=1, ch2=0, ch3=0*)

Get the raw value from the Pmod ADC.

When ch1, ch2, and ch3 values are 1 then the corresponding channel is included.

For each channel selected, this method reads and returns one sample.

Note: The 4th channel is not available due to the jumper (JP1) setting on ADC.

Note: This method reads the raw value from ADC.

Parameters

- **ch1** (*int*) – 1 means include channel 1, 0 means do not include.
- **ch2** (*int*) – 1 means include channel 2, 0 means do not include.
- **ch3** (*int*) – 1 means include channel 3, 0 means do not include.

Returns The raw values read from the 3 channels of the Pmod ADC.

Return type list

reset ()

Reset the ADC.

Returns

Return type None

start_log (*ch1=1, ch2=0, ch3=0, log_interval_us=100*)

Start the log of voltage values with the interval specified.

This parameter *log_interval_us* can set the time interval between two samples, so that users can read out multiple values in a single log.

Parameters

- **ch1** (*int*) – 1 means include channel 1, 0 means do not include.
- **ch2** (*int*) – 1 means include channel 2, 0 means do not include.

- **ch3** (*int*) – 1 means include channel 3, 0 means do not include.
- **log_interval_us** (*int*) – The length of the log in milliseconds, for debug only.

Returns

Return type None

start_log_raw (*ch1=1, ch2=0, ch3=0, log_interval_us=100*)

Start the log of raw values with the interval specified.

This parameter *log_interval_us* can set the time interval between two samples, so that users can read out multiple values in a single log.

Parameters

- **ch1** (*int*) – 1 means include channel 1, 0 means do not include.
- **ch2** (*int*) – 1 means include channel 2, 0 means do not include.
- **ch3** (*int*) – 1 means include channel 3, 0 means do not include.
- **log_interval_us** (*int*) – The length of the log in milliseconds, for debug only.

Returns

Return type None

stop_log ()

Stop the log of voltage values.

This is done by sending the reset command to IOP. There is no need to wait for the IOP.

Returns

Return type None

stop_log_raw ()

Stop the log of raw values.

This is done by sending the reset command to IOP. There is no need to wait for the IOP.

Returns

Return type None

pynq.lib.pmod.pmod_als Module

class pynq.lib.pmod.pmod_als.**Pmod_ALS** (*mb_info*)

Bases: object

This class controls a light sensor Pmod.

The Digilent Pmod ALS demonstrates light-to-digital sensing through a single ambient light sensor. This is based on an ADC081S021 analog-to-digital converter and a TEMT6000X01 ambient light sensor.

microblaze

Pmod – Microblaze processor instance used by this module.

log_interval_ms

int – Time in milliseconds between sampled reads.

get_log ()

Return list of logged samples.

Returns

Return type List of valid samples from the ALS sensor [0-255]

read()

Read current light value measured by the ALS Pmod.

Returns The current sensor value.

Return type int

set_log_interval_ms(*log_interval_ms*)

Set the length of the log in the ALS Pmod.

This method can set the length of the log, so that users can read out multiple values in a single log.

Parameters **log_interval_ms** (*int*) – The length of the log in milliseconds, for debug only.

Returns

Return type None

start_log()

Start recording multiple values in a log.

This method will first call `set_log_interval_ms()` before sending the command.

Returns

Return type None

stop_log()

Stop recording multiple values in a log.

Simply send the command to stop the log.

Returns

Return type None

pynq.lib.pmod.pmod_cable Module

class `pynq.lib.pmod.pmod_cable.Pmod_Cable` (*mb_info*, *index*, *direction*, *cable*)

Bases: `pynq.lib.pmod.pmod_io.Pmod_IO`

This class can be used for a cable connecting Pmod interfaces.

This class inherits from the Pmod IO class.

Note: When 2 Pmods are connected using a cable, the parameter ‘cable’ decides whether the cable is a ‘loopback’ or ‘straight’ cable. The default is a straight cable (no internal wire twisting). For pin mapping, please check the Pmod IO class.

microblaze

Pmod – Microblaze processor instance used by this module.

index

int – The index of the Pmod pin, from 0 to 7.

direction

str – Input ‘in’ or output ‘out’.

cable

str – Either ‘straight’ or ‘loopback’.

read()

Receive the value from the Pmod cable.

This method overrides the `read()` method in the Pmod IO class. There are no new `write()` method defined in this class, so the `read()` will be inherited from Pmod IO class.

Note: Only use this function when `direction = ‘in’`.

When two Pmods are connected on the same board, for any received raw value, a “straight” cable flips the upper 4 pins and the lower 4 pins: A Pmod interface \Leftrightarrow Another Pmod interface $\{vdd, gnd, 3, 2, 1, 0\} \Leftrightarrow \{vdd, gnd, 7, 6, 5, 4\}$ $\{vdd, gnd, 7, 6, 5, 4\} \Leftrightarrow \{vdd, gnd, 3, 2, 1, 0\}$

A “loop-back” cable satisfies the following mapping between two Pmods: A Pmod interface \Leftrightarrow Another Pmod interface $\{vdd, gnd, 3, 2, 1, 0\} \Leftrightarrow \{vdd, gnd, 3, 2, 1, 0\}$ $\{vdd, gnd, 7, 6, 5, 4\} \Leftrightarrow \{vdd, gnd, 7, 6, 5, 4\}$

Returns The data (0 or 1) on the specified Pmod IO pin.

Return type int

set_cable(cable)

Set the type for the cable.

Note: The default cable type is ‘straight’. Only straight cable or loop-back cable can be recognized.

Parameters **cable** (*str*) – Either ‘straight’ or ‘loopback’.

Returns

Return type None

pynq.lib.pmod.pmod_dac Module

class pynq.lib.pmod.pmod_dac.Pmod_DAC (*mb_info*, *value=None*)

Bases: object

This class controls a Digital to Analog Converter Pmod.

The Pmod DA4 (PB 200-245) is an 8 channel 12-bit digital-to-analog converter run via AD5628.

microblaze

Pmod – Microblaze processor instance used by this module.

write(value)

Write a floating point number onto the DAC Pmod.

Note: Input value must be in the range [0.00, 2.50]

Parameters **value** (*float*) – The value to be written to the DAC.

Returns

Return type None

pynq.lib.pmod.pmod_dpot Module

class pynq.lib.pmod.pmod_dpot.**Pmod_DPOT** (*mb_info*)

Bases: object

This class controls a digital potentiometer Pmod.

The Pmod DPOT (PB 200-239) is a digital potentiometer powered by the AD5160. Users may set a desired resistance between 60 ~ 10k ohms.

microblaze

Pmod – Microblaze processor instance used by this module.

write (*val*, *step=0*, *log_ms=0*)

Write the value into the DPOT.

This method will write the parameters “value”, “step”, and “log_ms” all together into the DPOT Pmod. The parameter “log_ms” is only used for debug; users can ignore this parameter.

Parameters

- **val** (*int*) – The initial value to start, in [0, 255].
- **step** (*int*) – The number of steps when ramping up to the final value.
- **log_ms** (*int*) – The length of the log in milliseconds, for debug only.

Returns

Return type None

pynq.lib.pmod.pmod_iic Module

class pynq.lib.pmod.pmod_iic.**Pmod_IIC** (*mb_info*, *scl_pin*, *sda_pin*, *iic_addr*)

Bases: pynq.lib.pmod.pmod_devmode.Pmod_DevMode

This class controls the Pmod IIC pins.

Note: The index of the Pmod pins: upper row, from left to right: {vdd,gnd,3,2,1,0}. lower row, from left to right: {vdd,gnd,7,6,5,4}.

microblaze

Pmod – Microblaze processor instance used by this module.

scl_pin

int – The SCL pin number.

sda_pin

int – The SDA pin number.

iic_addr

int – The IIC device address.

sr_addr

int – The IIC device SR address (base address + 0x104).

dtr_addr

int – The IIC device DTR address (base address + 0x108).

cr_addr

int – The IIC device CR address (base address + 0x100).

rfd_addr

int – The IIC device RFD address (base address + 0x120).

drr_addr

int – The IIC device DRR address (base address + 0x10C).

receive (*num_bytes*)

This method receives IIC bytes from the device.

Parameters **num_bytes** (*int*) – Number of bytes to be received from the device.

Returns **iic_bytes** – A list of 8-bit bytes received from the driver.

Return type list

Raises `RuntimeError` – Timeout when waiting for the RX FIFO to fill.

send (*iic_bytes*)

This method sends the command or data to the driver.

Parameters **iic_bytes** (*list*) – A list of 8-bit bytes to be sent to the driver.

Returns

Return type None

Raises `RuntimeError` – Timeout when waiting for the FIFO to be empty.

pynq.lib.pmod.pmod_io Module

class `pynq.lib.pmod.pmod_io.Pmod_IO` (*mb_info, index, direction*)

Bases: `pynq.lib.pmod.pmod_devmode.Pmod_DevMode`

This class controls the Pmod IO pins as inputs or outputs.

Note: The parameter ‘direction’ determines whether the instance is input/output: ‘in’ : receiving input from offchip to onchip. ‘out’ : sending output from onchip to offchip. The index of the Pmod pins: upper row, from left to right: {vdd,gnd,3,2,1,0}. lower row, from left to right: {vdd,gnd,7,6,5,4}.

microblaze

Pmod – Microblaze processor instance used by this module.

index

int – The index of the Pmod pin, starting from 0.

direction

str – Input ‘in’ or output ‘out’.

read ()

Receive the value from the offboard Pmod IO device.

Note: Only use this function when direction is ‘in’.

Returns The data (0 or 1) on the specified Pmod IO pin.

Return type int

write (*value*)

Send the value to the offboard Pmod IO device.

Note: Only use this function when direction is 'out'.

Parameters **value** (*int*) – The value to be written to the Pmod IO device.

Returns

Return type None

pynq.lib.pmod.pmod_led8 Module

class pynq.lib.pmod.pmod_led8.**Pmod_LED8** (*mb_info*, *index*)

Bases: pynq.lib.pmod.pmod_devmode.Pmod_DevMode

This class controls a single LED on the LED8 Pmod.

The Pmod LED8 (PB 200-163) has eight high-brightness LEDs. Each LED can be individually illuminated from a logic high signal.

microblaze

Pmod – Microblaze processor instance used by this module.

iop_switch_config

list – Microblaze processor IO switch configuration (8 integers).

index

int – Index of the pin on LED8, starting from 0.

off ()

Turn off a single LED.

Returns

Return type None

on ()

Turn on a single LED.

Returns

Return type None

read ()

Retrieve the LED state.

Returns The data (0 or 1) read out from the selected pin.

Return type int

toggle ()

Flip the bit of a single LED.

Note: The LED will be turned off if it is on. Similarly, it will be turned on if it is off.

Returns

Return type None

write (*value*)

Set the LED state according to the input value

Note: This method does not take into account the current LED state.

Parameters **value** (*int*) – Turn on the LED if value is 1; turn it off if value is 0.

Returns

Return type None

pynq.lib.pmod.pmod_oled Module

class pynq.lib.pmod.pmod_oled.**Pmod_OLED** (*mb_info*, *text=None*)

Bases: object

This class controls an OLED Pmod.

The Pmod OLED (PB 200-222) is 128x32 pixel monochrome organic LED (OLED) panel powered by the Solomon Systech SSD1306.

microblaze

Pmod – Microblaze processor instance used by this module.

clear ()

Clear the OLED screen.

This is done by sending the clear command to the IOP.

Returns

Return type None

draw_line (*x1*, *y1*, *x2*, *y2*)

Draw a straight line on the OLED.

Parameters

- **x1** (*int*) – The x-position of the starting point.
- **y1** (*int*) – The y-position of the starting point.
- **x2** (*int*) – The x-position of the ending point.
- **y2** (*int*) – The y-position of the ending point.

Returns

Return type None

draw_rect (*x1*, *y1*, *x2*, *y2*)

Draw a rectangle on the OLED.

Parameters

- **x1** (*int*) – The x-position of the starting point.
- **y1** (*int*) – The y-position of the starting point.
- **x2** (*int*) – The x-position of the ending point.
- **y2** (*int*) – The y-position of the ending point.

Returns**Return type** None**write** (*text*, *x*=0, *y*=0)

Write a new text string on the OLED.

Parameters

- **text** (*str*) – The text string to be displayed on the OLED screen.
- **x** (*int*) – The x-position of the display.
- **y** (*int*) – The y-position of the display.

Returns**Return type** None**pynq.lib.pmod.pmod_pwm Module****class** pynq.lib.pmod.pmod_pwm.**Pmod_PWM** (*mb_info*, *index*)

Bases: object

This class uses the PWM of the IOP.

microblaze*Pmod* – Microblaze processor instance used by this module.**generate** (*period*, *duty_cycle*)

Generate pwm signal with desired period and percent duty cycle.

Parameters

- **period** (*int*) – The period of the tone (us), between 1 and 65536.
- **duty_cycle** (*int*) – The duty cycle in percentage.

Returns**Return type** None**stop** ()

Stops PWM generation.

Returns**Return type** None**pynq.lib.pmod.pmod_tc1 Module****class** pynq.lib.pmod.pmod_tc1.**Pmod_TC1** (*mb_info*)

Bases: object

This class controls a thermocouple Pmod.

The Digilent PmodTC1 is a cold-junction thermocouple-to-digital converter module designed for a classic K-Type thermocouple wire. With Maxim Integrated's MAX31855, this module reports the measured temperature in 14-bits with 0.25 degC resolution.

microblaze*Pmod* – Microblaze processor instance used by this module.

log_interval_ms

int – Time in milliseconds between sampled reads.

get_log()

Return list of logged samples.

Note: The logged samples are raw 32-bit samples captured from the sensor.

Returns List of valid samples from the TC1 sensor

Return type list

read_alarm_flags()

Read the alarm flags from the raw value.

Returns The alarm flags from the TC1. bit 0 = 1 if thermocouple connection is open-circuit; bit 1 = 1 if thermocouple connection is shorted to generated; bit 2 = 1 if thermocouple connection is shorted to VCC; bit 16 = 1 if any if bits 0-2 are 1.

Return type u32

read_junction_temperature()

Read the reference junction temperature.

Returns The reference junction temperature in degC.

Return type float

read_raw()

Read full 32-bit register of TC1 Pmod.

Returns The current register contents.

Return type int

read_thermocouple_temperature()

Read the reference junction temperature.

Returns The thermocouple temperature in degC.

Return type float

set_log_interval_ms(log_interval_ms)

Set the length of the log in the TC1 Pmod.

This method can set the length of the log, so that users can read out multiple values in a single log.

Parameters **log_interval_ms** (*int*) – The length of the log in milliseconds, for debug only.

Returns

Return type None

start_log()

Start recording multiple values in a log.

This method will first call set_log_interval_ms() before writing to the MMIO.

Returns

Return type None

stop_log()

Stop recording multiple values in a log.

Simply write to the MMIO to stop the log.

Returns

Return type None

`pynq.lib.pmod.pmod_tc1.reg_to_alarms(reg_val)`

Extracts Alarm flags from 32-bit register value.

Parameters `reg_val` (*int*) – 32-bit TC1 register value

Returns The alarm flags from the TC1. bit 0 = 1 if thermocouple connection is open-circuit; bit 1 = 1 if thermocouple connection is shorted to generated; bit 2 = 1 if thermocouple connection is shorted to VCC; bit 16 = 1 if any if bits 0-2 are 1.

Return type u32

`pynq.lib.pmod.pmod_tc1.reg_to_ref(reg_val)`

Extracts Ref Junction temperature from 32-bit register value.

Parameters `reg_val` (*int*) – 32-bit TC1 register value

Returns The reference junction temperature in degC.

Return type float

`pynq.lib.pmod.pmod_tc1.reg_to_tc(reg_val)`

Extracts Thermocouple temperature from 32-bit register value.

Parameters `reg_val` (*int*) – 32-bit TC1 register value

Returns The thermocouple temperature in degC.

Return type float

pynq.lib.pmod.pmod_timer Module

class `pynq.lib.pmod.pmod_timer.Pmod_Timer` (*mb_info*, *index*)

Bases: object

This class uses the timer's capture and generation capabilities.

microblaze

Pmod – Microblaze processor instance used by this module.

clk_period_ns

int – The clock period of the IOP in ns.

event_count (*period*)

Count the number of rising edges detected in (period) clocks.

Parameters `period` (*int*) – The period of the generated signals.

Returns The number of events detected.

Return type int

event_detected (*period*)

Detect a rising edge or high-level in (period) clocks.

Parameters `period` (*int*) – The period of the generated signals.

Returns 1 if any event is detected, and 0 if no event is detected.

Return type int

generate_pulse (*period*, *times=0*)

Generate pulses every (*period*) clocks for a number of times.

The default is to generate pulses every (*period*) IOP clocks forever until stopped. The pulse width is equal to the IOP clock period.

Parameters

- **period** (*int*) – The period of the generated signals.
- **times** (*int*) – The number of times for which the pulses are generated.

Returns

Return type None

get_period_ns ()

Measure the period between two successive rising edges.

Returns Measured period in ns.

Return type int

stop ()

This method stops the timer.

Returns

Return type None

pynq.lib.pmod.pmod_tmp2 Module

class pynq.lib.pmod.pmod_tmp2.**Pmod_TMP2** (*mb_info*)

Bases: object

This class controls a temperature sensor Pmod.

The Pmod TMP2 (PB 200-221) is an ambient temperature sensor powered by ADT7420.

microblaze

Pmod – Microblaze processor instance used by this module.

log_interval_ms

int – Time in milliseconds between sampled reads.

get_log ()

Return list of logged samples.

Returns

Return type List of valid samples from the temperature sensor in Celsius.

read ()

Read current temperature value measured by the Pmod TMP2.

Returns The current sensor value.

Return type float

set_log_interval_ms (*log_interval_ms*)

Set the sampling interval for the Pmod TMP2.

Parameters `log_interval_ms` (*int*) – Time in milliseconds between sampled reads of the TMP2 sensor

Returns

Return type None

start_log()

Start recording multiple values in a log.

This method will first call `set_log_interval_ms()` before writing to the MMIO.

Returns

Return type None

stop_log()

Stop recording multiple values in a log.

Simply write to the MMIO to stop the log.

Returns

Return type None

pynq.lib.pmod.pmod_grove_adc Module

class `pynq.lib.pmod.pmod_grove_adc.Grove_ADC` (*mb_info*, *gr_pin*)

Bases: `object`

This class controls the Grove IIC ADC.

Grove ADC is a 12-bit precision ADC module based on ADC121C021. Hardware version: v1.2.

microblaze

Pmod – Microblaze processor instance used by this module.

log_running

int – The state of the log (0: stopped, 1: started).

log_interval_ms

int – Time in milliseconds between sampled reads.

get_log()

Return list of logged samples.

Returns List of valid voltage samples (floats) from the ADC sensor.

Return type list

get_log_raw()

Return list of logged raw samples.

Returns List of valid raw samples from the ADC sensor.

Return type list

read()

Read the ADC voltage from the Grove ADC peripheral.

Returns The float value after translation.

Return type float

read_raw()

Read the ADC raw value from the Grove ADC peripheral.

Returns The raw value from the sensor.

Return type int

reset()

Resets/initializes the ADC.

Returns

Return type None

set_log_interval_ms(log_interval_ms)

Set the length of the log for the Grove ADC peripheral.

This method can set the time interval between two samples, so that users can read out multiple values in a single log.

Parameters **log_interval_ms** (*int*) – The time between two samples in milliseconds, for logging only.

Returns

Return type None

start_log()

Start recording multiple voltage values (float) in a log.

This method will first call `set_log_interval_ms()` before sending the command.

Returns

Return type None

start_log_raw()

Start recording raw data in a log.

This method will first call `set_log_interval_ms()` before sending the command.

Returns

Return type None

stop_log()

Stop recording the voltage values in the log.

Simply send the command 0xC to stop the log.

Returns

Return type None

stop_log_raw()

Stop recording the raw values in the log.

Simply send the command 0xC to stop the log.

Returns

Return type None

pynq.lib.pmod.pmod_grove_buzzer Module

class pynq.lib.pmod.pmod_grove_buzzer.Grove_Buzzer(*mb_info*, *gr_pin*)

Bases: object

This class controls the Grove Buzzer.

The grove buzzer module has a piezo buzzer as the main component. The piezo can be connected to digital outputs, and will emit a tone when the output is HIGH. Alternatively, it can be connected to an analog pulse-width modulation output to generate various tones and effects. Hardware version: v1.2.

microblaze

Pmod – Microblaze processor instance used by this module.

play_melody()

Play a melody.

Returns

Return type None

play_tone(*tone_period*, *num_cycles*)

Play a single tone with *tone_period* for *num_cycles*

Parameters

- **tone_period**(*int*) – The period of the tone in microsecond.
- **num_cycles**(*int*) – The number of cycles for the tone to be played.

Returns

Return type None

pynq.lib.pmod.pmod_grove_color Module

class pynq.lib.pmod.pmod_grove_color.Grove_Color(*mb_info*, *gr_pin*)

Bases: object

This class controls the Grove IIC Color sensor.

Grove Color sensor based on the TCS3414CS. Hardware version: v1.3.

microblaze

Pmod – Microblaze processor instance used by this module.

read()

Read the color values from the Grove Color peripheral.

The output contains 4 integer values: Red, Green, Blu and Clear. Clear represents the value of the sensor if no color filters are applied.

Returns A list of (red, green, blue, clear) components.

Return type list

pynq.lib.pmod.pmod_grove_dlight Module

class pynq.lib.pmod.pmod_grove_dlight.Grove_Dlight(*mb_info*, *gr_pin*)

Bases: object

This class controls the Grove IIC color sensor.

Grove Color sensor based on the TCS3414CS. Hardware version: v1.3.

microblaze

Pmod – Microblaze processor instance used by this module.

read_lux()

Read the computed lux value of the sensor.

Returns The lux value from the sensor

Return type int

read_raw_light()

Read the visible and IR channel values.

Read the values from the grove digital light peripheral.

Returns A tuple containing 2 integer values ch0 (visible) and ch1 (IR).

Return type tuple

pynq.lib.pmod.pmod_grove_ear_hr Module

class pynq.lib.pmod.pmod_grove_ear_hr.**Grove_EarHR**(*mb_info*, *gr_pin*)

Bases: object

This class controls the Grove ear clip heart rate sensor.

Sensor model: MED03212P.

microblaze

Pmod – Microblaze processor instance used by this module.

read()

Read the heart rate from the sensor.

Returns The heart rate as beats per minute

Return type float

read_raw()

Read the number of heart beats.

Read the number of beats since the sensor initialization; also read the time elapsed in ms between the latest two heart beats.

Returns Number of heart beats and the time elapsed between 2 latest beats.

Return type tuple

pynq.lib.pmod.pmod_grove_finger_hr Module

class pynq.lib.pmod.pmod_grove_finger_hr.**Grove_FingerHR**(*mb_info*, *gr_pin*)

Bases: object

This class controls the Grove finger clip heart rate sensor.

Grove Finger sensor based on the TCS3414CS. Hardware version: v1.3.

microblaze

Pmod – Microblaze processor instance used by this module.

log_running

int – The state of the log (0: stopped, 1: started).

log_interval_ms

int – Time in milliseconds between sampled reads.

get_log()

Return list of logged samples.

Returns List of integers containing the heart rate.

Return type list

read()

Read the heart rate value from the Grove Finger HR peripheral.

Returns An integer representing the heart rate frequency.

Return type int

start_log(log_interval_ms=100)

Start recording multiple heart rate values in a log.

This method will first call set the log interval before writing to the MMIO.

Parameters **log_interval_ms** (*int*) – The time between two samples in milliseconds.

Returns

Return type None

stop_log()

Stop recording the values in the log.

Simply write 0xC to the MMIO to stop the log.

Returns

Return type None

pynq.lib.pmod.pmod_grove_haptic_motor Module

class pynq.lib.pmod.pmod_grove_haptic_motor.**Grove_HapticMotor** (*mb_info*, *gr_pin*)

Bases: object

This class controls the Grove Haptic Motor based on the DRV2605L. Hardware version v0.9.

microblaze

Pmod – Microblaze processor instance used by this module.

is_playing()

Check if a vibration effect is running on the motor.

Returns True if a vibration effect is playing, false otherwise

Return type bool

play(effect)

Play a vibration effect on the Grove Haptic Motor peripheral.

Valid effect identifiers are in the range [1, 127].

Parameters **effect** (*int*) – An integer that specifies the effect.

Returns

Return type None

play_sequence (*sequence*)

Play a sequence of effects possibly separated by pauses.

At most 8 effects or pauses can be specified at a time. Pauses are defined using negative integer values in the range [-1, -127] that correspond to a pause length in the range [10, 1270] ms

Valid effect identifiers are in the range [1, 127]

As an example, in the following sequence example: [4,-20,5] effect 4 is played and after a pause of 200 ms effect 5 is played

Parameters **sequence** (*list*) – At most 8 values specifying effects and pauses.

Returns

Return type None

stop ()

Stop an effect or a sequence on the motor peripheral.

Returns

Return type None

pynq.lib.pmod.pmod_grove_imu Module

class pynq.lib.pmod.pmod_grove_imu.**Grove_IMU** (*mb_info*, *gr_pin*)

Bases: object

This class controls the Grove IIC IMU.

Grove IMU 10DOF is a combination of grove IMU 9DOF (MPU9250) and grove barometer sensor (BMP180). MPU-9250 is a 9-axis motion tracking device that combines a 3-axis gyroscope, 3-axis accelerometer, 3-axis magnetometer and a Digital Motion Processor (DMP). BMP180 is a high precision, low power digital pressure sensor. Hardware version: v1.1.

microblaze

Pmod – Microblaze processor instance used by this module.

get_acc1 ()

Get the data from the accelerometer.

Returns A list of the acceleration data along X-axis, Y-axis, and Z-axis.

Return type list

get_altitude ()

Get the current altitude.

Returns The altitude value.

Return type float

get_atm ()

Get the current pressure in relative atmosphere.

Returns The related atmosphere.

Return type float

get_compass ()

Get the data from the magnetometer.

Returns A list of the compass data along X-axis, Y-axis, and Z-axis.

Return type list

get_gyro()

Get the data from the gyroscope.

Returns A list of the gyro data along X-axis, Y-axis, and Z-axis.

Return type list

get_heading()

Get the value of the heading.

Returns The angle deviated from the X-axis, toward the positive Y-axis.

Return type float

get_pressure()

Get the current pressure in Pa.

Returns The pressure value.

Return type float

get_temperature()

Get the current temperature in degree C.

Returns The temperature value.

Return type float

get_tilt_heading()

Get the value of the tilt heading.

Returns The tilt heading value.

Return type float

reset()

Reset all the sensors on the grove IMU.

Returns

Return type None

pynq.lib.pmod.pmod_grove_ledbar Module

class `pynq.lib.pmod.pmod_grove_ledbar.Grove_LEDbar` (*mb_info*, *gr_pin*)

Bases: `object`

This class controls the Grove LED BAR.

Grove LED Bar is comprised of a 10 segment LED gauge bar and an MY9221 LED controlling chip. Model: LED05031P. Hardware version: v2.0.

microblaze

Pmod – Microblaze processor instance used by this module.

read()

Reads the current status of LEDbar.

Reads the current status of LED bar and returns 10-bit binary string. Each bit position corresponds to a LED position in the LEDbar, and bit value corresponds to the LED state.

Red LED corresponds to the LSB, while green LED corresponds to the MSB.

Returns String of 10 binary bits.

Return type str

reset ()

Resets the LEDbar.

Clears the LED bar, sets all LEDs to OFF state.

Returns

Return type None

write_binary (*data_in*)

Set individual LEDs in the LEDbar based on 10 bit binary input.

Each bit in the 10-bit *data_in* points to a LED position on the LEDbar. Red LED corresponds to the LSB, while green LED corresponds to the MSB.

Parameters *data_in* (*int*) – 10 LSBs of this parameter control the LEDbar.

Returns

Return type None

write_brightness (*data_in*, *brightness*=[170, 170, 170, 170, 170, 170, 170, 170, 170, 170])

Set individual LEDs with 3 level brightness control.

Each bit in the 10-bit *data_in* points to a LED position on the LEDbar. Red LED corresponds to the LSB, while green LED corresponds to the MSB.

Brightness of each LED is controlled by the brightness parameter. There are 3 perceivable levels of brightness: 0xFF : HIGH 0xAA : MED 0x01 : LOW

Parameters

- **data_in** (*int*) – 10 LSBs of this parameter control the LEDbar.
- **brightness** (*list*) – Each element controls a single LED.

Returns

Return type None

write_level (*level*, *bright_level*, *green_to_red*)

Set the level to which the leds are to be lit in levels 1 - 10.

Level can be set in both directions. *set_level* operates by setting all LEDs to the same brightness level.

There are 4 preset brightness levels: *bright_level* = 0: off *bright_level* = 1: low *bright_level* = 2: medium *bright_level* = 3: maximum

green_to_red indicates the direction, either from red to green when it is 0, or green to red when it is 1.

Parameters

- **level** (*int*) – 10 levels exist, where 1 is minimum and 10 is maximum.
- **bright_level** (*int*) – Controls brightness of all LEDs in the LEDbar, from 0 to 3.
- **green_to_red** (*int*) – Sets the direction of the sequence.

Returns

Return type None

pynq.lib.pmod.pmod_grove_light Module

class pynq.lib.pmod.pmod_grove_light.Grove_Light (*mb_info, gr_pin*)

Bases: [pynq.lib.pmod.pmod_grove_adc.Grove_ADC](#)

This class controls the grove light sensor.

This class inherits from the grove ADC class. To use this module, grove ADC has to be used as a bridge. The light sensor incorporates a Light Dependent Resistor (LDR) GL5528. Hardware version: v1.1.

microblaze

Pmod – Microblaze processor instance used by this module.

log_running

int – The state of the log (0: stopped, 1: started).

log_interval_ms

int – Time in milliseconds between sampled reads.

get_log()

Return list of logged light sensor resistances.

Returns List of valid light sensor resistances.

Return type list

read()

Read the light sensor resistance in from the light sensor.

This method overrides the definition in grove ADC.

Returns The light reading in terms of the sensor resistance.

Return type float

start_log()

Start recording the light sensor resistance in a log.

This method will call the start_log_raw() in the parent class.

Returns

Return type None

stop_log()

Stop recording light values in a log.

This method will call the stop_log_raw() in the parent class.

Returns

Return type None

pynq.lib.pmod.pmod_grove_oled Module

class pynq.lib.pmod.pmod_grove_oled.Grove_OLED (*mb_info, gr_pin*)

Bases: object

This class controls the Grove IIC OLED.

Grove LED 128×64 Display module is an OLED monochrome 128×64 matrix display module. Model: OLE35046P. Hardware version: v1.1.

microblaze

Pmod – Microblaze processor instance used by this module.

clear()

Clear the OLED screen.

This is done by writing empty strings into the OLED in Microblaze.

Returns

Return type None

set_contrast(brightness)

Set the contrast level for the OLED display.

The contrast level is in [0, 255].

Parameters **brightness** (*int*) – The brightness of the display.

Returns

Return type None

set_horizontal_mode()

Set the display mode to horizontal.

Returns

Return type None

set_inverse_mode()

Set the display mode to inverse.

Returns

Return type None

set_normal_mode()

Set the display mode to normal.

Returns

Return type None

set_page_mode()

Set the display mode to paged.

Returns

Return type None

set_position(row, column)

Set the position of the display.

The position is indicated by (row, column).

Parameters

- **row** (*int*) – The row number to start the display.
- **column** (*int*) – The column number to start the display.

Returns

Return type None

write (*text*)

Write a new text string on the OLED.

Clear the screen first to correctly show the new text.

Parameters **text** (*str*) – The text string to be displayed on the OLED screen.

Returns

Return type None

pynq.lib.pmod.pmod_grove_pir Module

class pynq.lib.pmod.pmod_grove_pir.**Grove_PIR** (*mb_info*, *gr_pin*)

Bases: [pynq.lib.pmod.pmod_io.Pmod_IO](#)

This class controls the PIR motion sensor.

Hardware version: v1.2.

microblaze

Pmod – Microblaze processor instance used by this module.

index

int – The index of the Pmod pin, from 0 to 7.

direction

str – Can only be ‘in’ for PIR sensor.

read ()

Receive the value from the PIR sensor.

Returns 0 when there is no motion, and returns 1 otherwise.

Returns The data (0 or 1) read from the PIR sensor.

Return type int

pynq.lib.pmod.pmod_grove_th02 Module

class pynq.lib.pmod.pmod_grove_th02.**Grove_TH02** (*mb_info*, *gr_pin*)

Bases: object

This class controls the Grove I2C Temperature and Humidity sensor.

Temperature & humidity sensor (high-accuracy & mini). Hardware version: v1.0.

microblaze

Pmod – Microblaze processor instance used by this module.

log_running

int – The state of the log (0: stopped, 1: started).

log_interval_ms

int – Time in milliseconds between sampled reads.

get_log ()

Return list of logged samples.

Returns List of tuples containing (temperature, humidity)

Return type list

read()

Read the temperature and humidity values from the TH02 peripheral.

Returns Tuple containing (temperature, humidity)

Return type tuple

start_log(log_interval_ms=100)

Start recording multiple heart rate values in a log.

This method will first call set the log interval before sending the command.

Parameters **log_interval_ms** (*int*) – The time between two samples in milliseconds.

Returns

Return type None

stop_log()

Stop recording the values in the log.

Simply send the command 0xC to stop the log.

Returns

Return type None

pynq.lib.pmod.pmod_grove_tmp Module

class pynq.lib.pmod.pmod_grove_tmp.**Grove_TMP** (*mb_info*, *gr_pin*, *version*='v1.2')

Bases: [pynq.lib.pmod.pmod_grove_adc.Grove_ADC](#)

This class controls the grove temperature sensor.

This class inherits from the Grove_ADC class. To use this module, grove ADC has to be used as a bridge. The temperature sensor uses a thermistor to detect the ambient temperature. Hardware version: v1.2.

microblaze

Pmod – Microblaze processor instance used by this module.

log_running

int – The state of the log (0: stopped, 1: started).

log_interval_ms

int – Time in milliseconds between sampled reads.

bValue

int – The thermistor constant.

get_log()

Return list of logged temperature samples.

Returns List of valid temperature readings from the temperature sensor.

Return type list

read()

Read temperature values in Celsius from temperature sensor.

This method overrides the definition in Grove_ADC.

Returns The temperature reading in Celsius.

Return type float

start_log()

Start recording temperature in a log.

This method will call the start_log_raw() in the parent class.

stop_log()

Stop recording temperature in a log.

This method will call the stop_log_raw() in the parent class.

Returns

Return type None

pynq.lib.logictools Package**pynq.lib.logictools.boolean_generator Module**

```
class pynq.lib.logictools.boolean_generator.BooleanGenerator (mb_info,  
                                                         intf_spec_name='PYNQZ1_LOGICTOOLS_
```

Bases: object

Class for the Boolean generator.

This class can implement any combinational function on user IO pins. Since each LUT5 takes 5 inputs, the basic function that users can implement is 5-input, 1-output boolean function. However, by concatenating multiple LUT5 together, users can implement complex boolean functions.

There are 20 5-LUTs, so users can implement at most 20 basic boolean functions at a specific time.

logictools_controller

LogicToolsController – The generator controller for this class.

intf_spec

dict – The interface specification, e.g., PYNQZ1_LOGICTOOLS_SPECIFICATION.

expressions

list/dict – The boolean expressions, each expression being a string.

waveforms

dict – A dictionary storing the waveform objects for display purpose.

input_pins

list – A list of input pins used by the generator.

output_pins

list – A list of output pins used by the generator.

analyzer

TraceAnalyzer – Analyzer to analyze the raw capture from the pins.

num_analyzer_samples

int – Number of analyzer samples to capture.

frequency_mhz

float – The frequency of the captured samples, in MHz.

analyze()

Update the captured samples.

This method updates the captured samples from the trace analyzer. It is required after each step() / run()

clear_wave()

Clear the waveform object so new patterns can be accepted.

This function is required after each *stop()*.

connect()

Method to configure the IO switch.

Usually this method should only be used internally. Users only need to use *run()* method.

disconnect()

Method to disconnect the IO switch.

Usually this method should only be used internally. Users only need to use *stop()* method.

reset()

Reset the boolean generator.

This method will bring the generator from any state to 'RESET' state.

run()

Run the boolean generator.

The method will first collect the pins used and send the list to Microblaze for handling. Then it will start to run the boolean generator.

setup(expressions, frequency_mhz=10)

Configure the generator with new boolean expression.

This method will bring the generator from 'RESET' to 'READY' state.

Parameters

- **expressions** (*list/dict*) – The boolean expression to be configured.
- **frequency_mhz** (*float*) – The frequency of the captured samples, in MHz.

show_waveform()

Display the boolean logic generator in a Jupyter notebook.

A wavedrom waveform is shown with all inputs and outputs displayed.

status

Return the generator's status.

Returns Indicating the current status of the generator; can be 'RESET', 'READY', or 'RUNNING'.

Return type str

step()

Step the boolean generator.

The method will first collect the pins used and send the list to Microblaze for handling. Then it will start to step the boolean generator.

stop()

Stop the boolean generator.

This method will stop the currently running boolean generator.

trace(use_analyzer=True, num_analyzer_samples=128)

Configure the trace analyzer.

By default, the trace analyzer is always on, unless users explicitly disable it.

Parameters

- **use_analyzer** (*bool*) – Whether to use the analyzer to capture the trace.
- **num_analyzer_samples** (*int*) – The number of analyzer samples to capture.

pynq.lib.logictools.fsm_generator Module

class pynq.lib.logictools.fsm_generator.**FSMGenerator** (*mb_info*,
intf_spec_name=*'PYNQZ1_LOGICTOOLS_SPECIFIC'*)

Bases: object

Class for Finite State Machine generator.

This class enables users to specify a Finite State Machine (FSM). Users have to provide a FSM in the following format.

```
fsm_spec = { 'inputs': [('reset','D0'), ('direction','D1')],
'outputs': [('alpha','D3'), ('beta','D4'), ('gamma','D5')],
'states': ('S0', 'S1', 'S2', 'S3', 'S4', 'S5'),
'transitions': [['00', 'S0', 'S1', '000'],
                ['01', 'S0', 'S5', '000'],
                ['00', 'S1', 'S2', '001'],
                ['01', 'S1', 'S0', '001'],
                ['00', 'S2', 'S3', '010'],
                ['01', 'S2', 'S1', '010'],
                ['00', 'S3', 'S4', '011'],
                ['01', 'S3', 'S2', '011'],
                ['00', 'S4', 'S5', '100'],
                ['01', 'S4', 'S3', '100'],
                ['00', 'S5', 'S0', '101'],
                ['01', 'S5', 'S4', '101'],
                ['1-', '*', 'S0', '']]
```

The current implementation assumes Moore machine, so the output is decided by the current state. Hence, if a wildcard * is specified for the current state, users can just set the output to be empty.

logictools_controller

LogicToolsController – The generator controller for this class.

intf_spec

dict – The interface specification, e.g., PYNQZ1_LOGICTOOLS_SPECIFICATION.

fsm_spec

dict – The FSM specification, with inputs (list), outputs (list), states (list), and transitions (list).

num_input_bits

int – The number of input bits / pins.

num_outputs

int – The number of possible FSM outputs specified by users.

num_output_bits
int – The number of bits used for the FSM outputs.

num_states
int – The number of FSM states specified by users.

num_state_bits
int – The number of bits used for the FSM states.

state_names
list – List of state names specified by the users.

transitions
int – Transition list with all the wildcards replaced properly.

input_pins
list – List of input pins on Arduino header.

output_pins
list – List of output pins on Arduino header.

use_state_bits
bool – Flag indicating whether the state bits are shown on output pins.

analyzer
TraceAnalyzer – Analyzer to analyze the raw capture from the pins.

num_analyzer_samples
int – The number of analyzer samples to capture.

frequency_mhz
float – The frequency of the running FSM / captured samples, in MHz.

waveform
Waveform – The Waveform object used for Wavedrom display.

analyze ()
Update the captured samples.

This method updates the captured samples from the trace analyzer. It is required after each *step()* / *run()*.

clear_wave ()
Clear the waveform object so new patterns can be accepted.

This function is required after each *stop()*.

connect ()
Method to configure the IO switch.

Usually this method should only be used internally. Users only need to use *run()* method.

disconnect ()
Method to disconnect the IO switch.

Usually this method should only be used internally. Users only need to use *stop()* method.

reset ()
Reset the FSM generator.

This method will bring the generator from any state to ‘RESET’ state.

run ()
Run the FSM generator.

The method will first collect the pins used and send the list to Microblaze for handling. Then it will start to run the FSM generator.

setup (*fsm_spec*, *use_state_bits=False*, *frequency_mhz=10*)

Configure the programmable FSM generator.

This method will configure the FSM based on supplied configuration specification. Users can send the samples to PatternAnalyzer for additional analysis.

Parameters

- **fsm_spec** (*dict*) – The FSM specification, with inputs (list), outputs (list), states (list), and transitions (list).
- **use_state_bits** (*bool*) – Whether to check the state bits in the final output pins.
- **frequency_mhz** (*float*) – The frequency of the FSM and captured samples, in MHz.

show_state_diagram (*file_name='fsm_spec.png'*, *save_png=False*)

Display the state machine in Jupyter notebook.

This method uses the installed package *pygraphviz*. References: <http://pygraphviz.github.io/documentation/latest/pygraphviz.pdf>

A PNG file of the state machine will also be saved into the current working directory.

Parameters

- **file_name** (*str*) – The name / path of the picture for the FSM diagram.
- **save_png** (*bool*) – Whether to save the PNG showing the state diagram.

show_waveform ()

Display the waveform.

This method requires the waveform class to be present. Also, javascripts will be copied into the current directory.

status

Return the generator's status.

Returns Indicating the current status of the generator; can be 'RESET', 'READY', or 'RUNNING'.

Return type str

step ()

Step the FSM generator.

The method will first collect the pins used and send the list to Microblaze for handling. Then it will start to step the FSM generator.

stop ()

Stop the FSM generator.

This command will stop the pattern generated from FSM.

trace (*use_analyzer=True*, *num_analyzer_samples=128*)

Configure the trace analyzer.

By default, the trace analyzer is always on, unless users explicitly disable it.

Parameters

- **use_analyzer** (*bool*) – Whether to use the analyzer to capture the trace.
- **num_analyzer_samples** (*int*) – The number of analyzer samples to capture.

`pynq.lib.logictools.fsm_generator.check_duplicate(fsm_spec, key)`

Function to check duplicate entries in a nested dictionary.

This method will check the entry indexed by key in a dictionary. An exception will be raised if there are duplicated entries.

Parameters

- **fsm_spec** (*dict*) – The dictionary where the check to be made.
- **key** (*object*) – The key to index the dictionary.

`pynq.lib.logictools.fsm_generator.check_moore(num_states, num_outputs)`

Check whether the specified state machine is a moore machine.

This method will raise an exception if there are more state outputs than the number of states.

Parameters

- **num_states** (*int*) – The number of bits used for states.
- **num_outputs** (*int*) – The number of state outputs.

`pynq.lib.logictools.fsm_generator.check_num_bits(num_bits, label, minimum=0, maximum=32)`

Check whether the number of bits are still in a valid range.

This method will raise an exception if *num_bits* is out of range.

Parameters

- **num_bits** (*int*) – The number of bits of a specific field.
- **label** (*str*) – The label of the field.
- **minimum** (*int*) – The minimum number of bits allowed in that field.
- **maximum** (*int*) – The maximum number of bits allowed in that field.

`pynq.lib.logictools.fsm_generator.check_pin_conflict(pins1, pins2)`

Function to check whether there is conflict between input / output pins.

This method will raise an exception if there are pins specified in both inputs and outputs.

Parameters

- **pins1** (*list*) – The list of the first set of pins.
- **pins2** (*list*) – The list of the second set of pins.

`pynq.lib.logictools.fsm_generator.check_pins(fsm_spec, key, intf_spec)`

Check whether the pins specified are in a valid range.

This method will raise an exception if *pin* is out of range.

Parameters

- **fsm_spec** (*dict*) – The dictionary where the check to be made.
- **key** (*object*) – The key to index the dictionary.
- **intf_spec** (*dict*) – An interface spec containing the pin map.

`pynq.lib.logictools.fsm_generator.expand_transition(transition, input_list)`

Add new (partially) expanded state transition.

Parameters

- **transition** (*list*) – Specifies a state transition.

- **input_list** (*list*) – List of inputs, where each input is a string.

Returns New (partially) expanded state transition.

Return type list

```
pynq.lib.logictools.fsm_generator.get_bram_addr_offsets(num_states,  
                                                       num_input_bits)
```

Get address offsets from given number of states and inputs.

This method returns the index offset for input bits. For example, if less than 32 states are used, then the index offset will be 5. If the number of states used is greater than 32 but less than 64, then the index offset will be 6.

This method also returns the address offsets for BRAM data. The returned list contains $2^{**}\text{'num_input_bits'}$ offsets. The distance between 2 address offsets is $2^{**}\text{'index_offset'}$.

Parameters

- **num_states** (*int*) – The number of states in the state machine.
- **num_input_bits** (*int*) – The number of inputs in the state machine.

Returns A list of $2^{**}\text{'num_input_bits'}$ offsets.

Return type int, list

```
pynq.lib.logictools.fsm_generator.merge_to_length(a, b, length)
```

Merge 2 lists into a specific length.

This method will merge 2 lists into a short list, replacing the last few items of the first list if necessary.

For example, $a = [1,2,3]$, $b = [4,5,6,7]$, and $\text{length} = 6$. The result will be $[1,2,4,5,6,7]$. If $\text{length} = 5$, the result will be $[1,4,5,6,7]$. If length is greater or equal to 7, the result will be $[1,2,3,4,5,6,7]$.

Parameters

- **a** (*list*) – A list of elements.
- **b** (*list*) – Another list of elements.
- **length** (*int*) – The length of the result list.

Returns A merged list of the specified length.

Return type list

```
pynq.lib.logictools.fsm_generator.replace_wildcard(input_list)
```

Method to replace a wildcard - in the input values.

This method will replace the wildcard - in the input list; the returned two lists have different values on the position of -.

Example: $['0', '-', '1'] \Rightarrow (['0', '0', '1'], ['0', '1', '1'])$

Parameters **input_list** (*list*) – A list of multiple values, possibly with - inside.

Returns Two lists differ by the location of -.

Return type list,list

pynq.lib.logictools.pattern_generator Module

```
class pynq.lib.logictools.pattern_generator.PatternGenerator(mb_info,  
                                                           intf_spec_name= 'PYNQZI_LOGICTOOLS_...')
    Bases: object
```

Class for the Pattern generator.

This class can generate digital IO patterns / stimulus on output pins. Users can specify whether to use a pin as input or output.

logictools_controller

LogicToolsController – The generator controller for this class.

intf_spec

dict – The interface specification, e.g., PYNQZ1_LOGICTOOLS_SPECIFICATION.

stimulus_group

dict – A group of stimulus wavelanes.

stimulus_group_name

str – The name of the stimulus wavelanes.

stimulus_names

list – The list of all the stimulus wavelane names, each name being a string.

stimulus_pins

list – The list of all the stimulus wavelane pin labels, each pin label being a string.

stimulus_waves

list – The list of all the stimulus wavelane waves, each wave being a string consisting of wavelane tokens.

analysis_group

dict – A group of analysis wavelanes.

analysis_group_name

str – The name of the analysis wavelanes.

analysis_names

list – The list of all the analysis wavelane names, each name being a string.

analysis_pins

list – The list of all the analysis wavelane pin labels, each pin label being a string.

src_samples

numpy.ndarray – The numpy array storing the stimuli, each sample being 32 bits.

dst_samples

numpy.ndarray – The numpy array storing the response, each sample being 64 bits.

waveform_dict

dict – A dictionary storing the patterns in WaveJason format.

waveform

Waveform – The Waveform object used for Wavedrom display.

analyzer

TraceAnalyzer – Analyzer to analyze the raw capture from the pins.

num_analyzer_samples

int – The number of analyzer samples to capture.

frequency_mhz

float – The frequency of the running generator / captured samples, in MHz.

analyze()

Update the captured samples.

This method updates the captured samples from the trace analyzer. It is required after each `step()` / `run()`

clear_wave()

Clear the waveform object so new patterns can be accepted.

This function is required after each *stop()*.

connect()

Method to configure the IO switch.

Usually this method should only be used internally. Users only need to use *run()* method.

disconnect()

Method to disconnect the IO switch.

Usually this method should only be used internally. Users only need to use *stop()* method.

longest_wave

Return the name of the longest wave.

Will only be changed by internal method.

max_wave_length

Return the maximum wave length

Will only be changed by internal method.

reset()

Reset the pattern generator.

This method will bring the generator from any state to 'RESET' state.

run()

Run the pattern generation.

The method will first collect the pins used and sends the list to Microblaze for handling. Then it will start to run the pattern generator.

setup (*waveform_dict*, *stimulus_group_name=None*, *analysis_group_name=None*, *mode='single'*, *frequency_mhz=10*)

Configure the pattern generator with a single bit pattern.

Generates a bit pattern for a single shot operation at specified IO pins with the specified number of samples.

Each bit of the 20-bit patterns, from LSB to MSB, corresponds to: D0, D1, ..., D19, A0, A1, ..., A5, respectively.

Note the all the lanes should have the same number of samples. And the token inside wave are already converted into bit string.

Users can ignore the returned data in case only the pattern generator is required.

Mode *single* means the pattern will be generated only once, while mode *multiple* means the pattern will be generated repeatedly.

Parameters

- **waveform_dict** (*dict*) – Waveform dictionary in WaveJSON format.
- **stimulus_group_name** (*str*) – Name of the WaveLane group for the stimulus if used.
- **analysis_group_name** (*str*) – Name of the WaveLane group for the analysis if used.
- **mode** (*str*) – Mode of the pattern generator, can be *single* or *multiple*.
- **frequency_mhz** (*float*) – The frequency of the captured samples, in MHz.

show_waveform()

Display the waveform in Jupyter notebook.

This method requires the waveform class to be present. At the same time, javascripts will be copied into the current directory.

status

Return the generator's status.

Returns Indicating the current status of the generator; can be 'RESET', 'READY', or 'RUNNING'.

Return type str

step()

Step the pattern generator.

The method will first collect the pins used and sends the list to Microblaze for handling. Then it will start to step the pattern generator.

stop()

Stop the pattern generation.

This method will stop the currently running pattern generator.

trace (*use_analyzer=True, num_analyzer_samples=128*)

Configure the trace analyzer.

By default, the trace analyzer is always on, unless users explicitly disable it.

Parameters

- **use_analyzer** (*bool*) – Whether to use the analyzer to capture the trace.
- **num_analyzer_samples** (*int*) – The number of analyzer samples to capture.

pynq.lib.logictools.trace_analyzer Module

class pynq.lib.logictools.trace_analyzer.**TraceAnalyzer** (*ip_info*,
intf_spec_name='PYNQZI_LOGICTOOLS_SPECIFICATION')

Bases: object

Class for trace analyzer.

This class can capture digital IO patterns / stimulus on monitored pins.

This class can wrap one out of the two classes: (1) the Microblaze controlled trace analyzer, or (2) the PS controlled trace analyzer.

To use the PS controlled trace analyzer, users can set the *ip_info* to a dictionary containing the corresponding IP name; for example:

```
>>> ip_info = {'trace_cntrl': 'trace_analyzer_pmoda/trace_cntrl_0',  
              'trace_dma': 'trace_analyzer_pmoda/axi_dma_0'}
```

Otherwise the Microblaze controlled trace analyzer will be used. By default, the Microblaze controlled version will be used, and the interface specification name will be set to *PYNQZI_LOGICTOOLS_SPECIFICATION*.

Most of the methods implemented inside this class assume the protocol is known, so the pattern can be decoded and added to the annotation of the waveforms.

In case the protocol is unknown, users should refrain from using these methods.

Two files are maintained by this class: the *csv* file, which is human readable; and the *sr* file, which is sigrok readable.

analyze (*steps=0*)

Analyze the captured pattern.

This function will process the captured pattern and put the pattern into a Wavedrom compatible format.

The data output is of format:

```
[{'name': ' ', 'pin': 'D1', 'wave': '1...0....'}, {'name': ' ', 'pin': 'D2', 'wave': '0.1..01.01'}]
```

Note the all the lanes should have the same number of samples. All the pins are assumed to be tri-stated and traceable.

Currently only no *step()* method is supported for PS controlled trace analyzer.

Parameters **steps** (*int*) – Number of samples to analyze. A value 0 means to analyze all the valid samples.

Returns A list of dictionaries, each dictionary consisting the pin number, and the waveform pattern in string format.

Return type list

decode (*trace_csv, start_pos, stop_pos, decoded_file, options=""*)

Parse CSV file, add metadata, and use sigrok to decode transactions.

Internally, this method is calling *save_csv()*, *set_metadata()*, and *sigrok_decode()* methods.

Parameters

- **trace_csv** (*str*) – Name of the output file (*.csv) which can be opened in text editor.
- **start_pos** (*int*) – Starting sample number, no less than 1.
- **stop_pos** (*int*) – Stopping sample number, no more than the maximum number of samples.
- **decoded_file** (*str*) – Name of the output file, which can be opened in text editor.
- **options** (*str*) – Additional options to be passed to sigrok-cli.

Returns

Return type None

reset ()

Reset the trace analyzer.

This method will bring the trace analyzer from any state to 'RESET' state.

At the same time, all the trace files stored previously will be removed.

run ()

Start the trace capture.

Returns

Return type None

set_protocol (*protocol, probes*)

Set the protocol and probes for the decoder.

This method is usually called at beginning of the analyzer. To learn from that specific protocol, users can call *show_protocol* to learn useful information about that protocol.

Currently only *i2c* and *spi* are supported.

This method also sets the probe names for the decoder.

The dictionary *probes* depends on the protocol. For instance, the I2C protocol requires the keys ‘SCL’ and ‘SDA’. An example can be:

```
>>>probes = {'SCL': 'D2', 'SDA': 'D3'}
```

To avoid memory error for decoding, users can add *NC* as non-used pins to the probes.

Parameters

- **protocol** (*str*) – The name of the protocol.
- **probes** (*dict*) – A dictionary keeping the probe names and pin number.

setup (*num_analyzer_samples=128, frequency_mhz=10*)

Configure the trace analyzer.

The wrapper method for configuring the PS or Microblaze controlled trace analyzer.

Parameters

- **num_analyzer_samples** (*int*) – The number of samples to be analyzed.
- **frequency_mhz** (*float*) – The frequency of the captured samples, in MHz.

show_protocol ()

Show information about the specified protocol.

This method will print out useful information about the protocol.

Returns

Return type None

status

Return the analyzer’s status.

Returns Indicating the current status of the analyzer; can be ‘RESET’, ‘READY’, or ‘RUNNING’.

Return type str

step ()

Step the trace analyzer.

This method is only supported in the Microblaze controlled trace analyzer. An exception will be raised if users want to call this method in PS controlled trace analyzer.

stop ()

Stop the DMA after capture is done.

Returns

Return type None

`pynq.lib.logictools.trace_analyzer.get_tri_state_pins` (*input_dict*, *output_dict*, *tri_dict*)

Function to check tri-state pin specifications.

Any tri-state pin requires the output pin, input pin, and the tri-state selection pin to be specified. If any one is missing, this method will raise an exception.

Parameters

- **input_dict** (*dict*) – A dictionary storing the input pin mapping.
- **output_dict** (*dict*) – A dictionary storing the output pin mapping.

- **tri_dict** (*dict*) – A dictionary storing the tri-state pin mapping.

Returns A list storing unique tri-state pin names, non tri-state inputs, and non tri-state outputs.

Return type list, list, list

2.8.4 pynq.mmio Module

class pynq.mmio.**MMIO** (*base_addr, length=4, debug=False*)

Bases: object

This class exposes API for MMIO read and write.

virt_base

int – The address of the page for the MMIO base address.

virt_offset

int – The offset of the MMIO base address from the virt_base.

base_addr

int – The base address, not necessarily page aligned.

length

int – The length in bytes of the address range.

debug

bool – Turn on debug mode if it is True.

mmap_file

file – Underlying file object for MMIO mapping

mem

mmap – An mmap object created when mapping files to memory.

array

numpy.ndarray – A numpy view of the mapped range for efficient assignment

read (*offset=0, length=4*)

The method to read data from MMIO.

Parameters

- **offset** (*int*) – The read offset from the MMIO base address.
- **length** (*int*) – The length of the data in bytes.

Returns A list of data read out from MMIO

Return type list

write (*offset, data*)

The method to write data to MMIO.

Parameters

- **offset** (*int*) – The write offset from the MMIO base address.
- **data** (*int / bytes*) – The integer(s) to be written into MMIO.

Returns

Return type None

2.8.5 pynq.overlay Module

The `pynq.overlay` module inherits from the `PL` module and is used to manage the state and contents of a PYNQ Overlay. The module adds additional functionality to the `PL` module. For example, the `PL` module contains the methods to download the overlay file. The `Overlay` module sets the `PL` clocks and `ARM` architecture registers before calling the `Bitstream download()` method.

class `pynq.overlay.DefaultHierarchy` (*description*)

Bases: `pynq.overlay._IPMap`

Hierarchy exposing all IP and hierarchies as attributes

This Hierarchy is instantiated if no more specific hierarchy class registered with `register_hierarchy_driver` is specified. More specific drivers should inherit from *DefaultHierarchy* and call its constructor in `__init__` prior to any other initialisation. *checkhierarchy* should also be redefined to return `True` if the driver matches a hierarchy. Any derived class that meets these requirements will automatically be registered in the driver database.

static `checkhierarchy` (*description*)

Function to check if the driver matches a particular hierarchy

This function should be redefined in derived classes to return `True` if the description matches what is expected by the driver. The default implementation always returns `False` so that drivers that forget don't get loaded for hierarchies they don't expect.

class `pynq.overlay.DefaultIP` (*description*)

Bases: `object`

Driver for an IP without a more specific driver

This driver wraps an `MMIO` device and provides a base class for more specific drivers written later. It also provides access to `GPIO` outputs and interrupts inputs via attributes. More specific drivers should inherit from *DefaultIP* and include a *bindto* entry containing all of the IP that the driver should bind to. Subclasses meeting these requirements will automatically be registered.

mmio

pynq.MMIO – Underlying `MMIO` driver for the device

`__interrupts`

dict – Subset of the `PL.interrupt_pins` related to this IP

`__gpio`

dict – Subset of the `PL.gpio_dict` related to this IP

`read` (*offset=0*)

Read from the `MMIO` device

Parameters *offset* (*int*) – Address to read

`write` (*offset, value*)

Write to the `MMIO` device

Parameters

- **`offset`** (*int*) – Address to write to
- **`value`** (*int or bytes*) – Data to write

`pynq.overlay.DocumentHierarchy` (*description*)

Helper function to build a custom hierarchy class with a docstring based on the description. Mimics a class constructor

`pynq.overlay.DocumentOverlay` (*bitfile*, *download*)

Function to build a custom overlay class with a custom docstring based on the supplied bitstream. Mimics a class constructor.

class `pynq.overlay.Overlay` (*bitfile_name*, *download=True*, *ignore_version=False*)

Bases: `pynq.pl.Bitstream`

This class keeps track of a single bitstream's state and contents.

The overlay class holds the state of the bitstream and enables run-time protection of bindings.

Our definition of overlay is: "post-bitstream configurable design". Hence, this class must expose configurability through content discovery and runtime protection.

The overlay class exposes the IP and hierarchies as attributes in the overlay. If no other drivers are available the *DefaultIP* is constructed for IP cores at top level and *DefaultHierarchy* for any hierarchies that contain addressable IP. Custom drivers can be bound to IP and hierarchies by subclassing *DefaultIP* and *DefaultHierarchy*. See the help entries for those class for more details.

This class stores four dictionaries: IP, GPIO, interrupt controller and interrupt pin dictionaries.

Each entry of the IP dictionary is a mapping: 'name' -> {phys_addr, addr_range, type, config, state}, where name (str) is the key of the entry. phys_addr (int) is the physical address of the IP. addr_range (int) is the address range of the IP. type (str) is the type of the IP. config (dict) is a dictionary of the configuration parameters. state (str) is the state information about the IP.

Each entry of the GPIO dictionary is a mapping: 'name' -> {pin, state}, where name (str) is the key of the entry. pin (int) is the user index of the GPIO, starting from 0. state (str) is the state information about the GPIO.

Each entry in the interrupt controller dictionary is a mapping: 'name' -> {parent, index}, where name (str) is the name of the interrupt controller. parent (str) is the name of the parent controller or "" if attached directly to the PS7. index (int) is the index of the interrupt attached to.

Each entry in the interrupt pin dictionary is a mapping: 'name' -> {controller, index}, where name (str) is the name of the pin. controller (str) is the name of the interrupt controller. index (int) is the line index.

bitfile_name

str – The absolute path of the bitstream.

bitstream

Bitstream – The corresponding bitstream object.

ip_dict

dict – All the addressable IPs from PS7. Key is the name of the IP; value is a dictionary mapping the physical address, address range, IP type, configuration dictionary, and the state associated with that IP: {str: {'phys_addr': int, 'addr_range': int, 'type': str, 'config': dict, 'state': str}}.

gpio_dict

dict – All the GPIO pins controlled by PS7. Key is the name of the GPIO pin; value is a dictionary mapping user index (starting from 0), and the state associated with that GPIO pin: {str: {'index': int, 'state': str}}.

interrupt_controllers

dict – All AXI interrupt controllers in the system attached to a PS7 interrupt line. Key is the name of the controller; value is a dictionary mapping parent interrupt controller and the line index of this interrupt: {str: {'parent': str, 'index': int}}. The PS7 is the root of the hierarchy and is unnamed.

interrupt_pins

dict – All pins in the design attached to an interrupt controller. Key is the name of the pin; value is a dictionary mapping the interrupt controller and the line index used: {str: {'controller': str, 'index': int}}.

download()

The method to download a bitstream onto PL.

Note: After the bitstream has been downloaded, the “timestamp” in PL will be updated. In addition, all the dictionaries on PL will be reset automatically.

Returns

Return type None

`is_loaded()`

This method checks whether a bitstream is loaded.

This method returns true if the loaded PL bitstream is same as this Overlay’s member bitstream.

Returns True if bitstream is loaded.

Return type bool

`load_ip_data(ip_name, data)`

This method loads the data to the addressable IP.

Calls the method in the super class to load the data. This method can be used to program the IP. For example, users can use this method to load the program to the Microblaze processors on PL.

Note: The data is assumed to be in binary format (.bin). The data name will be stored as a state information in the IP dictionary.

Parameters

- **ip_name** (*str*) – The name of the addressable IP.
- **data** (*str*) – The absolute path of the data to be loaded.

Returns

Return type None

`reset()`

This function resets all the dictionaries kept in the overlay.

This function should be used with caution.

Returns

Return type None

`class pynq.overlay.RegisterHierarchy(name, bases, attrs)`

Bases: type

Metaclass to register classes as hierarchy drivers

Any class with this metaclass an the *checkhierarchy* function will be registered in the global driver database

`class pynq.overlay.RegisterIP(name, bases, attrs)`

Bases: type

Meta class that binds all registers all subclasses as IP drivers

The *bindto* attribute of subclasses should be an array of strings containing the VLNV of the IP the driver should bind to.

2.8.6 pynq.ps Module

The `pynq.ps` module facilitates management of the Processing System (PS) and PS/PL interface. It provides `Register` and `Clocks` classes for setting and getting of ARM Architecture register bits. The `Register` class is used in the `Clocks` class for getting the ARM clock frequency, and getting and setting the frequencies Programmable Logic (PL) clocks.

class `pynq.ps.Clocks`

Bases: `object`

Class for all the PS and PL clocks exposed to users.

With this class, users can get the CPU clock and all the PL clocks. Users can also set PL clocks to other values using this class.

cpu_mhz

float – The clock rate of the CPU, measured in MHz.

fclk0_mhz

float – The clock rate of the PL clock 0, measured in MHz.

fclk1_mhz

float – The clock rate of the PL clock 1, measured in MHz.

fclk2_mhz

float – The clock rate of the PL clock 2, measured in MHz.

fclk3_mhz

float – The clock rate of the PL clock 3, measured in MHz.

class `pynq.ps.ClocksMeta`

Bases: `type`

Meta class for all the PS and PL clocks not exposed to users.

Since this is the meta class for all the clocks, no attributes or methods are exposed to users. Users should use the class `Clocks` instead.

Note: If this class is parsed on an unsupported architecture it will issue a warning and leave class variables undefined

cpu_mhz

The getter method for CPU clock.

The returned clock rate is measured in MHz.

fclk0_mhz

The getter method for PL clock 0.

This method will read the register values, do the calculation, and return the current clock rate.

Returns The returned clock rate measured in MHz.

Return type `float`

fclk1_mhz

The getter method for PL clock 1.

This method will read the register values, do the calculation, and return the current clock rate.

Returns The returned clock rate measured in MHz.

Return type `float`

fclk2_mhz

The getter method for PL clock 2.

This method will read the register values, do the calculation, and return the current clock rate.

Returns The returned clock rate measured in MHz.

Return type float

fclk3_mhz

The getter method for PL clock 3.

This method will read the register values, do the calculation, and return the current clock rate.

Returns The returned clock rate measured in MHz.

Return type float

set_fclk (*clk_idx*, *div0=None*, *div1=None*, *clk_mhz=100.0*)

This method can set a PL clock frequency.

Users have to specify the index of the PL clock to be changed. For example, for fclk1, *clk_idx* is 1.

The CPU clock, by default, should not get changed.

Users have 2 options: 1. specify the 2 frequency divider values directly, or 2. specify the clock rate, in which case the divider values will be calculated.

Note: In case *div0* and *div1* are both specified, the parameter *clk_mhz* will be ignored.

Parameters

- **clk_idx** (*int*) – The index of the PL clock to be changed, from 0 to 3.
- **div0** (*int*) – The first frequency divider value.
- **div1** (*int*) – The second frequency divider value.
- **clk_mhz** (*float*) – The clock rate in MHz.

class pynq.ps.Register (*address*, *width=32*)

Bases: object

Register class that allows users to access registers easily.

This class supports register slicing, which makes the access to register values much more easily. Users can either use +1 or -1 as the step when slicing the register. By default, the slice starts from MSB to LSB, which is consistent with the common hardware design practice.

For example, the following slices are acceptable: `reg[31:13]` (commonly used), `reg[:]`, `reg[3::]`, `reg[:20:]`, `reg[1:3]`, etc.

Note: The slicing endpoints are closed, meaning both of the 2 endpoints will be included in the final returned value. For example, `reg[31:0]` will return a 32-bit value; this is consistent with most of the hardware definitions.

address

int – The address of the register.

width

int – The width of the register, e.g., 32 (default) or 64.

2.8.7 pynq.pl Module

The `pynq.pl` module facilitates management of the Programmable Logic (PL). The PL module manages the PL state through the PL class. The PL class is a singleton for the Overlay class and Bitstream classes that provide user-facing methods for bitstream and overlay manipulation. The TCL in the PL module parses overlay .tcl files to determine the overlay IP, GPIO pins, Interrupts indices, and address map. The Bitstream class within the PL module manages downloading of bitstreams into the PL.

class `pynq.pl.Bitstream`(*bitfile_name*)

Bases: `object`

This class instantiates a programmable logic bitstream.

bitfile_name

str – The absolute path of the bitstream.

timestamp

str – Timestamp when loading the bitstream. Format: year, month, day, hour, minute, second, microsecond

download()

The method to download the bitstream onto PL.

Note: The class variables held by the singleton PL will also be updated. In addition, if this method is called on an unsupported architecture it will warn and return.

Returns

Return type `None`

class `pynq.pl.PL`

Bases: `object`

Serves as a singleton for *Overlay* and *Bitstream* classes.

This class stores multiple dictionaries: IP dictionary, GPIO dictionary, interrupt controller dictionary, and interrupt pins dictionary.

bitfile_name

str – The absolute path of the bitstream currently on PL.

timestamp

str – Bitstream download timestamp, using the following format: year, month, day, hour, minute, second, microsecond.

ip_dict

dict – All the addressable IPs from PS7. Key is the name of the IP; value is a dictionary mapping the physical address, address range, IP type, configuration dictionary, the state associated with that IP, any interrupts and GPIO pins attached to the IP and the full path to the IP in the block design: {*str*: {'phys_addr' : int, 'addr_range' : int, 'type' : str, 'config' : dict, 'state' : str, 'interrupts' : dict, 'gpio' : dict, 'fullpath' : str}}.

gpio_dict

dict – All the GPIO pins controlled by PS7. Key is the name of the GPIO pin; value is a dictionary mapping user index (starting from 0), the state associated with that GPIO pin and the pins in block diagram attached to the GPIO: {*str*: {'index' : int, 'state' : str, 'pins' : [*str*]}.

interrupt_controllers

dict – All AXI interrupt controllers in the system attached to a PS7 interrupt line. Key is the name of the

controller; value is a dictionary mapping parent interrupt controller and the line index of this interrupt: {str: {'parent': str, 'index': int}}. The PS7 is the root of the hierarchy and is unnamed.

interrupt_pins

dict – All pins in the design attached to an interrupt controller. Key is the name of the pin; value is a dictionary mapping the interrupt controller and the line index used: {str: {'controller': str, 'index': int}}.

hierarchy_dict

dict – All of the hierarchies in the block design containing addressable IP. The keys are the hierarchies and the values are dictionaries containing the IP and sub-hierarchies contained in the hierarchy and and GPIO and interrupts attached to the hierarchy. The keys in dictionaries are relative to the hierarchy and the ip dict only contains immediately contained IP - not those in sub-hierarchies. {str: {'ip': dict, 'hierarchies': dict, 'interrupts': dict, 'gpio': dict, 'fullpath': str}}

class pynq.pl.PLMeta

Bases: type

This method is the meta class for the PL.

This is not a class for users. Hence there is no attribute or method exposed to users.

Note: If this metaclass is parsed on an unsupported architecture it will issue a warning and leave class variables undefined

bitfile_name

The getter for the attribute *bitfile_name*.

Returns The absolute path of the bitstream currently on PL.

Return type str

Note: If this method is called on an unsupported architecture it will warn and return an empty string

clear_dict()

Clear all the dictionaries stored in PL.

This method will clear all the related dictionaries, including IP dictionary, GPIO dictionary, etc.

client_request (*address*='/home/docs/checkouts/readthedocs.org/user_builds/pynq/checkouts/v2.0/pynq.log', *key*=b'xilinx')

Client connects to the PL server and receives the attributes.

This method should not be used by the users directly. To check open pipes in the system, use *lsof | grep <address>* and *kill -9 <pid>* to manually delete them.

Parameters

- **address** (*str*) – The filename on the file system.
- **key** (*bytes*) – The authentication key of connection.

Returns

Return type None

gpio_dict

The getter for the attribute *gpio_dict*.

Returns The dictionary storing the PS GPIO pins.

Return type dict

hierarchy_dict

The getter for the attribute *hierarchy_dict*

Returns The dictionary containing the hierarchies in the design

Return type dict

interrupt_controllers

The getter for the attribute *interrupt_controllers*.

Returns The dictionary storing interrupt controller information.

Return type dict

interrupt_pins

The getter for the attribute *interrupt_pins*.

Returns The dictionary storing the interrupt endpoint information.

Return type dict

ip_dict

The getter for the attribute *ip_dict*.

Returns The dictionary storing addressable IP instances; can be empty.

Return type dict

load_ip_data (*ip_name*, *data*)

This method writes data to the addressable IP.

Note: The data is assumed to be in binary format (.bin). The data name will be stored as a state information in the IP dictionary.

Parameters

- **ip_name** (*str*) – The name of the addressable IP.
- **data** (*str*) – The absolute path of the data to be loaded.

Returns

Return type None

reset ()

Reset both all the dictionaries.

This method must be called after a bitstream download. 1. In case there is a *.tcl file, this method will reset the IP, GPIO , and interrupt dictionaries based on the tcl file. 2. In case there is no *.tcl file, this method will simply clear the state information stored for all dictionaries.

server_update (*continued=1*)

Client sends the attributes to the server.

This method should not be used by the users directly. To check open pipes in the system, use *lsof | grep <address>* and *kill -9 <pid>* to manually delete them.

Parameters **continued** (*int*) – Continue (1) or stop (0) the PL server.

Returns

Return type None

setup (*address*='/home/docs/checkouts/readthedocs.org/user_builds/pynq/checkouts/v2.0/pynq/.log',
key=b'xilinx')

Start the PL server and accept client connections.

This method should not be used by the users directly. To check open pipes in the system, use *lsof | grep <address>* and *kill -9 <pid>* to manually delete them.

Parameters

- **address** (*str*) – The filename on the file system.
- **key** (*bytes*) – The authentication key of connection.

Returns

Return type None

timestamp

The getter for the attribute *timestamp*.

Returns Bitstream download timestamp.

Return type str

2.8.8 pynq.xlnk Module

class pynq.xlnk.ContiguousArray

Bases: numpy.ndarray

A subclass of numpy.ndarray which is allocated using physically contiguous memory for use with DMA engines and hardware accelerators. As physically contiguous memory is a limited resource it is strongly recommended to free the underlying buffer with *close* when the buffer is no longer needed. Alternatively a *with* statement can be used to automatically free the memory at the end of the scope.

This class should not be constructed directly and instead created using *Xlnk.cma_array*.

pointer

*cdata void** – The virtual address pointer to the memory location

physical_address

int – The physical address to the array

close()

Free the underlying memory

See *freebuffer* for more details

freebuffer()

Free the underlying memory

This will free the memory regardless of whether other objects may still be using the buffer so ensure that no other references to the array exist prior to freeing.

class pynq.xlnk.Xlnk

Bases: object

Class to enable CMA memory management.

The CMA state maintained by this class is local to the application except for the *CMA Memory Available* attribute which is global across all the applications.

bufmap

dict – Mapping of allocated memory to the buffer sizes in bytes.

ffi

ffi instance – Shared-object interface for the compiled CMA shared object

Note: If this class is parsed on an unsupported architecture it will issue a warning and leave the class variable `libxlnk` undefined

cma_alloc (*length*, *cacheable*=0, *data_type*='void')

Allocate physically contiguous memory buffer.

Allocates a new buffer and adds it to *bufmap*.

Possible values for parameter *cacheable* are:

1: the memory buffer is cacheable.

0: the memory buffer is non-cacheable.

Examples

```
mmu = Xlnk()
# Allocate 10 void * memory locations.
m1 = mmu.cma_alloc(10)
# Allocate 10 float * memory locations.
m2 = mmu.cma_alloc(10, data_type = "float")
```

Notes

1. Total size of buffer is automatically calculated as `size = length * sizeof(data_type)`
2. This buffer is allocated inside the kernel space using `xlnk` driver. The maximum allocatable memory is defined at kernel build time using the CMA memory parameters. For Pynq-Z1 kernel, it is specified as 128MB.

The unit of *length* depends upon the *data_type* argument.

Parameters

- **length** (*int*) – Length of the allocated buffer. Default unit is bytes.
- **cacheable** (*int*) – Indicating whether or not the memory buffer is cacheable.
- **data_type** (*str*) – CData type of the allocated buffer. Should be a valid C-Type.

Returns An CFFI object which can be accessed similar to arrays.

Return type `ffi.FFI.CData`

cma_array (*shape*, *dtype*=<class 'numpy.uint32'>)

Get a contiguously allocated numpy array

Create a numpy array with physically contiguous array. The physical address of the array can be found using the *physical_address* attribute of the returned object. The array should be freed using either *array.freebuffer()* or *array.close()* when the array is no longer required. Alternatively *cma_array* may be used in a *with* statement to automatically free the memory at the end of the block.

Parameters

- **shape** (*int or tuple of int*) – The dimensions of the array to construct
- **dtype** (*numpy.dtype or str*) – The data type to construct - defaults to 32-bit unsigned int

Returns The numpy array

Return type `numpy.ndarray`

static cma_cast (*data, data_type='void'*)

Cast underlying buffer to a specific C-Type.

Input buffer should be a valid object which was allocated through *cma_alloc* or a CFFI pointer to a memory buffer. Handy for changing void buffers to user defined buffers.

Parameters

- **data** (*cffi.FFI.CData*) – A valid buffer pointer allocated via *cma_alloc*.
- **data_type** (*str*) – New data type of the underlying buffer.

Returns Pointer to buffer with specified data type.

Return type `cffi.FFI.CData`

cma_free (*buf*)

Free a previously allocated buffer.

Input buffer should be a valid object which was allocated through *cma_alloc* or a CFFI pointer to a memory buffer.

Parameters **buf** (*cffi.FFI.CData*) – A valid buffer pointer allocated via *cma_alloc*.

Returns

Return type `None`

cma_get_buffer (*buf, length*)

Get a buffer object.

Used to get an object which supports python buffer interface. The return value thus, can be cast to objects like *bytearray*, *memoryview* etc.

Parameters

- **buf** (*cffi.FFI.CData*) – A valid buffer object which was allocated through *cma_alloc*.
- **length** (*int*) – Length of buffer in Bytes.

Returns A CFFI object which supports buffer interface.

Return type `cffi.FFI.CData`

cma_get_phy_addr (*buf_ptr*)

Get the physical address of a buffer.

Used to get the physical address of a memory buffer allocated with *cma_alloc*. The return value can be used to access the buffer from the programmable logic.

Parameters **buf_ptr** (*cffi.FFI.CData*) – A void pointer pointing to the memory buffer.

Returns The physical address of the memory buffer.

Return type `int`

static cma_memcpy (*dest, src, nbytes*)

High speed memcpy between buffers.

Used to perform a byte level copy of data from source buffer to the destination buffer.

Parameters

- **dest** (*cffi.FFI.CData*) – Destination buffer object which was allocated through *cma_alloc*.
- **src** (*cffi.FFI.CData*) – Source buffer object which was allocated through *cma_alloc*.
- **nbytes** (*int*) – Number of bytes to copy.

Returns

Return type None

cma_stats ()

Get current CMA memory Stats.

CMA Memory Available : Systemwide CMA memory availability.

CMA Memory Usage : CMA memory used by current object.

Buffer Count : Buffers allocated by current object.

Returns Dictionary of current stats.

Return type dict

ffi = <cffi.api.FFI object>

xlnk_reset ()

Systemwide Xlnk Reset.

Notes

This method resets all the CMA buffers allocated across the system.

Returns

Return type None

`pynq.xlnk.sig_handler` (*signum, frame*)

2.9 Verification

This section documents the test infrastructure supplied with the *pynq* package. It is organized as follows:

- *Running Tests* : describes how to run the pytest.
- *Writing Tests* : explains how to write tests.
- *Miscellaneous* : covers additional information relating to tests.

2.9.1 Running Tests

The *pynq* package provides tests for most python modules.

To run all the tests together, pytest can be run in a Linux terminal on the board. All the tests will be automatically collected in the current directory and child directories.

Note: The pytests have to be run as root

```
cd /home/xilinx/pynq
sudo py.test -vsrw
```

For a complete list of pytest options, please refer to [Usage and Invocations - Pytest](#).

Collection Phase

During this phase, the pytest will collect all the test modules in the current directory and all of its child directories. The user will be asked whether a device is connected, and to which port it is connected.

For example:

```
Pmod OLED attached to the board? ([yes]/no)>>> yes
Type in the interface ID of the Pmod OLED (PMODA/PMODB):
```

For the answer to the first question, “yes”, “YES”, “Yes”, “y”, and “Y” are acceptable; the same applies for “no” as an answer. You can also press *Enter*; this is equivalent to “yes”.

For the following question, type “PMODA” for devices connected to PMODA interface, or “PMODB” for devices connected to PMODB interface.

Answering “No” will skip the corresponding test(s) during the testing phase.

Testing Phase

The test suite will guide the user through all the tests implemented in the pynq package. As part of the tests, the user will be prompted for confirmation that the tests have passed, for example:

```
test_led8 ...
Pmod LED 0 on? ([yes]/no)>>>
```

Again press “Enter”, or type “yes”, “no” etc.

At the end of the testing phase, a summary will be given to show users how many tests are passed / skipped / failed.

2.9.2 Writing Tests

This section follows the guide available on [Pytest Usages and Examples](#). You can write a test class with assertions on inputs and outputs to allow automatic testing. The names of the test modules *must* start with *test_*; all the methods for tests in any test module *must* also begin with *test_*. One reason to enforce this is to ensure the tests will be collected properly. See the [Full pytest documentation](#) for more details.

Step 1

First of all, the pytest package has to be imported:

```
import pytest
```

Step 2

Decorators can be specified directly above the methods. For example, users can specify (1) the order of this test in the entire pytest process, and (2) the condition to skip the corresponding test. More information on decorators can be found in [Marking test functions with attributes - Pytest](#).

An example will be given in the next step.

Step 3

Directly below decorators, you can write some assertions/tests. See the example below:

```
@pytest.mark.skipif(not flag,
                    reason="need ADC and DAC attached to the base overlay")
def test_dac_adc_loop():
    """Test for writing a single value via the loop.

    First check whether read() correctly returns a string. Then ask the users
    to write a voltage on the DAC, read from the ADC, and compares the two
    voltages.

    The exception is raised when the difference is more than 10% and more than
    0.1V.

    The second test writes a sequence of voltages on the DAC and read from
    the ADC, then checks whether they are approximately the same
    (with a delta of 10%).

    Note
    ----
    Users can use a straight cable (instead of wires) to do this test.
    For the 6-pin DAC Pmod, it has to be plugged into the upper row of the
    Pmod interface.

    """
    Overlay('base.bit').download()
    dac = Pmod_DAC(dac_id)
    adc = Pmod_ADC(adc_id)

    value = float(input("\nInsert a voltage in the range of [0.00, 2.00]: "))
    assert value <= 2.00, 'Input voltage should not be higher than 2.00V.'
    assert value >= 0.00, 'Input voltage should not be lower than 0.00V.'
    dac.write(value)
    sleep(0.05)
    assert round(abs(value-adc.read()[0]),2) < max(0.1, 0.1*value), \
        'Read value != write value.'

    print('Generating 100 random voltages from 0.00V to 2.00V...')
    for _ in range(100):
        value = round(0.0001*randint(0, 20000), 4)
```

```
dac.write(value)
sleep(0.05)
assert round(abs(value-adc.read()[0]), 2) < max(0.1, 0.1*value), \
        'Read value {} != write value {}'.format(adc.read(), value)


del dac, adc
```

Note the *assert* statements specify the desired condition, and raise exceptions whenever that condition is not met. A customized exception message can be attached at the end of the *assert* methods, as shown in the example above.

2.9.3 Miscellaneous Test Setup

ADC Jumper

In our tests and demos, we have used a Pmod ADC. In order to make it work properly with the testing environment, you need to set a jumper **JP1** to **REF** on the Pmod ADC. This will allow the ADC to use the correct reference voltage.

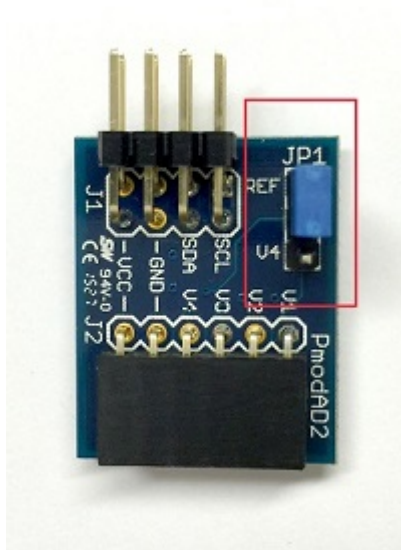

Cable Type

Two types of cables can be used with the tests in the pynq package, a “straight” cable, and a “loopback” cable:



- *Straight cable* (upper one in the image): The internal wires between the two ends are straight. This cable is intended for use as an extension cable.
- *Loopback cable* (lower one in the image, with red ribbon): The internal wires are twisted. This cable is intended for testing.

There are marks on the connectors at each end of the cable to indicate the orientation and wiring of the cable.

Note: You must not short VCC and GND as it may damage the board. It is good practice to align the pins with the dot marks to VCC of the Pmod interfaces.

Note: For testing, there is only one connection type (mapping) allowed for each cable type. Otherwise VCC and GND could be shorted, damaging the board.

2.10 Frequently Asked Questions (FAQs)

2.10.1 Troubleshooting

I can't connect to my board

1. Check the board is powered on (Red LED LD13) and that the bitstream has been loaded (Green “DONE” LED LD12)
2. Your board and PC/laptop must be on the same network, or have a direct network connection. Check that you can *ping* the board (hostname, or IP address) from a command prompt or terminal on your host PC:

```
ping pynq
```

or

```
ping 192.168.2.99
```

(The default IP address of the board is : 192.168.2.99)

3. Log on to the board through a terminal, and check the system is running, i.e. that the Linux shell is accessible. See below for details on logging on with a terminal.
4. If you can't ping the board, or the host PC, check your network settings.
 - You must ensure your PC/laptop and board have IP addresses in the same range. If your network cables are connected directly to your PC/laptop and board, you may need to set a static IP address for your PC/laptop manually. See [Assign your computer a static IP address](#).
 - If you have a proxy setup, you may need to add a rule to bypass the board hostname/ip address.
 - If you are using a docking station, when your laptop is docked, the Ethernet port on the PC may be disabled.

My board is not powering on (No Red LED)

The board can be powered by USB cable, or power adapter (7 - 15V V 2.1mm centre-positive barrel jack). Make sure Jumper JP5 is set to USB or REG (for power adapter). If powering the board via USB, make sure the USB port is fully powered. Laptops in low power mode may reduce the available power to a USB port.

The bitstream is not loading (No Green LED)

- Check the Micro-SD card is inserted correctly (the socket is spring loaded, so push it in until you feel it click into place).
- Check jumper JP4 is set to SD (board boots from Micro SD card).
- Connect a terminal and verify that the Linux boot starts.

If the Linux boot does not start, or fails, you may need to flash the Micro SD card with the PYNQ-Z1 image.

The hostname of the board is not resolving/not found

It may take the hostname (pynq) some time to resolve on your network. If you know the IP address of the board, it may be faster to use the IP address to navigate to the Jupyter portal instead of the hostname.

For example, in your browser, go to <http://192.168.2.99:9090> if the board is using the static IP address 192.168.2.99.

You can find the IP by first connecting a terminal to the board, then running the following command in Linux command line:

```
ifconfig
```

Check the settings for *eth0* and look for an IP address.

I don't have an Ethernet port on my PC/Laptop

If you don't have an Ethernet port, you can get a USB to Ethernet adapter.

If you have a wireless router with Ethernet ports (LAN), you can connect your PYNQ-Z1 board to an Ethernet port on your router, and connect to it from your PC using WiFi. (You may need to change settings on your Router to enable the Wireless network to communicate with your LAN - check your equipment documentation for details.)

You can also connect a WiFi dongle to the board, and set up the board to connect to the wireless network. Your host PC can then connect to the same wireless network to connect to the board.

How do I setup my computer to connect to the board?

If you are connecting your board to your network (i.e. you have plugged the Ethernet cable into the board, and the other end into a network switch, or home router), then you should not need to setup anything on your computer. Usually, both your computer, and board will be assigned an IP address automatically, and they will be able to communicate with each other.

If you connect your board directly to your computer with an ethernet cable, then you need to make sure that they have IP addresses in the same range. The board will assign itself a static IP address (by default 192.168.2.99), and you will need to assign a static IP address in the same range to the computer. This allows your computer and board to communicate to each other over the Ethernet cable.

See *Assign your computer a static IP address*.

I can't connect to the Jupyter portal!

If your board is powered on, and you see the Red and Green LEDs, but still can't connect to the Jupyter Portal, or see the Samba shared drive, then you need to verify your IP addresses.

By default, the board has DHCP enabled. If you plug the board into a home router, or network switch connected to your network, it should be allocated an IP address automatically. If not, it should fall back to a static IP address of 192.168.2.99.

If you plug the Ethernet cable directly to your computer, you will need to configure your network card to have an IP in the same address range, e.g. 192.168.2.1.

VPN

If your PC/laptop is connected to a VPN, and your board is not on the same VPN network, this will block access to local IP addresses. You need to disable the VPN, or set it to bypass the board address.

Proxy

If your board is connected to a network that uses a proxy, you need to set the proxy variables on the board

```
set http_proxy=my_http_proxy:8080
set https_proxy=my_https_proxy:8080
```

2.10.2 Board/Jupyter settings

How do I modify the board settings?

Linux is installed on the board. Connect to the board using a terminal, and change the settings as you would for any other Linux machine.

How do I find the IP address of the board?

Connect to the board using a terminal (see above) and type:

```
hostname -I
```

This will help you find the IP address for the eth0 Ethernet adapter or the WiFi dongle.

How do I set/change the static IP address on the board?

The Static IP address is set in `/etc/dhcp/dhclient.conf` - you can modify the board's static IP here.

How do I find my hostname?

Connect to the board using a terminal and run:

```
hostname
```

How do I change the hostname?

If you have multiple boards on the same network, you should give them different host names. You can change the hostname by editing the Linux hostname files: `/etc/hostname` and `/etc/hosts`.

What is the user account and password?

The username for all Linux, Jupyter and Samba logins is `xilinx`. The password is `xilinx`.

How do I enable/disable the Jupyter notebook password?

The Jupyter configuration file can be found at

```
/root/.jupyter/jupyter_notebook_config.py
```

You can add or comment out the `c.NotebookApp.password` to bypass the password authentication when connecting to the Jupyter Portal.

```
c.NotebookApp.password =u
↪ 'sha1:6c2164fc2b22:ed55ecf07fc0f985ab46561483c0e888e8964ae6'
```

How do I change the Jupyter notebook password

A hashed password is saved in the Jupyter Notebook configuration file.

```
/root/.jupyter/jupyter_notebook_config.py
```

You can create a hashed password using the function `IPython.lib.passwd()`:

```
from IPython.lib import passwd
password = passwd("secret")
6c2164fc2b22:ed55ecf07fc0f985ab46561483c0e888e8964ae6
```

You can then add or modify the line in the `jupyter_notebook_config.py` file

```
c.NotebookApp.password =u
↪ 'sha1:6c2164fc2b22:ed55ecf07fc0f985ab46561483c0e888e8964ae6'
```

2.10.3 General Questions

Does Pynq support Python 2.7?

Python 2.7 is loaded on Zynq® and Python 2.7 scripts can be executed. The PYNQ v2.0 release, is based on Python 3.6. No attempts have been made to ensure backward compatibility with Python 2.7.

How do I write the Micro SD card image?

You can find instructions in [Writing the SD Card Image](#).

What type of Micro SD card do I need?

We recommend you use a card at least 8GB in size and at least class 4 speed rating.

How do I connect to the board using a terminal?

To do this, you need to connect to the board using a terminal:

Connect a Micro USB cable to the board and your PC/Laptop, and use a terminal emulator (puTTY, TeraTerm etc) to connect to the board.

Terminal Settings:

- 115200 baud
- 8 data bits
- 1 stop bit
- No Parity
- No Flow Control

2.11 Glossary

2.11.1 A-G

APSOC All Programmable System on Chip

BSP A board support package (BSP) is a collection of low-level libraries and drivers. The Xilinx® software development Kit (SDK) uses a BSP to form the lowest layer of your application software stack. Software applications must link against or run on top of a given software platform using the APIs that it provides. Therefore, before you can create and use software applications in SDK, you must create a board support package

FPGA **Field Programmable Gate Arrays (FPGAs)** are semiconductor devices that are based around a matrix of configurable logic blocks (CLBs) connected via programmable interconnects. FPGAs can be reprogrammed to desired application or functionality requirements after manufacturing. This feature distinguishes FPGAs from Application Specific Integrated Circuits (ASICs), which are custom manufactured for specific design tasks.

2.11.2 H-R

HDF **Hardware Definition File (.hdf)**. This file is created by Vivado and contains information about a processor system in an FPGA overlay. The HDF specifies the peripherals that exist in the system, and the memory map. This is used by the BSP to build software libraries to support the available peripherals.

I2C See IIC

IIC Inter-Integrated Circuit; multi-master, multi-slave, single-ended, serial computer bus protocol

IOP Input/Output Processor.

Jupyter (Notebooks) **Jupyter** is an open source project consisting of an interactive, web application that allows users to create and share notebook documents that contain live code and the full range of rich media supported by modern browsers. These include text, images, videos, LaTeX-styled equations, and interactive widgets. The Jupyter framework is used as a front-end to over 40 different programming languages. It originated from the interactive data science and scientific computing communities. Its uses include: data cleaning and transformation, numerical simulation, statistical modelling, machine learning and much more.

MicroBlaze **MicroBlaze** is a soft microprocessor core designed for Xilinx FPGAs. As a soft-core processor, MicroBlaze is implemented entirely in the general-purpose memory and logic fabric of an FPGA.

Pmod Interface The Pmod or **Peripheral Module** interface is used to connect low frequency, low I/O pin count peripheral modules to host controller boards. accessory boards to add functionality to the platform. e.g. ADC, DAC, I/O interfaces, sensors etc.

(Micro) SD Secure Digital (Memory Card standard)

readthedocs.org **readthedocs.org** is a popular website that hosts the documentation for open source projects at no cost. readthedocs.org uses Sphinx document generation tools to automatically generate both the website and PDF versions of project documentation from a GitHub repository when new updates are pushed to that site.

REPL A read-eval-print loop (REPL), also known as an interactive toplevel or language shell, is a simple, interactive computer programming environment that takes single user inputs (i.e. single expressions), evaluates them, and returns the result to the user; a program written in a REPL environment is executed piecewise. The term is most usually used to refer to programming interfaces similar to the classic Lisp machine interactive environment. Common examples include command line shells and similar environments for programming languages, and is particularly characteristic of scripting languages [wikipedia](#)

reST Restructured text is a markup language used extensively with the Sphinx document generator

2.11.3 S-Z

SDK Xilinx SDK - Software Development Kit. Software development environment including cross-compiles for ARM®, and MicroBlaze processors. Also includes debug, and profiling tools. Required to build software for a MicroBlaze processor inside an IOP.

SOC System On Chip

Sphinx A document generator written in Python and used extensively to document Python and other coding projects

SPI Serial Peripheral Interface; synchronous serial communication interface specification

UART Universal asynchronous receiver/transmitter; Serial communication protocol

Vivado [Vivado Design Suite](#) is a suite of computer-aided design tools provided by Xilinx for creating FPGA designs. It is used to design and implement the overlays used in Pynq.

XADC An [XADC](#) is a hard IP block that consists of dual 12-bit, 1 Mega sample per second (MSPS), analog-to-digital converters and on-chip sensors which are integrated into Xilinx 7 series FPGA devices

Zynq® [Zynq-7000 All Programmable SoC \(APSoC\) devices](#) integrate the software programmability of an ARM®-based processor with the hardware programmability of an FPGA, enabling key analytics and hardware acceleration while integrating CPU, DSP, ASSP, and mixed signal functionality on a single device. Zynq-7000 AP SoCs infuse customizable intelligence into today's embedded systems to suit your unique application requirements

Zynq PL Programmable Logic - FPGA fabric

Zynq PS Processing System - SOC processing subsystem built around dual-core, ARM Cortex-A9 processor

2.12 Useful Links

2.12.1 Git

- [Interactive introduction to Git](#)
- [Free PDF copy of The Pro Git book by Scott Chacon and Ben Straub](#)

2.12.2 Jupyter

- [Jupyter Project](#)
- [Try Jupyter in your browser](#)

2.12.3 PUTTY (terminal emulation software)

- [PUTTY download page](#)

2.12.4 Pynq Technical support

- [Pynq Technical support](#)

2.12.5 Python built-in functions

- [C Python native functions](#)

2.12.6 Python training

- [The Python Tutorial](#) from the Python development team
- [Google Python training](#) including videos
- [Python Tutor](#) including visualization of Python program execution
- [20 Best Free Tutorials to Learn Python](#) as of 9 Oct 2015

2.12.7 reStructuredText

- [reStructuredText docs](#)
- [reStructuredText Primer](#)
- [Online reStructuredText editor](#)

2.12.8 Sphinx

- [The official Sphinx docs](#)
- [Online reST and Sphinx editor](#) with rendering
- [A useful Sphinx cheat sheet](#)
- [Jupyter Notebook Tools for Sphinx](#)

2.13 Appendix

2.13.1 Technology Backgrounder

Overlays and Design Re-use

The ‘magic’ of mapping an application to an APSoC, without designing custom hardware, is achieved by using *FPGA overlays*. FPGA overlays are FPGA designs that are both highly configurable and highly optimized for a given domain. The availability of a suitable overlay removes the need for a software designer to develop a new bitstream. Software and system designers can customize the functionality of an existing overlay *in software* once the API for the overlay bitstream is available.

An FPGA overlay is a domain-specific FPGA design that has been created to be highly configurable so that it can be used in as many different applications as possible. It has been crafted to maximize post-bitstream programmability which is exposed via its API. The API provides a new entry-point for application-focused software and systems engineers to exploit APSoCs in their solutions. With an API they only have to write software to program configure the functions of an overlay for their applications.

By analogy with the Linux kernel and device drivers, FPGA overlays are designed by relatively few engineers so that they can be re-used by many others. In this way, a relatively small number of overlay designers can support a much larger community of APSoC designers. Overlays exist to promote re-use. Like kernels and device drivers, these hardware-level artefacts are not static, but evolve and improve over time.

Characteristics of Good Overlays

Creating one FPGA design and its corresponding API to serve the needs of many applications in a given domain is what defines a successful overlay. This, one-to-many relationship between the overlay and its users, is different from the more common one-to-one mapping between a bitstream and its application.

Consider the example of an overlay created for controlling drones. Instead of creating a design that is optimized for controlling just a single type of drone, the hardware architects recognize the many common requirements shared by different drone controllers. They create a design for controlling drones that is flexible enough to be used with several different drones. In effect, they create a drone-control overlay. They expose, to the users of their bitstream, an API through which the users can determine in software the parameters critical to their application. For example, a drone control overlay might support up to eight, pulse-width-modulated (PWM) motor control circuits. The software programmer can determine how many of the control circuits to enable and how to tune the individual motor control parameters to the needs of his particular drone.

The design of a good overlay shares many common elements with the design of a class in object-oriented software. Determining the fundamental data structure, the private methods and the public interface are common requirements. The quality of the class is determined both by its overall usefulness and the coherency of the API it exposes. Well-engineered classes and overlays are inherently useful and are easy to learn and deploy.

Pynq adopts a holistic approach by considering equally the design of the overlays, the APIs exported by the overlays, and how well these APIs interact with new and existing Python design patterns and idioms to simplify and improve the APSoC design process. One of the key challenges is to identify and refine good abstractions. The goal is to find abstractions that improve design coherency by exposing commonality, even among loosely-related tasks. As new overlays and APIs are published, we expect that the open-source software community will further improve and extend them in new and unexpected ways.

Note that FPGA overlays are not a novel concept. They have been studied for over a decade and many academic papers have been published on the topic.

The Case for Productivity-layer Languages

Successive generations of All Programmable Systems on Chip embed more processors and greater processing power. As larger applications are integrated into APSoCs, the embedded code increases also. Embedded code that is speed or size critical, will continue to be written in C/C++. These ‘efficiency-layer or systems languages’ are needed to write fast, low-level drivers, for example. However, the proportion of embedded code that is neither speed-critical or size-critical, is increasing more rapidly. We refer to this broad class of code as *embedded applications code*.

Programming embedded applications code in higher-level, ‘productivity-layer languages’ makes good sense. It simply extends the generally-accepted best-practice of always programming at the highest possible level of abstraction. Python is currently a premier productivity-layer language. It is now available in different variants for a range of embedded systems, hence its adoption in Pynq. Pynq runs CPython on Linux on the ARM® processors in Zynq® devices. To further increase productivity and portability, Pynq uses the Jupyter Notebook, an open-source web framework to rapidly develop systems, document their behavior and disseminate the results.

2.13.2 Writing the SD Card Image

Windows

- Insert the Micro SD card into your SD card reader and check which drive letter was assigned. You can find this by opening Computer/My Computer in Windows Explorer.
- Download the [Win32DiskImager utility from the Sourceforge Project page](#)
- Extract the *Win32DiskImager* executable from the zip file and run the Win32DiskImager utility as administrator. (Right-click on the file, and select Run as administrator.)

- Select the PYNQ-Z1 image file (.img).
- Select the drive letter of the SD card. Be careful to select the correct drive. If you select the wrong drive you can overwrite data on that drive. This could be another USB stick, or memory card connected to your computer, or your computer's hard disk.
- Click **Write** and wait for the write to complete.

MAC / OS X

On Mac OS, you can use `dd`, or the graphical tool ImageWriter to write to your Micro SD card.

- First open a terminal and unzip the image:

```
unzip pynq_z1_image_2016_09_14.zip -d ./
```

ImageWriter

Note the Micro SD card must be formatted as FAT32.

- Insert the Micro SD card into your SD card reader
- From the Apple menu, choose “About This Mac”, then click on “More info...”; if you are using Mac OS X 10.8.x Mountain Lion or newer, then click on “System Report”.
- Click on “USB” (or “Card Reader” if using a built-in SD card reader) then search for your SD card in the upper-right section of the window. Click on it, then search for the BSD name in the lower-right section; it will look something like **diskn** where n is a number (for example, disk4). Make sure you take a note of this number.
- Unmount the partition so that you will be allowed to overwrite the disk. To do this, open Disk Utility and unmount it; do not eject it, or you will have to reconnect it. Note that on Mac OS X 10.8.x Mountain Lion, “Verify Disk” (before unmounting) will display the BSD name as `/dev/disk1s1` or similar, allowing you to skip the previous two steps.
- From the terminal, run the following command:

```
sudo dd bs=1m if=path_of_your_image.img of=/dev/rdiskn
```

Remember to replace n with the number that you noted before!

If this command fails, try using disk instead of rdisk:

```
sudo dd bs=1m if=path_of_your_image.img of=/dev/diskn
```

Wait for the card to be written. This may take some time.

Command Line

- Open a terminal, then run:

```
diskutil list
```

- Identify the disk (not partition) of your SD card e.g. disk4, not disk4s1.
- Unmount your SD card by using the disk identifier, to prepare for copying data to it:

```
diskutil unmountDisk /dev/disk<disk# from diskutil>
```

where disk is your BSD name e.g. `diskutil unmountDisk /dev/disk4`

- Copy the data to your SD card:

```
sudo dd bs=1m if=image.img of=/dev/rdisk<disk# from diskutil>
```

where disk is your BSD name e.g. `sudo dd bs=1m if=pynq_z1_image_2016_09_07.img of=/dev/rdisk4`

This may result in a dd: invalid number ‘1m’ error if you have GNU coreutils installed. In that case, you need to use a block size of 1M in the bs= section, as follows:

```
sudo dd bs=1M if=image.img of=/dev/rdisk<disk# from diskutil>
```

Wait for the card to be written. This may take some time. You can check the progress by sending a SIGINFO signal (press Ctrl+T).

If this command still fails, try using disk instead of rdisk, for example:

```
sudo dd bs=1m if=pynq_z1_image_2016_09_07.img of=/dev/disk4
```

Linux

dd

Please note the dd tool can overwrite any partition on your machine. Please be careful when specifying the drive in the instructions below. If you select the wrong drive, you could lose data from, or delete your primary Linux partition.

- Run `df -h` to see what devices are currently mounted.
- Insert the Micro SD card into your SD card reader
- Run `df -h` again.

The new device that has appeared is your Micro SD card. The left column gives the device name; it will be listed as something like `/dev/mmcblk0p1` or `/dev/sdd1`. The last part (p1 or 1 respectively) is the partition number but you want to write to the whole SD card, not just one partition. You need to remove that part from the name. e.g. Use `/dev/mmcblk0` or `/dev/sdd` as the device name for the whole SD card.

Now that you’ve noted what the device name is, you need to unmount it so that files can’t be read or written to the SD card while you are copying over the SD image.

- Run `umount /dev/sdd1`, replacing sdd1 with whatever your SD card’s device name is (including the partition number).

If your SD card shows up more than once in the output of `df` due to having multiple partitions on the SD card, you should unmount all of these partitions.

- In the terminal, write the image to the card with the command below, making sure you replace the input file `if=` argument with the path to your `.img` file, and the `/dev/sdd` in the output file `of=` argument with the right device name. This is very important, as you will lose all data on the hard drive if you provide the wrong device name. Make sure the device name is the name of the whole Micro SD card as described above, not just a partition of it; for example, `sdd`, not `sdds1`, and `mmcblk0`, not `mmcblk0p1`.

```
sudo dd bs=4M if=pynq_z1_image_2016_09_07.img of=/dev/sdd
```

Please note that block size set to 4M will work most of the time; if not, please try 1M, although this will take considerably longer.

The `dd` command does not give any information of its progress and so may appear to have frozen; it could take a few minutes to finish writing to the card.

Instead of `dd` you can use `dcfldd`; it will give a progress report about how much has been written.

2.13.3 Assign your computer a static IP address

Instructions may vary slightly depending on the version of operating system you have. You can also search on google for instructions on how to change your network settings.

You need to set the IP address of your laptop/pc to be in the same range as the board. e.g. if the board is 192.168.2.99, the laptop/PC can be 192.168.2.x where x is 0-255 (excluding 99, as this is already taken by the board).

You should record your original settings, in case you need to revert to them when finished using PYNQ.

Windows

- Go to Control Panel -> Network and Internet -> Network Connections
- Find your Ethernet network interface, usually *Local Area Connection*
- Double click on the network interface to open it, and click on *Properties*
- Select Internet Protocol Version 4 (TCP/IPv4) and click *Properties*
- Select *Use the following IP address*
- Set the Ip address to 192.168.2.1 (or any other address in the same range as the board)
- Set the subnet mask to 255.255.255.0 and click **OK**

Mac OS

- Open *System Preferences* then open *Network*
- Click on the connection you want to set manually, usually *Ethernet*
- From the Configure IPv4 drop down choose **Manually**
- Set the IP address to 192.168.2.1 (or any other address in the same range as the board)
- Set the subnet mask to 255.255.255.0 and click **OK**

The other settings can be left blank.

Linux

- Edit this file (replace `gedit` with your preferred text editor):

```
sudo gedit /etc/network/interfaces
```

The file usually looks like this:

```
auto lo eth0
iface lo inet loopback
iface eth0 inet dynamic
```

- Make the following change to set the eth0 interface to the static IP address 192.168.2.1

```
iface eth0 inet static
    address 192.168.2.1
    netmask 255.255.255.0
```

Your file should look like this:

```
auto lo eth0
iface lo inet loopback
iface eth0 inet static
    address 192.168.2.1
    netmask 255.255.255.0
```

2.14 Change Log

2.14.1 Version 2.0

Image release: pynq_z1_v2.0

Documentation updated: 18 Aug 2017

- **Overlay changes**
 - New logictools overlay
 - Updated to new Trace Analyzer IP in the base overlay
- **Repository Changes**
 - Repository restructured to provide better support for multiple platforms
 - **Repository now supports direct pip install**
 - * update_pynq.sh is now deprecated
- PYNQ Image build flow now available
- **Pynq API Changes**
 - pynq.lib combines previous packages: pynq.board, pynq.iop, pynq.drivers
 - The pynq.iop subpackage has been restructured into lib.arduino and lib.pmod

For example:

```
from pynq.iop import Arduino_Analog
```

is replaced by:

```
from pynq.lib.arduino import Arduino_Analog
```

- Overlay() automatically downloads an overlays on instantiation by default. Explicit .download() is not required
- DMA driver replaced with new version

The buffer is no longer owned by the DMA driver and should instead be allocated using *Xlnk.cma_array*. Driver exposes both directions of the DMA engine. For example:

```
send_buffer = xlnk.cma_array(1024, np.float32)
dma.sendchannel.transfer(send_buffer)
dma.wait()
# wait dma.wait_async() also available in coroutines
```

- New Video subsystem with support for openCV style frame passing, color space transforms, and grayscale conversion
- New PynqMicroblaze parent class to implement any PYNQ MicroBlaze subsystem
- New DefaultIP driver to access MMIO, interrupts and GPIO for an IP and is used as the base class for all IP drivers
- New DefaultHierarchy driver to access contained IP as attributes and is used as the base class for all hierarchy drivers
- New AxiGPIO driver
- **Linux changes**
 - Addition USB Ethernet drivers added
 - Start-up process added to systemd services
- **New Python Packages**
 - cython
- **IP changes**
 - Updated Trace Analyzer, deprecated Trace Buffer
 - Updated Video subsystem with added HLS IP to do color space transforms, and grayscale conversion
 - Added new logictools overlay IP: Pattern Generator, Boolean Generator, FSM Generator
- **Documentation changes**
 - Restructured documentation
 - Added *PYNQ Overlays* section describing each overlay and its hardware components
 - Added *PYNQ Libraries* section describing Python API for each hardware component
 - Added *pynq Package* section for Python Docstrings
 - Creating Overlays section renamed to *Overlay Design Methodology*
 - Added *PYNQ SD Card* section describing PYNQ image build process

2.14.2 Version 1.4

Image release: pynq_z1_image_2016_02_10

Documentation updated: 10 Feb 2017

- Xilinx Linux kernel upgraded to 4.6.0
- **Added Linux Packages**
 - Python3.6
 - iwconfig
 - iwlist

- microblaze-gcc
- **New Python Packages**
 - asyncio
 - uvloop
 - transitions
 - pygraphviz
 - pyeda
- **Updated Python Packages**
 - pynq
 - Jupyter Notebook Extension added
 - IPython upgraded to support Python 3.6
 - pip
- **Other changes**
 - Jupyter extensions
 - reveal.js updated
 - update_pynq.sh
 - wavedrom.js
- **Base overlay changes**
 - IOP interface to DDR added (Pmod and Arduino IOP)
 - Interrupt controller from overlay to PS added. IOP GPIO connected to interrupt controller.
 - Arduino GPIO base address has changed due to merge of GPIO into a single block. *arduino_grove_ledbar* and *arduino_grove_buzzer* compiled binaries are not backward compatible with previous Pynq overlay/image.
- **Pynq API/driver changes**
 - TraceBuffer: Bit masks are not required. Only pins should be specified.
 - PL: `pl_dict` returns an integer type for any base address http://pynq.readthedocs.io/en/latest/4_programming_python.html / address range.
 - Video: Video mode constants are exposed outside the class.
 - Microblaze binaries for IOP updated.
 - Xlnk() driver updated, with better support for SDX 2016.3. Removed the customized Xlnk() drivers and use the libsdcs version.
- **Added new iop modules**
 - *arduino_lcd18*
- **Added Notebooks**
 - audio (updated)
 - *arduino_lcd* (new)
 - utilities (new)

- asyncio (new)
- **Documentation changes**
 - New section on peripherals and interfaces
 - New section on using peripherals in your applications
 - New section on Asyncio/Interrupts
 - New section on trace buffer

2.14.3 Version 1.3

Image release: pynq_z1_image_2016_09_14

Documentation updated: 16 Dec 2016

- **Added new iop modules to docs**
 - Arduino Grove Color
 - Arduino Grove DLight
 - Arduino Grove Ear HR
 - Arduino Grove Finger HR
 - Arduino Grove Haptic motor
 - Arduino Grove TH02
 - Pmod Color
 - Pmod DLight
 - Pmod Ear HR
 - Pmod Finger HR
 - Pmod Haptic motor
 - Pmod TH02
- Added USB WiFi driver

p

`pynq.gpio`, 114
`pynq.interrupt`, 114
`pynq.lib.arduino.arduino_analog`, 135
`pynq.lib.arduino.arduino_grove_adc`, 137
`pynq.lib.arduino.arduino_grove_buzzer`, 138
`pynq.lib.arduino.arduino_grove_color`, 139
`pynq.lib.arduino.arduino_grove_ear_hr`, 139
`pynq.lib.arduino.arduino_grove_finger_hr`, 140
`pynq.lib.arduino.arduino_grove_haptic_motor`, 140
`pynq.lib.arduino.arduino_grove_imu`, 141
`pynq.lib.arduino.arduino_grove_ledbar`, 143
`pynq.lib.arduino.arduino_grove_light`, 144
`pynq.lib.arduino.arduino_grove_oled`, 145
`pynq.lib.arduino.arduino_grove_pir`, 146
`pynq.lib.arduino.arduino_grove_th02`, 146
`pynq.lib.arduino.arduino_grove_tmp`, 147
`pynq.lib.arduino.arduino_io`, 148
`pynq.lib.arduino.arduino_lcd18`, 149
`pynq.lib.audio`, 116
`pynq.lib.axigpio`, 118
`pynq.lib.button`, 120
`pynq.lib.dma`, 121
`pynq.lib.led`, 124
`pynq.lib.logictools.boolean_generator`, 177
`pynq.lib.logictools.fsm_generator`, 179
`pynq.lib.logictools.pattern_generator`, 183
`pynq.lib.logictools.trace_analyzer`, 186
`pynq.lib.pmod.pmod_adc`, 152
`pynq.lib.pmod.pmod_als`, 154
`pynq.lib.pmod.pmod_cable`, 155
`pynq.lib.pmod.pmod_dac`, 156
`pynq.lib.pmod.pmod_dpot`, 157
`pynq.lib.pmod.pmod_grove_adc`, 165
`pynq.lib.pmod.pmod_grove_buzzer`, 167
`pynq.lib.pmod.pmod_grove_color`, 167
`pynq.lib.pmod.pmod_grove_dlight`, 167
`pynq.lib.pmod.pmod_grove_ear_hr`, 168
`pynq.lib.pmod.pmod_grove_finger_hr`, 168
`pynq.lib.pmod.pmod_grove_haptic_motor`, 169
`pynq.lib.pmod.pmod_grove_imu`, 170
`pynq.lib.pmod.pmod_grove_ledbar`, 171
`pynq.lib.pmod.pmod_grove_light`, 173
`pynq.lib.pmod.pmod_grove_oled`, 173
`pynq.lib.pmod.pmod_grove_pir`, 175
`pynq.lib.pmod.pmod_grove_th02`, 175
`pynq.lib.pmod.pmod_grove_tmp`, 176
`pynq.lib.pmod.pmod_iic`, 157
`pynq.lib.pmod.pmod_io`, 158
`pynq.lib.pmod.pmod_led8`, 159
`pynq.lib.pmod.pmod_oled`, 160
`pynq.lib.pmod.pmod_pwm`, 161
`pynq.lib.pmod.pmod_tcl`, 161
`pynq.lib.pmod.pmod_timer`, 163
`pynq.lib.pmod.pmod_tmp2`, 164
`pynq.lib.pynqmicroblaze`, 125
`pynq.lib.rgbled`, 126
`pynq.lib.switch`, 127
`pynq.lib.usb_wifi`, 128
`pynq.lib.video`, 129
`pynq.mmio`, 189
`pynq.overlay`, 190
`pynq.pl`, 195
`pynq.ps`, 193
`pynq.xlnk`, 198

Symbols

`_gpio` (pynq.overlay.DefaultIP attribute), 190
`_interrupts` (pynq.overlay.DefaultIP attribute), 190
`_mmio` (pynq.lib.rgbled.RGBLED attribute), 126
`_rgbleds_val` (pynq.lib.rgbled.RGBLED attribute), 127

A

`activeframe` (pynq.lib.video.AxiVDMA.MM2SChannel attribute), 129
`activeframe` (pynq.lib.video.AxiVDMA.S2MMChannel attribute), 130
`address` (pynq.ps.Register attribute), 194
`analysis_group` (pynq.lib.logictools.pattern_generator.PatternGenerator attribute), 184
`analysis_group_name` (pynq.lib.logictools.pattern_generator.PatternGenerator attribute), 184
`analysis_names` (pynq.lib.logictools.pattern_generator.PatternGenerator attribute), 184
`analysis_pins` (pynq.lib.logictools.pattern_generator.PatternGenerator attribute), 184
`analyze()` (pynq.lib.logictools.boolean_generator.BooleanGenerator method), 177
`analyze()` (pynq.lib.logictools.fsm_generator.FSMGenerator method), 180
`analyze()` (pynq.lib.logictools.pattern_generator.PatternGenerator method), 184
`analyze()` (pynq.lib.logictools.trace_analyzer.TraceAnalyzer method), 187
`analyzer` (pynq.lib.logictools.boolean_generator.BooleanGenerator attribute), 177
`analyzer` (pynq.lib.logictools.fsm_generator.FSMGenerator attribute), 180
`analyzer` (pynq.lib.logictools.pattern_generator.PatternGenerator attribute), 184
`Arduino_Analog` (class in pynq.lib.arduino.arduino_analog), 135
`Arduino_IO` (class in pynq.lib.arduino.arduino_io), 148
`Arduino_LCD18` (class in pynq.lib.arduino.arduino_lcd18), 149

`array` (pynq.mmio.MMIO attribute), 189
`Audio` (class in pynq.lib.audio), 116
`axi_vdma` (pynq.lib.video.HDMIWrapper attribute), 134
`AxiGPIO` (class in pynq.lib.axigpio), 118
`AxiGPIO.Channel` (class in pynq.lib.axigpio), 118
`AxiGPIO.InOut` (class in pynq.lib.axigpio), 119
`AxiGPIO.Input` (class in pynq.lib.axigpio), 119
`AxiGPIO.Output` (class in pynq.lib.axigpio), 119
`AxiVDMA` (class in pynq.lib.video), 129
`AxiVDMA.MM2SChannel` (class in pynq.lib.video), 129
`AxiVDMA.S2MMChannel` (class in pynq.lib.video), 130

B

`base_addr` (pynq.mmio.MMIO attribute), 189
`bindto` (pynq.lib.axigpio.AxiGPIO attribute), 120
`bindto` (pynq.lib.dma.DMA attribute), 121
`bindto` (pynq.lib.video.AxiVDMA attribute), 131
`bindto` (pynq.lib.video.ColorConverter attribute), 131
`bindto` (pynq.lib.video.PixelPacker attribute), 134
`bitfile_name` (pynq.overlay.Overlay attribute), 191
`bitfile_name` (pynq.pl.Bitstream attribute), 195
`bitfile_name` (pynq.pl.PL attribute), 195
`bitfile_name` (pynq.pl.PLMeta attribute), 196
`bits_per_pixel` (pynq.lib.video.PixelFormat attribute), 134
`bits_per_pixel` (pynq.lib.video.PixelPacker attribute), 134
`bits_per_pixel` (pynq.lib.video.VideoMode attribute), 135
`Bitstream` (class in pynq.pl), 195
`bitstream` (pynq.overlay.Overlay attribute), 191
`BooleanGenerator` (class in pynq.lib.logictools.boolean_generator), 177
`buf` (pynq.lib.dma.LegacyDMA attribute), 121
`buf_manager` (pynq.lib.arduino.arduino_lcd18.Arduino_LCD18 attribute), 149
`buffer` (pynq.lib.audio.Audio attribute), 116
`bufLength` (pynq.lib.dma.LegacyDMA attribute), 121
`bufmap` (pynq.xlnk.Xlnk attribute), 198
`Button` (class in pynq.lib.button), 120
`bValue` (pynq.lib.arduino.arduino_grove_tmp.Grove_TMP attribute), 147

bValue (pynq.lib.pmod.pmod_grove_tmp.Grove_TMP attribute), 176
 bypass_start() (pynq.lib.audio.Audio method), 116
 bypass_stop() (pynq.lib.audio.Audio method), 117
 bytes_per_Pixel (pynq.lib.video.VideoMode attribute), 135

C

cable (pynq.lib.pmod.pmod_cable.Pmod_Cable attribute), 155
 check_duplicate() (in module pynq.lib.logictools.fsm_generator), 181
 check_moore() (in module pynq.lib.logictools.fsm_generator), 182
 check_num_bits() (in module pynq.lib.logictools.fsm_generator), 182
 check_pin_conflict() (in module pynq.lib.logictools.fsm_generator), 182
 check_pins() (in module pynq.lib.logictools.fsm_generator), 182
 checkhierarchy() (pynq.lib.audio.Audio static method), 117
 checkhierarchy() (pynq.lib.pynqmicroblaze.MicroblazeHierarchy static method), 125
 checkhierarchy() (pynq.lib.video.HDMIIn static method), 131
 checkhierarchy() (pynq.lib.video.HDMIInFrontend static method), 132
 checkhierarchy() (pynq.lib.video.HDMIOut static method), 133
 checkhierarchy() (pynq.lib.video.HDMIOutFrontend static method), 133
 checkhierarchy() (pynq.lib.video.HDMIWrapper static method), 134
 checkhierarchy() (pynq.overlay.DefaultHierarchy static method), 190
 clear() (pynq.lib.arduino.arduino_grove_oled.Grove_OLED method), 145
 clear() (pynq.lib.arduino.arduino_lcd18.Arduino_LCD18 method), 149
 clear() (pynq.lib.pmod.pmod_grove_oled.Grove_OLED method), 174
 clear() (pynq.lib.pmod.pmod_oled.Pmod_OLED method), 160
 clear() (pynq.lib.pynqmicroblaze.MBInterruptEvent method), 125
 clear_dict() (pynq.pl.PLMeta method), 196
 clear_wave() (pynq.lib.logictools.boolean_generator.BooleanGenerator method), 177
 clear_wave() (pynq.lib.logictools.fsm_generator.FSMGenerator method), 180
 clear_wave() (pynq.lib.logictools.pattern_generator.PatternGenerator method), 184
 client_request() (pynq.pl.PLMeta method), 196

clk_period_ns (pynq.lib.pmod.pmod_timer.Pmod_Timer attribute), 163
 Clocks (class in pynq.ps), 193
 ClocksMeta (class in pynq.ps), 193
 close() (pynq.lib.video.HDMIIn method), 132
 close() (pynq.lib.video.HDMIOut method), 133
 close() (pynq.xlnk.ContiguousArray method), 198
 cma_alloc() (pynq.xlnk.Xlnk method), 199
 cma_array() (pynq.xlnk.Xlnk method), 199
 cma_cast() (pynq.xlnk.Xlnk static method), 200
 cma_free() (pynq.xlnk.Xlnk method), 200
 cma_get_buffer() (pynq.xlnk.Xlnk method), 200
 cma_get_phy_addr() (pynq.xlnk.Xlnk method), 200
 cma_memcpy() (pynq.xlnk.Xlnk static method), 200
 cma_stats() (pynq.xlnk.Xlnk method), 201
 color_convert (pynq.lib.video.HDMIIn attribute), 131
 color_convert (pynq.lib.video.HDMIOut attribute), 133
 ColorConverter (class in pynq.lib.video), 131
 colorspace (pynq.lib.video.ColorConverter attribute), 131
 colorspace (pynq.lib.video.HDMIIn attribute), 132
 colorspace (pynq.lib.video.HDMIOut attribute), 133
 Configuration (pynq.lib.dma.LegacyDMA attribute), 121
 configure() (pynq.lib.dma.LegacyDMA method), 122
 configure() (pynq.lib.video.HDMIIn method), 132
 configure() (pynq.lib.video.HDMIOut method), 133
 connect() (pynq.lib.logictools.boolean_generator.BooleanGenerator method), 178
 connect() (pynq.lib.logictools.fsm_generator.FSMGenerator method), 180
 connect() (pynq.lib.logictools.pattern_generator.PatternGenerator method), 185
 connect() (pynq.lib.usb_wifi.Usb_Wifi method), 128
 ContiguousArray (class in pynq.xlnk), 198
 cpu_mhz (pynq.ps.Clocks attribute), 193
 cpu_mhz (pynq.ps.ClocksMeta attribute), 193
 cr_addr (pynq.lib.pmod.pmod_iic.Pmod_IIC attribute), 157
 create_buf() (pynq.lib.dma.LegacyDMA method), 122

D

debug (pynq.mmio.MMIO attribute), 189
 decode() (pynq.lib.logictools.trace_analyzer.TraceAnalyzer method), 187
 DefaultConfig (pynq.lib.dma.LegacyDMA attribute), 122
 DefaultHierarchy (class in pynq.overlay), 190
 DefaultIP (class in pynq.overlay), 190
 desiredframe (pynq.lib.video.AxiVDMA.MM2SChannel attribute), 129
 desiredframe (pynq.lib.video.AxiVDMA.S2MMChannel attribute), 130
 DeviceId (pynq.lib.dma.LegacyDMA attribute), 122
 direction (pynq.gpio.GPIO attribute), 114, 115
 direction (pynq.lib.arduino.arduino_io.Arduino_IO attribute), 148

- direction (pynq.lib.dma.LegacyDMA attribute), 121
- direction (pynq.lib.pmod.pmod_cable.Pmod_Cable attribute), 155
- direction (pynq.lib.pmod.pmod_grove_pir.Grove_PIR attribute), 175
- direction (pynq.lib.pmod.pmod_io.Pmod_IO attribute), 158
- disconnect() (pynq.lib.logictools.boolean_generator.BooleanGenerator method), 178
- disconnect() (pynq.lib.logictools.fsm_generator.FSMGenerator method), 180
- disconnect() (pynq.lib.logictools.pattern_generator.PatternGenerator method), 185
- display() (pynq.lib.arduino.arduino_lcd18.Arduino_LCD18 method), 149
- display_async() (pynq.lib.arduino.arduino_lcd18.Arduino_LCD18 method), 150
- DMA (class in pynq.lib.dma), 121
- DMA_BIDIRECTIONAL (pynq.lib.dma.LegacyDMA attribute), 122
- DMA_FROM_DEV (pynq.lib.dma.LegacyDMA attribute), 122
- DMA_TO_DEV (pynq.lib.dma.LegacyDMA attribute), 122
- DMA_TRANSFER_LIMIT_BYTES (pynq.lib.dma.LegacyDMA attribute), 122
- DMAEngine (pynq.lib.dma.LegacyDMA attribute), 121
- DMAInstance (pynq.lib.dma.LegacyDMA attribute), 121
- DocumentHierarchy() (in module pynq.overlay), 190
- DocumentOverlay() (in module pynq.overlay), 190
- download() (pynq.overlay.Overlay method), 191
- download() (pynq.pl.Bitstream method), 195
- draw_filled_rectangle() (pynq.lib.arduino.arduino_lcd18.Arduino_LCD18 method), 150
- draw_line() (pynq.lib.arduino.arduino_lcd18.Arduino_LCD18 method), 151
- draw_line() (pynq.lib.pmod.pmod_oled.Pmod_OLED method), 160
- draw_rect() (pynq.lib.pmod.pmod_oled.Pmod_OLED method), 160
- drvr_addr (pynq.lib.pmod.pmod_iic.Pmod_IIC attribute), 158
- dst_samples (pynq.lib.logictools.pattern_generator.PatternGenerator attribute), 184
- dtr_addr (pynq.lib.pmod.pmod_iic.Pmod_IIC attribute), 157
- ## E
- event_count() (pynq.lib.pmod.pmod_timer.Pmod_Timer method), 163
- event_detected() (pynq.lib.pmod.pmod_timer.Pmod_Timer method), 163
- expand_transition() (in module pynq.lib.logictools.fsm_generator), 182
- expressions (pynq.lib.logictools.boolean_generator.BooleanGenerator attribute), 177
- ## F
- fclk0_mhz (pynq.ps.Clocks attribute), 193
- fclk0_mhz (pynq.ps.ClocksMeta attribute), 193
- fclk1_mhz (pynq.ps.Clocks attribute), 193
- fclk1_mhz (pynq.ps.ClocksMeta attribute), 193
- fclk2_mhz (pynq.ps.Clocks attribute), 193
- fclk2_mhz (pynq.ps.ClocksMeta attribute), 193
- fclk3_mhz (pynq.ps.Clocks attribute), 193
- fclk3_mhz (pynq.ps.ClocksMeta attribute), 194
- ffi (pynq.lib.dma.LegacyDMA attribute), 122
- ffi (pynq.xlnk.Xlnk attribute), 198, 201
- framedelay (pynq.lib.video.AxiVDMA.MM2SChannel attribute), 129
- free_buf() (pynq.lib.dma.LegacyDMA method), 122
- freebuffer() (pynq.xlnk.ContiguousArray method), 198
- frequency_mhz (pynq.lib.logictools.boolean_generator.BooleanGenerator attribute), 177
- frequency_mhz (pynq.lib.logictools.fsm_generator.FSMGenerator attribute), 180
- frequency_mhz (pynq.lib.logictools.pattern_generator.PatternGenerator attribute), 184
- frontend (pynq.lib.video.HDMIIn attribute), 131
- frontend (pynq.lib.video.HDMIOut attribute), 132
- fsm_spec (pynq.lib.logictools.fsm_generator.FSMGenerator attribute), 179
- FSMGenerator (class in pynq.lib.logictools.fsm_generator), 179
- ## G
- gen_network_file() (pynq.lib.usb_wifi.Usb_Wifi method), 128
- generate() (pynq.lib.pmod.pmod_pwm.Pmod_PWM method), 161
- generate_pulse() (pynq.lib.pmod.pmod_timer.Pmod_Timer method), 164
- get_accl() (pynq.lib.arduino.arduino_grove_imu.Grove_IMU method), 141
- get_accl() (pynq.lib.pmod.pmod_grove_imu.Grove_IMU method), 170
- get_altitude() (pynq.lib.arduino.arduino_grove_imu.Grove_IMU method), 142
- get_altitude() (pynq.lib.pmod.pmod_grove_imu.Grove_IMU method), 170
- get_atm() (pynq.lib.arduino.arduino_grove_imu.Grove_IMU method), 142
- get_atm() (pynq.lib.pmod.pmod_grove_imu.Grove_IMU method), 170
- get_bram_addr_offsets() (in module pynq.lib.logictools.fsm_generator), 183
- get_buf() (pynq.lib.dma.LegacyDMA method), 123

[get_compass\(\) \(pynq.lib.arduino.arduino_grove_imu.Grove_IMU method\), 164](#)
[get_compass\(\) \(pynq.lib.pmod.pmod_grove_imu.Grove_IMU method\), 142](#)
[get_compass\(\) \(pynq.lib.pmod.pmod_grove_imu.Grove_IMU method\), 170](#)
[get_gpio_base\(\) \(pynq.gpio.GPIO static method\), 115](#)
[get_gpio_pin\(\) \(pynq.gpio.GPIO static method\), 115](#)
[get_gyro\(\) \(pynq.lib.arduino.arduino_grove_imu.Grove_IMU method\), 142](#)
[get_gyro\(\) \(pynq.lib.pmod.pmod_grove_imu.Grove_IMU method\), 171](#)
[get_heading\(\) \(pynq.lib.arduino.arduino_grove_imu.Grove_IMU method\), 142](#)
[get_heading\(\) \(pynq.lib.pmod.pmod_grove_imu.Grove_IMU method\), 171](#)
[get_log\(\) \(pynq.lib.arduino.arduino_analog.Arduino_Analog method\), 135](#)
[get_log\(\) \(pynq.lib.arduino.arduino_grove_adc.Grove_ADC method\), 137](#)
[get_log\(\) \(pynq.lib.arduino.arduino_grove_finger_hr.Grove_FingerHR method\), 140](#)
[get_log\(\) \(pynq.lib.arduino.arduino_grove_light.Grove_Light method\), 144](#)
[get_log\(\) \(pynq.lib.arduino.arduino_grove_th02.Grove_TH02 method\), 147](#)
[get_log\(\) \(pynq.lib.arduino.arduino_grove_tmp.Grove_TMP method\), 147](#)
[get_log\(\) \(pynq.lib.pmod.pmod_adc.Pmod_ADC method\), 152](#)
[get_log\(\) \(pynq.lib.pmod.pmod_als.Pmod_ALS method\), 154](#)
[get_log\(\) \(pynq.lib.pmod.pmod_grove_adc.Grove_ADC method\), 165](#)
[get_log\(\) \(pynq.lib.pmod.pmod_grove_finger_hr.Grove_FingerHR method\), 169](#)
[get_log\(\) \(pynq.lib.pmod.pmod_grove_light.Grove_Light method\), 173](#)
[get_log\(\) \(pynq.lib.pmod.pmod_grove_th02.Grove_TH02 method\), 175](#)
[get_log\(\) \(pynq.lib.pmod.pmod_grove_tmp.Grove_TMP method\), 176](#)
[get_log\(\) \(pynq.lib.pmod.pmod_tc1.Pmod_TC1 method\), 162](#)
[get_log\(\) \(pynq.lib.pmod.pmod_tmp2.Pmod_TMP2 method\), 164](#)
[get_log_raw\(\) \(pynq.lib.arduino.arduino_analog.Arduino_Analog method\), 136](#)
[get_log_raw\(\) \(pynq.lib.arduino.arduino_grove_adc.Grove_ADC method\), 137](#)
[get_log_raw\(\) \(pynq.lib.pmod.pmod_adc.Pmod_ADC method\), 152](#)
[get_log_raw\(\) \(pynq.lib.pmod.pmod_grove_adc.Grove_ADC method\), 165](#)
[get_ndarray\(\) \(pynq.lib.dma.LegacyDMA method\), 123](#)
[get_period_ns\(\) \(pynq.lib.pmod.pmod_timer.Pmod_Timer method\), 142](#)
[get_pressure\(\) \(pynq.lib.arduino.arduino_grove_imu.Grove_IMU method\), 171](#)
[get_pressure\(\) \(pynq.lib.pmod.pmod_grove_imu.Grove_IMU method\), 171](#)
[get_temperature\(\) \(pynq.lib.arduino.arduino_grove_imu.Grove_IMU method\), 142](#)
[get_temperature\(\) \(pynq.lib.pmod.pmod_grove_imu.Grove_IMU method\), 171](#)
[get_tilt_heading\(\) \(pynq.lib.arduino.arduino_grove_imu.Grove_IMU method\), 142](#)
[get_tilt_heading\(\) \(pynq.lib.pmod.pmod_grove_imu.Grove_IMU method\), 171](#)
[get_tri_state_pins\(\) \(in module pynq.lib.logictools.trace_analyzer\), 188](#)
[GPIO \(class in pynq.gpio\), 114](#)
[gpio \(pynq.lib.audio.Audio attribute\), 116](#)
[gpio_dict \(pynq.overlay.Overlay attribute\), 191](#)
[gpio_dict \(pynq.pl.PL attribute\), 195](#)
[gpio_dict \(pynq.pl.PLMeta attribute\), 196](#)
[grove_pin \(pynq.lib.arduino.arduino_analog.Arduino_Analog attribute\), 135](#)
[Grove_ADC \(class in pynq.lib.arduino.arduino_grove_adc\), 137](#)
[Grove_ADC \(class in pynq.lib.pmod.pmod_grove_adc\), 165](#)
[Grove_Buzzer \(class in pynq.lib.arduino.arduino_grove_buzzer\), 138](#)
[Grove_Buzzer \(class in pynq.lib.pmod.pmod_grove_buzzer\), 167](#)
[Grove_Color \(class in pynq.lib.arduino.arduino_grove_color\), 139](#)
[Grove_Color \(class in pynq.lib.pmod.pmod_grove_color\), 167](#)
[Grove_DLight \(class in pynq.lib.pmod.pmod_grove_dlight\), 167](#)
[Grove_EarHR \(class in pynq.lib.arduino.arduino_grove_ear_hr\), 139](#)
[Grove_EarHR \(class in pynq.lib.pmod.pmod_grove_ear_hr\), 168](#)
[Grove_FingerHR \(class in pynq.lib.arduino.arduino_grove_finger_hr\), 140](#)
[Grove_FingerHR \(class in pynq.lib.pmod.pmod_grove_finger_hr\), 168](#)
[Grove_HapticMotor \(class in pynq.lib.arduino.arduino_grove_haptic_motor\), 140](#)
[Grove_HapticMotor \(class in pynq.lib.pmod.pmod_grove_haptic_motor\), 169](#)
[Grove_IMU \(class in pynq.lib.arduino.arduino_grove_imu\), 164](#)

- 141
 Grove_IMU (class in pynq.lib.pmod.pmod_grove_imu), 170
 Grove_LEDbar (class in pynq.lib.arduino.arduino_grove_ledbar), 143
 Grove_LEDbar (class in pynq.lib.pmod.pmod_grove_ledbar), 171
 Grove_Light (class in pynq.lib.arduino.arduino_grove_light), 144
 Grove_Light (class in pynq.lib.pmod.pmod_grove_light), 173
 Grove_OLED (class in pynq.lib.arduino.arduino_grove_oled), 145
 Grove_OLED (class in pynq.lib.pmod.pmod_grove_oled), 173
 Grove_PIR (class in pynq.lib.arduino.arduino_grove_pir), 146
 Grove_PIR (class in pynq.lib.pmod.pmod_grove_pir), 175
 Grove_TH02 (class in pynq.lib.arduino.arduino_grove_th02), 146
 Grove_TH02 (class in pynq.lib.pmod.pmod_grove_th02), 175
 Grove_TMP (class in pynq.lib.arduino.arduino_grove_tmp), 147
 Grove_TMP (class in pynq.lib.pmod.pmod_grove_tmp), 176
- ## H
- handle_timeout() (pynq.lib.dma.timeout method), 124
 hdmi_in (pynq.lib.video.HDMIWrapper attribute), 134
 hdmi_out (pynq.lib.video.HDMIWrapper attribute), 134
 HDMIIn (class in pynq.lib.video), 131
 HDMIInFrontend (class in pynq.lib.video), 132
 HDMIOut (class in pynq.lib.video), 132
 HDMIOutFrontend (class in pynq.lib.video), 133
 HDMIWrapper (class in pynq.lib.video), 134
 height (pynq.lib.video.VideoMode attribute), 135
 hierarchy_dict (pynq.pl.PL attribute), 196
 hierarchy_dict (pynq.pl.PLMeta attribute), 196
- ## I
- iic_addr (pynq.lib.pmod.pmod_iic.Pmod_IIC attribute), 157
 in_color (pynq.lib.video.PixelFormat attribute), 134
 index (pynq.gpio.GPIO attribute), 114, 115
 index (pynq.lib.arduino.arduino_io.Arduino_IO attribute), 148
 index (pynq.lib.button.Button attribute), 120
 index (pynq.lib.led.LED attribute), 124
 index (pynq.lib.pmod.pmod_cable.Pmod_Cable attribute), 155
 index (pynq.lib.pmod.pmod_grove_pir.Grove_PIR attribute), 175
 index (pynq.lib.pmod.pmod_io.Pmod_IO attribute), 158
 index (pynq.lib.pmod.pmod_led8.Pmod_LED8 attribute), 159
 index (pynq.lib.rgbled.RGBLED attribute), 126
 index (pynq.lib.switch.Switch attribute), 127
 info() (pynq.lib.audio.Audio static method), 117
 input_pins (pynq.lib.logictools.boolean_generator.BooleanGenerator attribute), 177
 input_pins (pynq.lib.logictools.fsm_generator.FSMGenerator attribute), 180
 Interrupt (class in pynq.interrupt), 114
 interrupt (pynq.lib.pynqmicroblaze.PynqMicroblaze attribute), 125
 interrupt_controllers (pynq.overlay.Overlay attribute), 191
 interrupt_controllers (pynq.pl.PL attribute), 195
 interrupt_controllers (pynq.pl.PLMeta attribute), 197
 interrupt_pins (pynq.overlay.Overlay attribute), 191
 interrupt_pins (pynq.pl.PL attribute), 196
 interrupt_pins (pynq.pl.PLMeta attribute), 197
 intf_spec (pynq.lib.logictools.boolean_generator.BooleanGenerator attribute), 177
 intf_spec (pynq.lib.logictools.fsm_generator.FSMGenerator attribute), 179
 intf_spec (pynq.lib.logictools.pattern_generator.PatternGenerator attribute), 184
 iop_switch_config (pynq.lib.pmod.pmod_led8.Pmod_LED8 attribute), 159
 ip_dict (pynq.overlay.Overlay attribute), 191
 ip_dict (pynq.pl.PL attribute), 195
 ip_dict (pynq.pl.PLMeta attribute), 197
 ip_name (pynq.lib.pynqmicroblaze.PynqMicroblaze attribute), 125
 irqframecount (pynq.lib.video.AxiVDMA.S2MMChannel attribute), 130
 is_loaded() (pynq.overlay.Overlay method), 192
 is_playing() (pynq.lib.arduino.arduino_grove_haptic_motor.Grove_HapticMotor method), 141
 is_playing() (pynq.lib.pmod.pmod_grove_haptic_motor.Grove_HapticMotor method), 169
- ## L
- LED (class in pynq.lib.led), 124
 LegacyDMA (class in pynq.lib.dma), 121
 length (pynq.mmio.MMIO attribute), 189
 LIB_SEARCH_PATH (pynq.lib.dma.LegacyDMA attribute), 122
 load() (pynq.lib.audio.Audio method), 117
 load_ip_data() (pynq.overlay.Overlay method), 192
 load_ip_data() (pynq.pl.PLMeta method), 197
 log_interval_ms (pynq.lib.arduino.arduino_analog.Arduino_Analog attribute), 135

log_interval_ms (pynq.lib.arduino.arduino_grove_adc.Grove_ADC attribute), 137

log_interval_ms (pynq.lib.arduino.arduino_grove_finger_hr.Grove_FingerHR attribute), 140

log_interval_ms (pynq.lib.arduino.arduino_grove_light.Grove_Light attribute), 144

log_interval_ms (pynq.lib.arduino.arduino_grove_th02.Grove_TH02 attribute), 147

log_interval_ms (pynq.lib.arduino.arduino_grove_tmp.Grove_TMP attribute), 147

log_interval_ms (pynq.lib.pmod.pmod_als.Pmod_ALS attribute), 154

log_interval_ms (pynq.lib.pmod.pmod_grove_adc.Grove_ADC attribute), 165

log_interval_ms (pynq.lib.pmod.pmod_grove_finger_hr.Grove_FingerHR attribute), 169

log_interval_ms (pynq.lib.pmod.pmod_grove_light.Grove_Light attribute), 173

log_interval_ms (pynq.lib.pmod.pmod_grove_th02.Grove_TH02 attribute), 175

log_interval_ms (pynq.lib.pmod.pmod_grove_tmp.Grove_TMP attribute), 176

log_interval_ms (pynq.lib.pmod.pmod_tc1.Pmod_TC1 attribute), 161

log_interval_ms (pynq.lib.pmod.pmod_tmp2.Pmod_TMP2 attribute), 164

log_running (pynq.lib.arduino.arduino_analog.Arduino_Analog attribute), 135

log_running (pynq.lib.arduino.arduino_grove_adc.Grove_ADC attribute), 137

log_running (pynq.lib.arduino.arduino_grove_finger_hr.Grove_FingerHR attribute), 140

log_running (pynq.lib.arduino.arduino_grove_light.Grove_Light attribute), 144

log_running (pynq.lib.arduino.arduino_grove_th02.Grove_TH02 attribute), 146

log_running (pynq.lib.arduino.arduino_grove_tmp.Grove_TMP attribute), 147

log_running (pynq.lib.pmod.pmod_adc.Pmod_ADC attribute), 152

log_running (pynq.lib.pmod.pmod_grove_adc.Grove_ADC attribute), 165

log_running (pynq.lib.pmod.pmod_grove_finger_hr.Grove_FingerHR attribute), 168

log_running (pynq.lib.pmod.pmod_grove_light.Grove_Light attribute), 173

log_running (pynq.lib.pmod.pmod_grove_th02.Grove_TH02 attribute), 175

log_running (pynq.lib.pmod.pmod_grove_tmp.Grove_TMP attribute), 176

logictools_controller (pynq.lib.logictools.boolean_generator.BooleanGenerator attribute), 177

logictools_controller (pynq.lib.logictools.fsm_generator.FSMGenerator attribute), 179

max_wave_length (pynq.lib.logictools.pattern_generator.PatternGenerator attribute), 185

mb_program (pynq.lib.pynqmicroblaze.PynqMicroblaze attribute), 125

MBInterruptEvent (class in pynq.lib.pynqmicroblaze), 125

mtype (pynq.lib.pynqmicroblaze.MicroblazeHierarchy attribute), 125

mmio (pynq.lib.pynqmmio.MMIO attribute), 189

memapi (pynq.lib.dma.LegacyDMA attribute), 123

merge_to_length() (in module pynq.lib.logictools.fsm_generator), 183

microblaze (pynq.lib.arduino.arduino_analog.Arduino_Analog attribute), 135

microblaze (pynq.lib.arduino.arduino_grove_adc.Grove_ADC attribute), 137

microblaze (pynq.lib.arduino.arduino_grove_buzzer.Grove_Buzzer attribute), 138

microblaze (pynq.lib.arduino.arduino_grove_color.Grove_Color attribute), 139

microblaze (pynq.lib.arduino.arduino_grove_ear_hr.Grove_EarHR attribute), 139

microblaze (pynq.lib.arduino.arduino_grove_finger_hr.Grove_FingerHR attribute), 140

microblaze (pynq.lib.arduino.arduino_grove_haptic_motor.Grove_HapticMotor attribute), 140

microblaze (pynq.lib.arduino.arduino_grove_imu.Grove_IMU attribute), 141

microblaze (pynq.lib.arduino.arduino_grove_ledbar.Grove_LEDBar attribute), 143

microblaze (pynq.lib.arduino.arduino_grove_light.Grove_Light attribute), 144

microblaze (pynq.lib.arduino.arduino_grove_oled.Grove_OLED attribute), 145

microblaze (pynq.lib.arduino.arduino_grove_pir.Grove_PIR attribute), 146

microblaze (pynq.lib.arduino.arduino_grove_th02.Grove_TH02 attribute), 146

microblaze (pynq.lib.arduino.arduino_grove_tmp.Grove_TMP attribute), 147

microblaze (pynq.lib.arduino.arduino_io.Arduino_IO attribute), 148

microblaze (pynq.lib.arduino.arduino_lcd18.Arduino_LCD18 attribute), 149

microblaze (pynq.lib.pmod.pmod_adc.Pmod_ADC attribute), 152

microblaze (pynq.lib.pmod.pmod_als.Pmod_ALS attribute), 154

- ul style="list-style-type: none; padding-left: 0;">
- microblaze (pynq.lib.pmod.pmod_cable.Pmod_Cable attribute), 155
- microblaze (pynq.lib.pmod.pmod_dac.Pmod_DAC attribute), 156
- microblaze (pynq.lib.pmod.pmod_dpot.Pmod_DPOT attribute), 157
- microblaze (pynq.lib.pmod.pmod_grove_adc.Grove_ADC attribute), 165
- microblaze (pynq.lib.pmod.pmod_grove_buzzer.Grove_Buzzer attribute), 167
- microblaze (pynq.lib.pmod.pmod_grove_color.Grove_Color attribute), 167
- microblaze (pynq.lib.pmod.pmod_grove_dlight.Grove_DLight attribute), 168
- microblaze (pynq.lib.pmod.pmod_grove_ear_hr.Grove_EarHR attribute), 168
- microblaze (pynq.lib.pmod.pmod_grove_finger_hr.Grove_FingerHR attribute), 168
- microblaze (pynq.lib.pmod.pmod_grove_haptic_motor.Grove_HapticMotor attribute), 169
- microblaze (pynq.lib.pmod.pmod_grove_imu.Grove_IMU attribute), 170
- microblaze (pynq.lib.pmod.pmod_grove_ledbar.Grove_LEDbar attribute), 171
- microblaze (pynq.lib.pmod.pmod_grove_light.Grove_Light attribute), 173
- microblaze (pynq.lib.pmod.pmod_grove_oled.Grove_OLED attribute), 173
- microblaze (pynq.lib.pmod.pmod_grove_pir.Grove_PIR attribute), 175
- microblaze (pynq.lib.pmod.pmod_grove_th02.Grove_TH02 attribute), 175
- microblaze (pynq.lib.pmod.pmod_grove_tmp.Grove_TMP attribute), 176
- microblaze (pynq.lib.pmod.pmod_iic.Pmod_IIC attribute), 157
- microblaze (pynq.lib.pmod.pmod_io.Pmod_IO attribute), 158
- microblaze (pynq.lib.pmod.pmod_led8.Pmod_LED8 attribute), 159
- microblaze (pynq.lib.pmod.pmod_oled.Pmod_OLED attribute), 160
- microblaze (pynq.lib.pmod.pmod_pwm.Pmod_PWM attribute), 161
- microblaze (pynq.lib.pmod.pmod_tc1.Pmod_TC1 attribute), 161
- microblaze (pynq.lib.pmod.pmod_timer.Pmod_Timer attribute), 163
- microblaze (pynq.lib.pmod.pmod_tmp2.Pmod_TMP2 attribute), 164
- MicroblazeHierarchy (class in pynq.lib.pynqmicroblaze), 125
- mmap_file (pynq.mmio.MMIO attribute), 189
- MMIO (class in pynq.mmio), 189
- mmio (pynq.lib.audio.Audio attribute), 116
- mmio (pynq.lib.pynqmicroblaze.PynqMicroblaze attribute), 125
- mmio (pynq.overlay.DefaultIP attribute), 190
- mode (pynq.lib.video.AxiVDMA.MM2SChannel attribute), 129
- mode (pynq.lib.video.AxiVDMA.S2MMChannel attribute), 130
- mode (pynq.lib.video.HDMIIn attribute), 132
- mode (pynq.lib.video.HDMIInFrontend attribute), 132
- mode (pynq.lib.video.HDMIOut attribute), 133
- mode (pynq.lib.video.HDMIOutFrontend attribute), 133
- ## N
- newframe() (pynq.lib.video.AxiVDMA.MM2SChannel method), 129
 - newframe() (pynq.lib.video.HDMIOut method), 133
 - num_analyzer_samples (pynq.lib.logictools.boolean_generator.BooleanGenerator attribute), 177
 - num_analyzer_samples (pynq.lib.logictools.fsm_generator.FSMGenerator attribute), 180
 - num_analyzer_samples (pynq.lib.logictools.pattern_generator.PatternGenerator attribute), 184
 - num_channels (pynq.lib.arduino.arduino_analog.Arduino_Analog attribute), 135
 - num_input_bits (pynq.lib.logictools.fsm_generator.FSMGenerator attribute), 179
 - num_output_bits (pynq.lib.logictools.fsm_generator.FSMGenerator attribute), 179
 - num_outputs (pynq.lib.logictools.fsm_generator.FSMGenerator attribute), 179
 - num_state_bits (pynq.lib.logictools.fsm_generator.FSMGenerator attribute), 180
 - num_states (pynq.lib.logictools.fsm_generator.FSMGenerator attribute), 180
- ## O
- off() (pynq.lib.axigpio.AxiGPIO.Output method), 119
 - off() (pynq.lib.led.LED method), 124
 - off() (pynq.lib.pmod.pmod_led8.Pmod_LED8 method), 159
 - off() (pynq.lib.rgbled.RGBLED method), 127
 - on() (pynq.lib.axigpio.AxiGPIO.Output method), 120
 - on() (pynq.lib.led.LED method), 124
 - on() (pynq.lib.pmod.pmod_led8.Pmod_LED8 method), 159
 - on() (pynq.lib.rgbled.RGBLED method), 127
 - out_color (pynq.lib.video.PixelFormat attribute), 134
 - output_pins (pynq.lib.logictools.boolean_generator.BooleanGenerator attribute), 177
 - output_pins (pynq.lib.logictools.fsm_generator.FSMGenerator attribute), 180
 - Overlay (class in pynq.overlay), 191

P

- parked (pynq.lib.video.AxiVDMA.MM2SChannel attribute), 129
- parked (pynq.lib.video.AxiVDMA.S2MMChannel attribute), 130
- path (pynq.gpio.GPIO attribute), 115
- PatternGenerator (class in pynq.lib.logictools.pattern_generator), 183
- phyAddress (pynq.lib.dma.LegacyDMA attribute), 121
- physical_address (pynq.xlnk.ContiguousArray attribute), 198
- pixel_pack (pynq.lib.video.HDMIIn attribute), 131
- pixel_unpack (pynq.lib.video.HDMIOut attribute), 133
- PixelFormat (class in pynq.lib.video), 134
- PixelPacker (class in pynq.lib.video), 134
- PL (class in pynq.pl), 195
- play() (pynq.lib.arduino.arduino_grove_haptic_motor.Grove_HapticMotor method), 141
- play() (pynq.lib.audio.Audio method), 117
- play() (pynq.lib.pmod.pmod_grove_haptic_motor.Grove_HapticMotor method), 169
- play_melody() (pynq.lib.arduino.arduino_grove_buzzer.Grove_Buzzer method), 138
- play_melody() (pynq.lib.pmod.pmod_grove_buzzer.Grove_Buzzer method), 167
- play_sequence() (pynq.lib.arduino.arduino_grove_haptic_motor.Grove_HapticMotor method), 141
- play_sequence() (pynq.lib.pmod.pmod_grove_haptic_motor.Grove_HapticMotor method), 170
- play_tone() (pynq.lib.arduino.arduino_grove_buzzer.Grove_Buzzer method), 139
- play_tone() (pynq.lib.pmod.pmod_grove_buzzer.Grove_Buzzer method), 167
- PLMeta (class in pynq.pl), 196
- Pmod_ADC (class in pynq.lib.pmod.pmod_adc), 152
- Pmod_ALS (class in pynq.lib.pmod.pmod_als), 154
- Pmod_Cable (class in pynq.lib.pmod.pmod_cable), 155
- Pmod_DAC (class in pynq.lib.pmod.pmod_dac), 156
- Pmod_DPOT (class in pynq.lib.pmod.pmod_dpot), 157
- Pmod_IIC (class in pynq.lib.pmod.pmod_iic), 157
- Pmod_IO (class in pynq.lib.pmod.pmod_io), 158
- Pmod_LED8 (class in pynq.lib.pmod.pmod_led8), 159
- Pmod_OLED (class in pynq.lib.pmod.pmod_oled), 160
- Pmod_PWM (class in pynq.lib.pmod.pmod_pwm), 161
- Pmod_TC1 (class in pynq.lib.pmod.pmod_tc1), 161
- Pmod_Timer (class in pynq.lib.pmod.pmod_timer), 163
- Pmod_TMP2 (class in pynq.lib.pmod.pmod_tmp2), 164
- pointer (pynq.xlnk.ContiguousArray attribute), 198
- print_string() (pynq.lib.arduino.arduino_lcd18.Arduino_LCD18 method), 151
- program() (pynq.lib.pynqmicroblaze.PynqMicroblaze method), 125
- pynq.gpio (module), 114
- pynq.interrupt (module), 114
- pynq.lib.arduino.arduino_analog (module), 135
- pynq.lib.arduino.arduino_grove_adc (module), 137
- pynq.lib.arduino.arduino_grove_buzzer (module), 138
- pynq.lib.arduino.arduino_grove_color (module), 139
- pynq.lib.arduino.arduino_grove_ear_hr (module), 139
- pynq.lib.arduino.arduino_grove_finger_hr (module), 140
- pynq.lib.arduino.arduino_grove_haptic_motor (module), 140
- pynq.lib.arduino.arduino_grove_imu (module), 141
- pynq.lib.arduino.arduino_grove_ledbar (module), 143
- pynq.lib.arduino.arduino_grove_light (module), 144
- pynq.lib.arduino.arduino_grove_oled (module), 145
- pynq.lib.arduino.arduino_grove_pir (module), 146
- pynq.lib.arduino.arduino_grove_th02 (module), 146
- pynq.lib.arduino.arduino_grove_tmp (module), 147
- pynq.lib.arduino.arduino_io (module), 148
- pynq.lib.arduino.arduino_lcd18 (module), 149
- pynq.lib.audio (module), 116
- pynq.lib.axigpio (module), 118
- pynq.lib.button (module), 120
- pynq.lib.dma (module), 121
- pynq.lib.led (module), 124
- pynq.lib.logictools.boolean_generator (module), 177
- pynq.lib.logictools.fsm_generator (module), 179
- pynq.lib.logictools.pattern_generator (module), 183
- pynq.lib.logictools.trace_analyzer (module), 186
- pynq.lib.pmod.pmod_adc (module), 152
- pynq.lib.pmod.pmod_als (module), 154
- pynq.lib.pmod.pmod_cable (module), 155
- pynq.lib.pmod.pmod_dac (module), 156
- pynq.lib.pmod.pmod_dpot (module), 157
- pynq.lib.pmod.pmod_grove_adc (module), 165
- pynq.lib.pmod.pmod_grove_buzzer (module), 167
- pynq.lib.pmod.pmod_grove_color (module), 167
- pynq.lib.pmod.pmod_grove_dlight (module), 167
- pynq.lib.pmod.pmod_grove_ear_hr (module), 168
- pynq.lib.pmod.pmod_grove_finger_hr (module), 168
- pynq.lib.pmod.pmod_grove_haptic_motor (module), 169
- pynq.lib.pmod.pmod_grove_imu (module), 170
- pynq.lib.pmod.pmod_grove_ledbar (module), 171
- pynq.lib.pmod.pmod_grove_light (module), 173
- pynq.lib.pmod.pmod_grove_oled (module), 173
- pynq.lib.pmod.pmod_grove_pir (module), 175
- pynq.lib.pmod.pmod_grove_th02 (module), 175
- pynq.lib.pmod.pmod_grove_tmp (module), 176
- pynq.lib.pmod.pmod_iic (module), 157
- pynq.lib.pmod.pmod_io (module), 158
- pynq.lib.pmod.pmod_led8 (module), 159
- pynq.lib.pmod.pmod_oled (module), 160
- pynq.lib.pmod.pmod_pwm (module), 161
- pynq.lib.pmod.pmod_tc1 (module), 161
- pynq.lib.pmod.pmod_timer (module), 163
- pynq.lib.pmod.pmod_tmp2 (module), 164
- pynq.lib.pynqmicroblaze (module), 125

pynq.lib.rgbled (module), 126
 pynq.lib.switch (module), 127
 pynq.lib.usb_wifi (module), 128
 pynq.lib.video (module), 129
 pynq.mmio (module), 189
 pynq.overlay (module), 190
 pynq.pl (module), 195
 pynq.ps (module), 193
 pynq.xlnk (module), 198
 PynqMicroblaze (class in pynq.lib.pynqmicroblaze), 125

R

read() (pynq.gpio.GPIO method), 115
 read() (pynq.lib.arduino.arduino_analog.Arduino_Analog method), 136
 read() (pynq.lib.arduino.arduino_grove_adc.Grove_ADC method), 137
 read() (pynq.lib.arduino.arduino_grove_color.Grove_Color method), 139
 read() (pynq.lib.arduino.arduino_grove_ear_hr.Grove_EarHR method), 139
 read() (pynq.lib.arduino.arduino_grove_finger_hr.Grove_FingerHR method), 140
 read() (pynq.lib.arduino.arduino_grove_ledbar.Grove_LEDBar method), 143
 read() (pynq.lib.arduino.arduino_grove_light.Grove_Light method), 144
 read() (pynq.lib.arduino.arduino_grove_pir.Grove_PIR method), 146
 read() (pynq.lib.arduino.arduino_grove_th02.Grove_TH02 method), 147
 read() (pynq.lib.arduino.arduino_grove_tmp.Grove_TMP method), 148
 read() (pynq.lib.arduino.arduino_io.Arduino_IO method), 148
 read() (pynq.lib.axigpio.AxiGPIO.Channel method), 118
 read() (pynq.lib.axigpio.AxiGPIO.InOut method), 119
 read() (pynq.lib.axigpio.AxiGPIO.Input method), 119
 read() (pynq.lib.axigpio.AxiGPIO.Output method), 120
 read() (pynq.lib.button.Button method), 120
 read() (pynq.lib.led.LED method), 124
 read() (pynq.lib.pmod.pmod_adc.Pmod_ADC method), 152
 read() (pynq.lib.pmod.pmod_als.Pmod_ALS method), 155
 read() (pynq.lib.pmod.pmod_cable.Pmod_Cable method), 156
 read() (pynq.lib.pmod.pmod_grove_adc.Grove_ADC method), 165
 read() (pynq.lib.pmod.pmod_grove_color.Grove_Color method), 167
 read() (pynq.lib.pmod.pmod_grove_ear_hr.Grove_EarHR method), 168
 read() (pynq.lib.pmod.pmod_grove_finger_hr.Grove_FingerHR method), 169
 read() (pynq.lib.pmod.pmod_grove_ledbar.Grove_LEDBar method), 171
 read() (pynq.lib.pmod.pmod_grove_light.Grove_Light method), 173
 read() (pynq.lib.pmod.pmod_grove_pir.Grove_PIR method), 175
 read() (pynq.lib.pmod.pmod_grove_th02.Grove_TH02 method), 175
 read() (pynq.lib.pmod.pmod_grove_tmp.Grove_TMP method), 176
 read() (pynq.lib.pmod.pmod_io.Pmod_IO method), 158
 read() (pynq.lib.pmod.pmod_led8.Pmod_LED8 method), 159
 read() (pynq.lib.pmod.pmod_tmp2.Pmod_TMP2 method), 164
 read() (pynq.lib.pynqmicroblaze.PynqMicroblaze method), 126
 read() (pynq.lib.rgbled.RGBLED method), 127
 read() (pynq.lib.switch.Switch method), 127
 read() (pynq.mmio.MMIO method), 189
 read() (pynq.overlay.DefaultIP method), 190
 read_alarm_flags() (pynq.lib.pmod.pmod_tc1.Pmod_TC1 method), 162
 read_joystick() (pynq.lib.arduino.arduino_lcd18.Arduino_LCD18 method), 152
 read_junction_temperature() (pynq.lib.pmod.pmod_tc1.Pmod_TC1 method), 162
 read_lux() (pynq.lib.pmod.pmod_grove_dlight.Grove_Dlight method), 168
 read_raw() (pynq.lib.arduino.arduino_analog.Arduino_Analog method), 136
 read_raw() (pynq.lib.arduino.arduino_grove_adc.Grove_ADC method), 137
 read_raw() (pynq.lib.arduino.arduino_grove_ear_hr.Grove_EarHR method), 139
 read_raw() (pynq.lib.pmod.pmod_adc.Pmod_ADC method), 153
 read_raw() (pynq.lib.pmod.pmod_grove_adc.Grove_ADC method), 165
 read_raw() (pynq.lib.pmod.pmod_grove_ear_hr.Grove_EarHR method), 168
 read_raw() (pynq.lib.pmod.pmod_tc1.Pmod_TC1 method), 162
 read_raw_light() (pynq.lib.pmod.pmod_grove_dlight.Grove_Dlight method), 168
 read_thermocouple_temperature() (pynq.lib.pmod.pmod_tc1.Pmod_TC1 method), 162
 readchannel (pynq.lib.video.AxiVDMA attribute), 129
 readframe() (pynq.lib.video.AxiVDMA.S2MMChannel method), 130

- ul style="list-style-type: none; padding-left: 0;">
- readframe() (pynq.lib.video.HDMIIn method), 132
- readframe_async() (pynq.lib.video.AxiVDMA.S2MMChannel method), 130
- readframe_async() (pynq.lib.video.HDMIIn method), 132
- receive() (pynq.lib.pmod.pmod_iic.Pmod_IIC method), 158
- record() (pynq.lib.audio.Audio method), 117
- recvchannel (pynq.lib.dma.DMA attribute), 121
- reg_to_alarms() (in module pynq.lib.pmod.pmod_tc1), 163
- reg_to_ref() (in module pynq.lib.pmod.pmod_tc1), 163
- reg_to_tc() (in module pynq.lib.pmod.pmod_tc1), 163
- Register (class in pynq.ps), 194
- RegisterHierarchy (class in pynq.overlay), 192
- RegisterIP (class in pynq.overlay), 192
- reload() (pynq.lib.video.AxiVDMA.MM2SChannel method), 129
- reload() (pynq.lib.video.AxiVDMA.S2MMChannel method), 130
- replace_wildcard() (in module pynq.lib.logictools.fsm_generator), 183
- resample (pynq.lib.video.PixelPacker attribute), 134
- reset() (pynq.lib.arduino.arduino_analog.Arduino_Analog method), 136
- reset() (pynq.lib.arduino.arduino_grove_adc.Grove_ADC method), 137
- reset() (pynq.lib.arduino.arduino_grove_imu.Grove_IMU method), 142
- reset() (pynq.lib.arduino.arduino_grove_ledbar.Grove_LEDbar method), 143
- reset() (pynq.lib.logictools.boolean_generator.BooleanGenerator method), 178
- reset() (pynq.lib.logictools.fsm_generator.FSMGenerator method), 180
- reset() (pynq.lib.logictools.pattern_generator.PatternGenerator method), 185
- reset() (pynq.lib.logictools.trace_analyzer.TraceAnalyzer method), 187
- reset() (pynq.lib.pmod.pmod_adc.Pmod_ADC method), 153
- reset() (pynq.lib.pmod.pmod_grove_adc.Grove_ADC method), 166
- reset() (pynq.lib.pmod.pmod_grove_imu.Grove_IMU method), 171
- reset() (pynq.lib.pmod.pmod_grove_ledbar.Grove_LEDbar method), 172
- reset() (pynq.lib.pynqmicroblaze.PynqMicroblaze method), 126
- reset() (pynq.lib.usb_wifi.Usb_Wifi method), 128
- reset() (pynq.lib.video.AxiVDMA.MM2SChannel method), 130
- reset() (pynq.lib.video.AxiVDMA.S2MMChannel method), 131
- reset() (pynq.overlay.Overlay method), 192
- reset() (pynq.pl.PLMeta method), 197
- reset_pin (pynq.lib.pynqmicroblaze.PynqMicroblaze attribute), 125
- rfd_addr (pynq.lib.pmod.pmod_iic.Pmod_IIC attribute), 158
- RGBLED (class in pynq.lib.rgbled), 126
- rst_name (pynq.lib.pynqmicroblaze.PynqMicroblaze attribute), 125
- run() (pynq.lib.logictools.boolean_generator.BooleanGenerator method), 178
- run() (pynq.lib.logictools.fsm_generator.FSMGenerator method), 180
- run() (pynq.lib.logictools.pattern_generator.PatternGenerator method), 185
- run() (pynq.lib.logictools.trace_analyzer.TraceAnalyzer method), 187
- run() (pynq.lib.pynqmicroblaze.PynqMicroblaze method), 126
- running (pynq.lib.video.AxiVDMA.MM2SChannel attribute), 130
- running (pynq.lib.video.AxiVDMA.S2MMChannel attribute), 131
- ## S
- sample_len (pynq.lib.audio.Audio attribute), 116
 - sample_rate (pynq.lib.audio.Audio attribute), 116
 - save() (pynq.lib.audio.Audio method), 117
 - scl_pin (pynq.lib.pmod.pmod_iic.Pmod_IIC attribute), 157
 - sda_pin (pynq.lib.pmod.pmod_iic.Pmod_IIC attribute), 157
 - send() (pynq.lib.pmod.pmod_iic.Pmod_IIC method), 158
 - sendchannel (pynq.lib.dma.DMA attribute), 121
 - server_update() (pynq.pl.PLMeta method), 197
 - set_cable() (pynq.lib.pmod.pmod_cable.Pmod_Cable method), 156
 - set_contrast() (pynq.lib.arduino.arduino_grove_oled.Grove_OLED method), 145
 - set_contrast() (pynq.lib.pmod.pmod_grove_oled.Grove_OLED method), 174
 - set_fclk() (pynq.ps.ClocksMeta method), 194
 - set_horizontal_mode() (pynq.lib.arduino.arduino_grove_oled.Grove_OLED method), 145
 - set_horizontal_mode() (pynq.lib.pmod.pmod_grove_oled.Grove_OLED method), 174
 - set_inverse_mode() (pynq.lib.arduino.arduino_grove_oled.Grove_OLED method), 145
 - set_inverse_mode() (pynq.lib.pmod.pmod_grove_oled.Grove_OLED method), 174
 - set_log_interval_ms() (pynq.lib.arduino.arduino_analog.Arduino_Analog method), 136
 - set_log_interval_ms() (pynq.lib.arduino.arduino_grove_adc.Grove_ADC method), 137

[set_log_interval_ms\(\) \(pynq.lib.pmod.pmod_als.Pmod_ALS attribute\), 184](#)
[method\), 155](#)
[start \(pynq.lib.video.HDMIOutFrontend attribute\), 134](#)
[set_log_interval_ms\(\) \(pynq.lib.pmod.pmod_grove_adc.Grove_ADC method\), 166](#)
[start_log\(\) \(pynq.lib.video.AxiVDMA.MM2SChannel method\), 130](#)
[set_log_interval_ms\(\) \(pynq.lib.pmod.pmod_tc1.Pmod_TC1 method\), 162](#)
[start_log\(\) \(pynq.lib.video.AxiVDMA.S2MMChannel method\), 131](#)
[set_log_interval_ms\(\) \(pynq.lib.pmod.pmod_tmp2.Pmod_TMP2 method\), 164](#)
[start_log\(\) \(pynq.lib.video.HDMIIn method\), 132](#)
[start\(\) \(pynq.lib.video.HDMIInFrontend method\), 132](#)
[set_normal_mode\(\) \(pynq.lib.arduino.arduino_grove_oled.Grove_OLED method\), 145](#)
[start_log\(\) \(pynq.lib.video.HDMIOut method\), 133](#)
[set_normal_mode\(\) \(pynq.lib.pmod.pmod_grove_oled.Grove_OLED method\), 136](#)
[start_log\(\) \(pynq.lib.arduino.arduino_analog.Arduino_Analog method\), 174](#)
[start_log\(\) \(pynq.lib.arduino.arduino_grove_adc.Grove_ADC method\), 138](#)
[set_page_mode\(\) \(pynq.lib.arduino.arduino_grove_oled.Grove_OLED method\), 145](#)
[start_log\(\) \(pynq.lib.arduino.arduino_grove_finger_hr.Grove_FingerHR method\), 140](#)
[set_page_mode\(\) \(pynq.lib.pmod.pmod_grove_oled.Grove_OLED method\), 174](#)
[start_log\(\) \(pynq.lib.arduino.arduino_grove_light.Grove_Light method\), 144](#)
[set_position\(\) \(pynq.lib.arduino.arduino_grove_oled.Grove_OLED method\), 146](#)
[start_log\(\) \(pynq.lib.arduino.arduino_grove_th02.Grove_TH02 method\), 147](#)
[set_position\(\) \(pynq.lib.pmod.pmod_grove_oled.Grove_OLED method\), 174](#)
[start_log\(\) \(pynq.lib.arduino.arduino_grove_tmp.Grove_TMP method\), 148](#)
[set_protocol\(\) \(pynq.lib.logictools.trace_analyzer.TraceAnalyzer method\), 187](#)
[start_log\(\) \(pynq.lib.pmod.pmod_adc.Pmod_ADC method\), 153](#)
[setdirection\(\) \(pynq.lib.axigpio.AxiGPIO method\), 120](#)
[start_log\(\) \(pynq.lib.pmod.pmod_als.Pmod_ALS method\), 155](#)
[setdirection\(\) \(pynq.lib.axigpio.AxiGPIO.Channel method\), 118](#)
[start_log\(\) \(pynq.lib.pmod.pmod_grove_adc.Grove_ADC method\), 166](#)
[setframe\(\) \(pynq.lib.video.AxiVDMA.MM2SChannel method\), 130](#)
[start_log\(\) \(pynq.lib.pmod.pmod_grove_finger_hr.Grove_FingerHR method\), 169](#)
[setlength\(\) \(pynq.lib.axigpio.AxiGPIO method\), 120](#)
[start_log\(\) \(pynq.lib.pmod.pmod_grove_light.Grove_Light method\), 173](#)
[setlength\(\) \(pynq.lib.axigpio.AxiGPIO.Channel method\), 118](#)
[start_log\(\) \(pynq.lib.pmod.pmod_grove_th02.Grove_TH02 method\), 176](#)
[setup\(\) \(pynq.lib.logictools.boolean_generator.BooleanGenerator method\), 178](#)
[start_log\(\) \(pynq.lib.pmod.pmod_grove_tmp.Grove_TMP method\), 176](#)
[setup\(\) \(pynq.lib.logictools.fsm_generator.FSMGenerator method\), 181](#)
[start_log\(\) \(pynq.lib.pmod.pmod_grove_tmp.Grove_TMP method\), 176](#)
[setup\(\) \(pynq.lib.logictools.pattern_generator.PatternGenerator method\), 185](#)
[start_log\(\) \(pynq.lib.pmod.pmod_tc1.Pmod_TC1 method\), 162](#)
[setup\(\) \(pynq.lib.logictools.trace_analyzer.TraceAnalyzer method\), 188](#)
[start_log\(\) \(pynq.lib.pmod.pmod_tmp2.Pmod_TMP2 method\), 165](#)
[setup\(\) \(pynq.pl.PLMeta method\), 197](#)
[start_log_raw\(\) \(pynq.lib.arduino.arduino_analog.Arduino_Analog method\), 136](#)
[shape \(pynq.lib.video.VideoMode attribute\), 135](#)
[start_log_raw\(\) \(pynq.lib.arduino.arduino_grove_adc.Grove_ADC method\), 138](#)
[show_protocol\(\) \(pynq.lib.logictools.trace_analyzer.TraceAnalyzer method\), 188](#)
[start_log_raw\(\) \(pynq.lib.pmod.pmod_adc.Pmod_ADC method\), 154](#)
[show_state_diagram\(\) \(pynq.lib.logictools.fsm_generator.FSMGenerator method\), 181](#)
[start_log_raw\(\) \(pynq.lib.pmod.pmod_grove_adc.Grove_ADC method\), 166](#)
[show_wavform\(\) \(pynq.lib.logictools.boolean_generator.BooleanGenerator method\), 178](#)
[state \(pynq.lib.pynqmicroblaze.PynqMicroblaze attribute\), 125](#)
[show_wavform\(\) \(pynq.lib.logictools.fsm_generator.FSMGenerator method\), 181](#)
[state_names \(pynq.lib.logictools.fsm_generator.FSMGenerator attribute\), 180](#)
[show_wavform\(\) \(pynq.lib.logictools.pattern_generator.PatternGenerator method\), 185](#)
[status \(pynq.lib.logictools.boolean_generator.BooleanGenerator attribute\), 178](#)
[sig_handler\(\) \(in module pynq.xlnk\), 201](#)
[src_addr \(pynq.lib.pmod.pmod_iic.Pmod_IIC attribute\), 157](#)
[src_samples \(pynq.lib.logictools.pattern_generator.PatternGenerator attribute\), 178](#)
[status \(pynq.lib.logictools.fsm_generator.FSMGenerator attribute\), 178](#)

attribute), 181

status (pynq.lib.logictools.pattern_generator.PatternGenerator attribute), 186

status (pynq.lib.logictools.trace_analyzer.TraceAnalyzer attribute), 188

step() (pynq.lib.logictools.boolean_generator.BooleanGenerator method), 178

step() (pynq.lib.logictools.fsm_generator.FSMGenerator method), 181

step() (pynq.lib.logictools.pattern_generator.PatternGenerator method), 186

step() (pynq.lib.logictools.trace_analyzer.TraceAnalyzer method), 188

stimulus_group (pynq.lib.logictools.pattern_generator.PatternGenerator attribute), 184

stimulus_group_name (pynq.lib.logictools.pattern_generator.PatternGenerator attribute), 184

stimulus_names (pynq.lib.logictools.pattern_generator.PatternGenerator attribute), 184

stimulus_pins (pynq.lib.logictools.pattern_generator.PatternGenerator attribute), 184

stimulus_waves (pynq.lib.logictools.pattern_generator.PatternGenerator attribute), 184

stop (pynq.lib.video.HDMIOutFrontend attribute), 134

stop() (pynq.lib.arduino.arduino_grove_haptic_motor.Grove_HapticMotor method), 141

stop() (pynq.lib.logictools.boolean_generator.BooleanGenerator method), 178

stop() (pynq.lib.logictools.fsm_generator.FSMGenerator method), 181

stop() (pynq.lib.logictools.pattern_generator.PatternGenerator method), 186

stop() (pynq.lib.logictools.trace_analyzer.TraceAnalyzer method), 188

stop() (pynq.lib.pmod.pmod_grove_haptic_motor.Grove_HapticMotor method), 170

stop() (pynq.lib.pmod.pmod_pwm.Pmod_PWM method), 161

stop() (pynq.lib.pmod.pmod_timer.Pmod_Timer method), 164

stop() (pynq.lib.video.AxiVDMA.MM2SChannel method), 130

stop() (pynq.lib.video.AxiVDMA.S2MMChannel method), 131

stop() (pynq.lib.video.HDMIIn method), 132

stop() (pynq.lib.video.HDMIInFrontend method), 132

stop() (pynq.lib.video.HDMIOut method), 133

stop_log() (pynq.lib.arduino.arduino_analog.Arduino_Analog method), 136

stop_log() (pynq.lib.arduino.arduino_grove_adc.Grove_ADC method), 138

stop_log() (pynq.lib.arduino.arduino_grove_finger_hr.Grove_FingerHR method), 140

stop_log() (pynq.lib.arduino.arduino_grove_light.Grove_Light method), 144

stop_log() (pynq.lib.arduino.arduino_grove_th02.Grove_TH02 method), 147

stop_log() (pynq.lib.arduino.arduino_grove_tmp.Grove_TMP method), 148

stop_log() (pynq.lib.pmod.pmod_adc.Pmod_ADC method), 154

stop_log() (pynq.lib.pmod.pmod_als.Pmod_ALS method), 155

stop_log() (pynq.lib.pmod.pmod_grove_adc.Grove_ADC method), 166

stop_log() (pynq.lib.pmod.pmod_grove_finger_hr.Grove_FingerHR method), 169

stop_log() (pynq.lib.pmod.pmod_grove_light.Grove_Light method), 173

stop_log() (pynq.lib.pmod.pmod_grove_th02.Grove_TH02 method), 176

stop_log() (pynq.lib.pmod.pmod_grove_tmp.Grove_TMP method), 177

stop_log() (pynq.lib.pmod.pmod_tc1.Pmod_TC1 method), 162

stop_log() (pynq.lib.pmod.pmod_tmp2.Pmod_TMP2 method), 165

stop_log_raw() (pynq.lib.arduino.arduino_analog.Arduino_Analog method), 137

stop_log_raw() (pynq.lib.arduino.arduino_grove_adc.Grove_ADC method), 138

stop_log_raw() (pynq.lib.pmod.pmod_adc.Pmod_ADC method), 154

stop_log_raw() (pynq.lib.pmod.pmod_grove_adc.Grove_ADC method), 166

stride (pynq.lib.video.VideoMode attribute), 135

Switch (class in pynq.lib.switch), 127

Tie (class in pynq.lib.tie), 131

tie() (pynq.lib.video.AxiVDMA.S2MMChannel method), 131

tie() (pynq.lib.video.HDMIIn method), 132

timeout (class in pynq.lib.dma), 124

timestamp (pynq.pl.Bitstream attribute), 195

timestamp (pynq.pl.PL attribute), 195

timestamp (pynq.pl.PLMeta attribute), 198

toggle() (pynq.lib.axigpio.AxiGPIO.Output method), 120

toggle() (pynq.lib.led.LED method), 124

toggle() (pynq.lib.pmod.pmod_led8.Pmod_LED8 method), 159

trace() (pynq.lib.logictools.boolean_generator.BooleanGenerator method), 178

trace() (pynq.lib.logictools.fsm_generator.FSMGenerator method), 181

trace() (pynq.lib.logictools.pattern_generator.PatternGenerator method), 186

TraceAnalyzer (class in pynq.lib.logictools.trace_analyzer), 186

transfer() (pynq.lib.dma.LegacyDMA method), 123
transitions (pynq.lib.logictools.fsm_generator.FSMGenerator attribute), 180
trimask (pynq.lib.axigpio.AxiGPIO.Channel attribute), 118

U

Usb_Wifi (class in pynq.lib.usb_wifi), 128
use_state_bits (pynq.lib.logictools.fsm_generator.FSMGenerator attribute), 180

V

VideoMode (class in pynq.lib.video), 135
virt_base (pynq.mmio.MMIO attribute), 189
virt_offset (pynq.mmio.MMIO attribute), 189

W

wait() (pynq.interrupt.Interrupt method), 114
wait() (pynq.lib.dma.LegacyDMA method), 123
wait() (pynq.lib.pynqmicroblaze.MBInterruptEvent method), 125
wait_for_interrupt_async() (pynq.lib.axigpio.AxiGPIO.Channel method), 118
wait_for_value() (pynq.lib.axigpio.AxiGPIO.Input method), 119
wait_for_value() (pynq.lib.button.Button method), 120
wait_for_value() (pynq.lib.switch.Switch method), 127
wait_for_value_async() (pynq.lib.axigpio.AxiGPIO.Input method), 119
wait_for_value_async() (pynq.lib.button.Button method), 120
wait_for_value_async() (pynq.lib.switch.Switch method), 128
waveform (pynq.lib.logictools.fsm_generator.FSMGenerator attribute), 180
waveform (pynq.lib.logictools.pattern_generator.PatternGenerator attribute), 184
waveform_dict (pynq.lib.logictools.pattern_generator.PatternGenerator attribute), 184
waveforms (pynq.lib.logictools.boolean_generator.BooleanGenerator attribute), 177
width (pynq.lib.video.VideoMode attribute), 135
width (pynq.ps.Register attribute), 194
wifi_port (pynq.lib.usb_wifi.Usb_Wifi attribute), 128
write() (pynq.gpio.GPIO method), 115
write() (pynq.lib.arduino.arduino_grove_oled.Grove_OLED method), 146
write() (pynq.lib.arduino.arduino_io.Arduino_IO method), 149
write() (pynq.lib.axigpio.AxiGPIO.Channel method), 119
write() (pynq.lib.axigpio.AxiGPIO.InOut method), 119
write() (pynq.lib.axigpio.AxiGPIO.Output method), 120
write() (pynq.lib.led.LED method), 124
write() (pynq.lib.pmod.pmod_dac.Pmod_DAC method), 156
write() (pynq.lib.pmod.pmod_dpot.Pmod_DPOT method), 157
write() (pynq.lib.pmod.pmod_grove_oled.Grove_OLED method), 174
write() (pynq.lib.pmod.pmod_io.Pmod_IO method), 158
write() (pynq.lib.pmod.pmod_led8.Pmod_LED8 method), 160
write() (pynq.lib.pmod.pmod_oled.Pmod_OLED method), 161
write() (pynq.lib.pynqmicroblaze.PynqMicroblaze method), 126
write() (pynq.lib.rgbled.RGBLED method), 127
write() (pynq.mmio.MMIO method), 189
write() (pynq.overlay.DefaultIP method), 190
write_binary() (pynq.lib.arduino.arduino_grove_ledbar.Grove_LEDbar method), 143
write_binary() (pynq.lib.pmod.pmod_grove_ledbar.Grove_LEDbar method), 172
write_brightness() (pynq.lib.arduino.arduino_grove_ledbar.Grove_LEDbar method), 143
write_brightness() (pynq.lib.pmod.pmod_grove_ledbar.Grove_LEDbar method), 172
write_level() (pynq.lib.arduino.arduino_grove_ledbar.Grove_LEDbar method), 143
write_level() (pynq.lib.pmod.pmod_grove_ledbar.Grove_LEDbar method), 172
writechannel (pynq.lib.video.AxiVDMA attribute), 129
writeframe() (pynq.lib.video.AxiVDMA.MM2SChannel method), 130
writeframe() (pynq.lib.video.HDMIOut method), 133
writeframe_async() (pynq.lib.video.AxiVDMA.MM2SChannel method), 130
writeframe_async() (pynq.lib.video.HDMIOut method), 133
Xlnk (class in pynq.xlnk), 198
xlnk_reset() (pynq.xlnk.Xlnk method), 201